BULLETIN

From Atari Customer Service



B - 0054

Date: Oct. 13, 1978

SUPER BREAKOUT TM

To prevent the coin counter on the Super Breakout TM game from incrementing on power-up, please perform the following:

- 1. Clip and lift Pin 15 of the 9334 located at position H8 on the PCB.
- 2. Run a jumper wire from the lifted pin to Pin 12 of the 7404 at location E3.