

TETRIS™

Installing the Joysticks in Your Control Panel

Since the Tetris game uses just the left, right, and down positions, your joysticks may be shipped with *three* microswitches each, not four.

If your joysticks have only three microswitches mounted, make sure the side without the microswitch is closest to the player after the joystick is installed.

If you need technical assistance, call your distributor or Atari Games Customer Service at one of the following locations:

United States: (408) 434-3950
Atari Games Corporation
737 Sycamore Drive
Milpitas, CA 95035
(Monday–Friday, 7:30 a.m.–4:00 p.m. Pacific time)

OR

Europe: 062-52155
Atari Games Ireland Limited
Tipperary Town, Ireland
(Monday–Friday, 9:00 a.m.–5:30 p.m. GMT)



Atari Games Customer Service • 675 Sycamore Drive • P.O. Box 361110 • Milpitas, California 95035