

REVISIONS		
LTB	DESCRIPTION	DATE APPROVED

**SPACE INVADER**

TAITO CORPORATION

S.V-GAME P.C BOARD

SCHEMATIC DIAGRAM (MOD. 1)


DATE: 7.11.79

DESIGNER: J. Sugawara

DATE: 9.03.78

NO. IN: SVR00003

DO NOT SCALE DRAWING

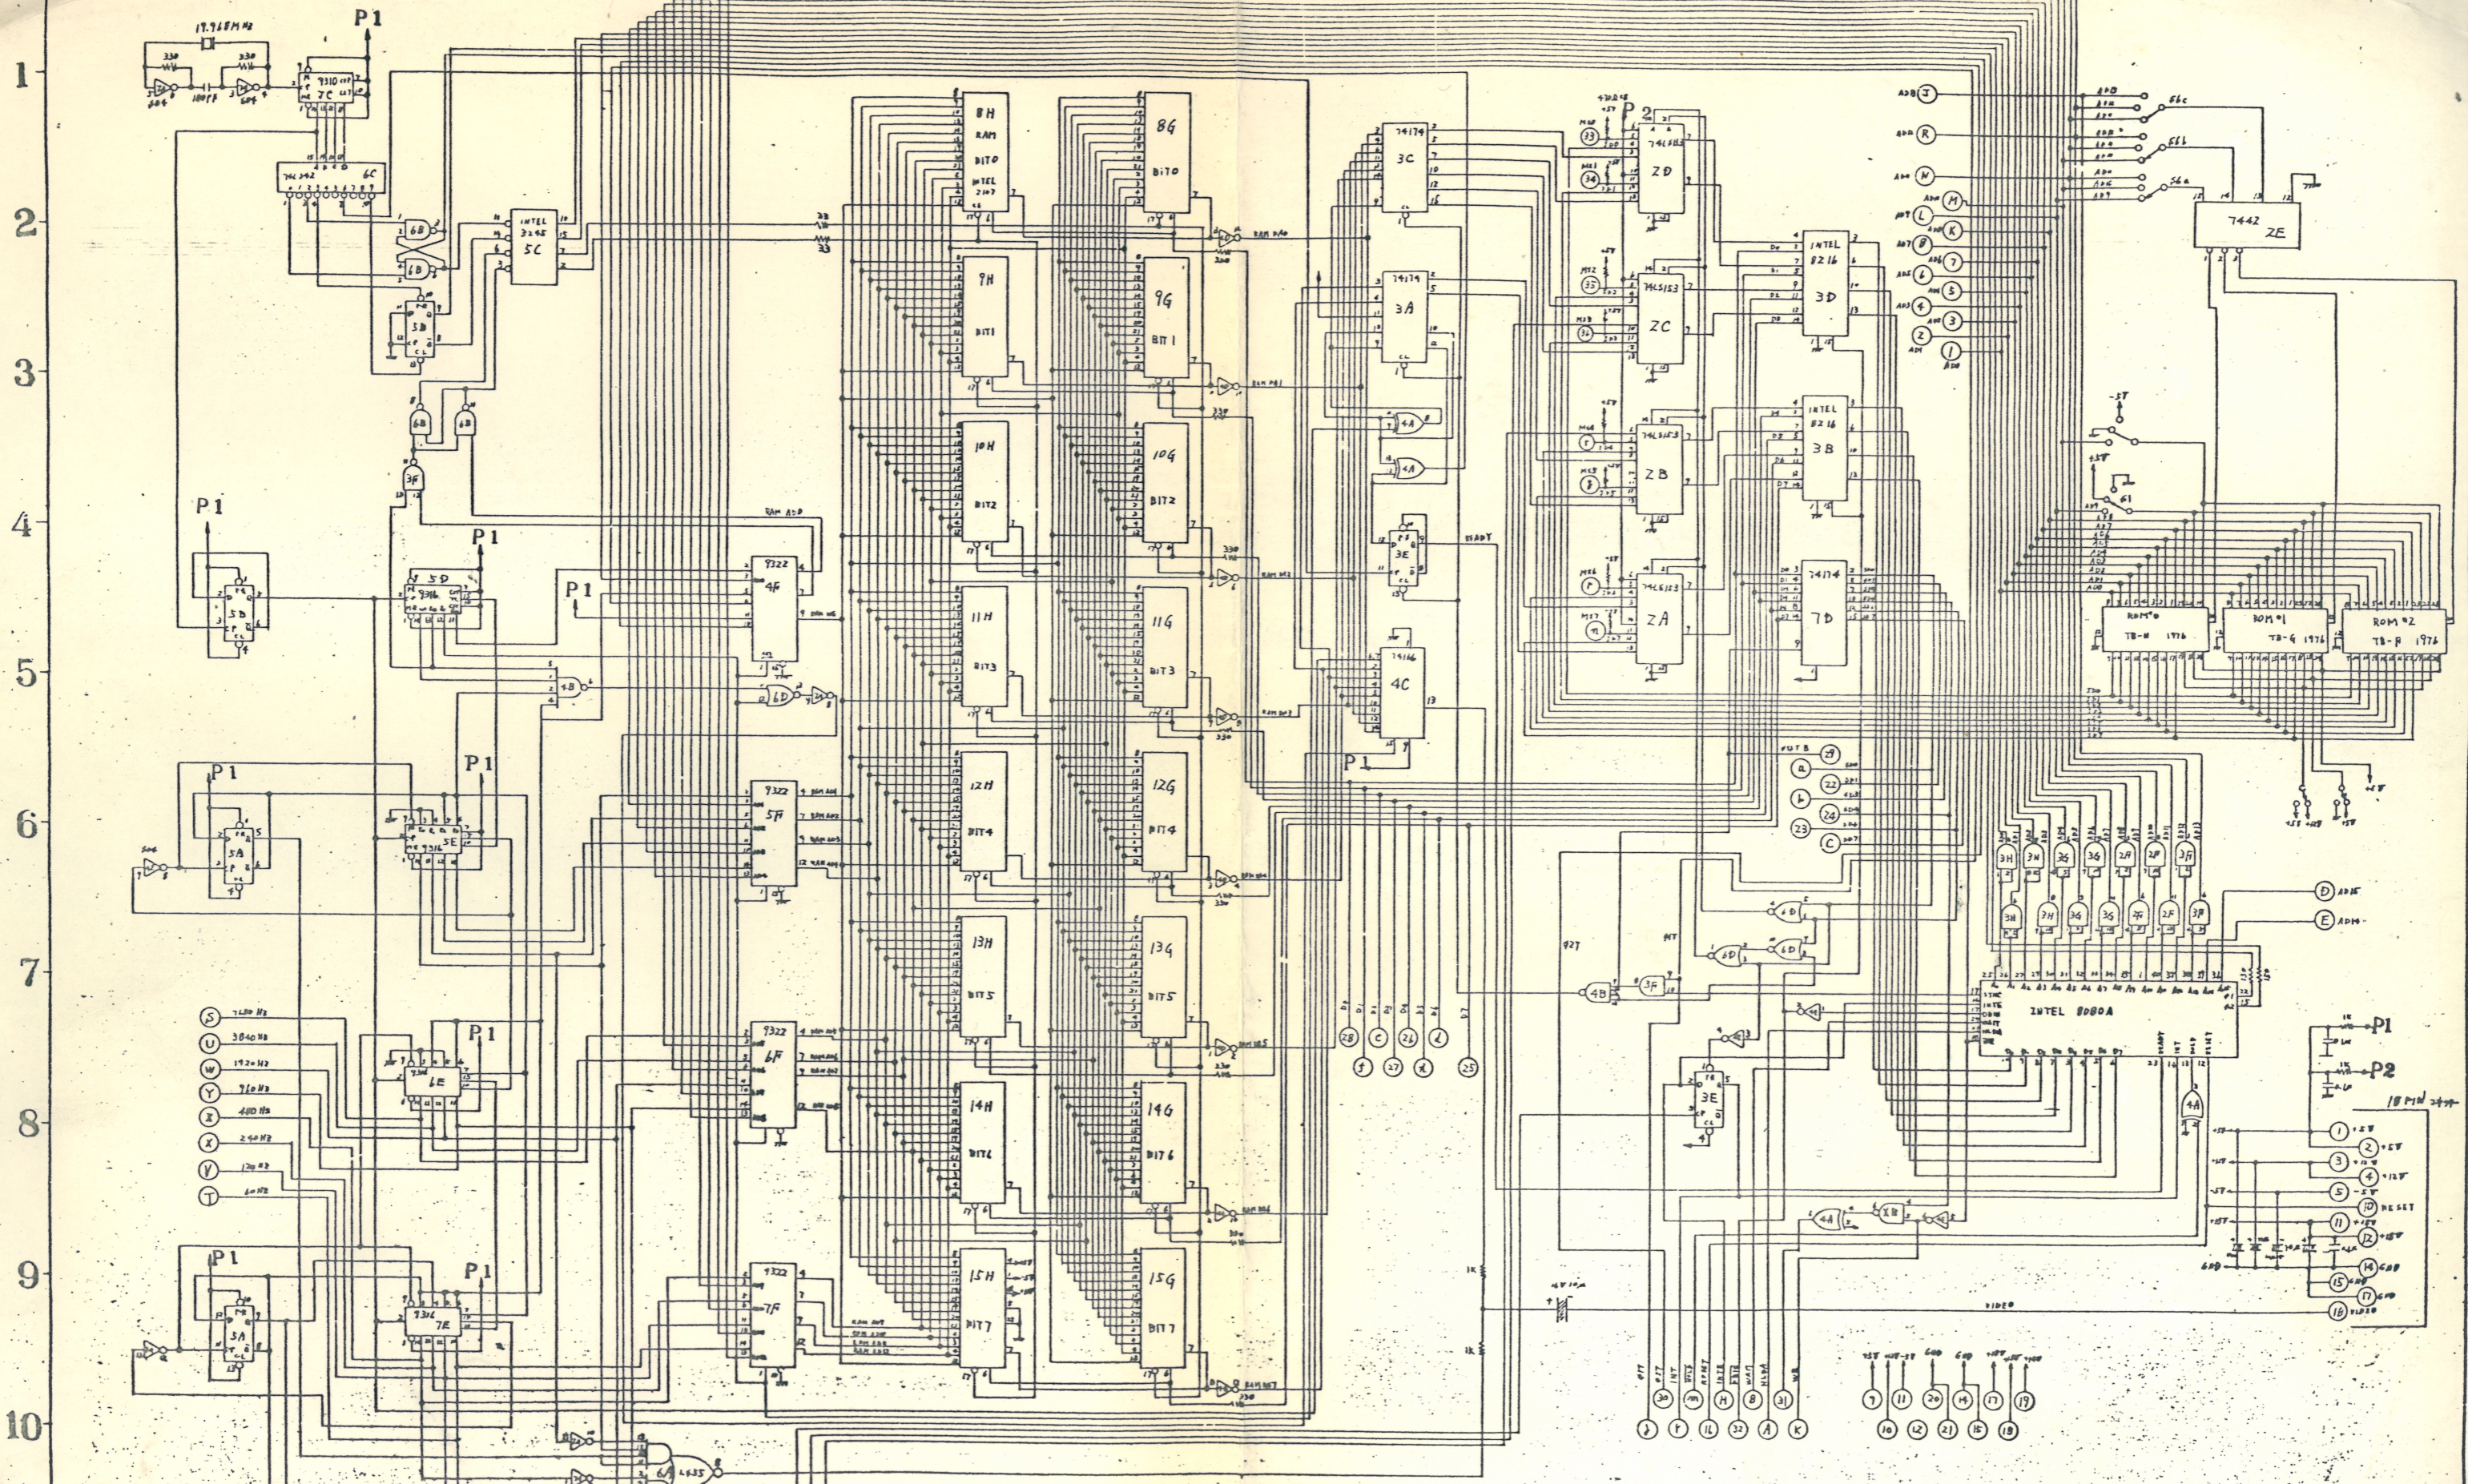

1  
2  
3  
4  
5  
6  
7  
8  
9  
10

- S 7.680 Hz
- U 3840 Hz
- W 1920 Hz
- Y 960 Hz
- X 480 Hz
- Z 240 Hz
- V 120 Hz
- T 60 Hz

- 30
- 31
- 32
- 33
- 34
- 35
- 36
- 37
- 38
- 39
- 40
- 41
- 42
- 43
- 44
- 45
- 46
- 47
- 48
- 49
- 50
- 51
- 52
- 53
- 54
- 55
- 56
- 57
- 58
- 59
- 60
- 61
- 62
- 63
- 64
- 65
- 66
- 67
- 68
- 69
- 70
- 71
- 72
- 73
- 74
- 75
- 76
- 77
- 78
- 79
- 80
- 81
- 82
- 83
- 84
- 85
- 86
- 87
- 88
- 89
- 90
- 91
- 92
- 93
- 94
- 95
- 96
- 97
- 98
- 99
- 100

輸入基板	51-8-25
G-27	
マフ-PCボード配線図	BPR00003

## Adjustments on Game & Sound PC Board

This machine uses either the CPU PC Board No.SVN00002 or the CPU PC Board No.SVN00004. When adjusting, therefore, make sure which CPU PC Board is used in your machine.

On the machine using the CPU PC Board No.SVN00004, the adjustments of the Game & Sound PC Board can be made as follows:

- o SW3 and SW5...Switches for adjusting the number of laser bases. (See Fig. 4)

(Optional Settings)

Laser Bases	SW 3	SW 5
3	ON	ON
4	OFF	ON
5	ON	OFF
6	OFF	OFF

Table 1

The number of laser bases is preset at "3" at the factory

- o SW6...Switch for adjusting bonus points. (See Fig. 4)

(Optional Settings)

SCORE	SW 6	Laser Base
1500	ON	1
1500	OFF	1

Table 2

The bonus points are preset at "1500" at the factory.

- o SW4...Switch for checking of RAM and game sound (See Fig.4)

"ON" Position: Checking of RAM and game sound can be made.

(Normally, this switch is to be set at "OFF" position.)

- o SW7...Switch for adjusting play pricing displayed on the screen. (See Fig. 4)

When this switch is set in "ON" position, the play pricing is displayed on the screen as follows:

1 COIN - 1 PLAYER, 2 COINS - 2 PLAYERS

("OFF" position: Nothing is displayed.)

- o SW1 and SW2.

These switches are for the factory adjustments, and should be set in "ON" position.

On the machine using the CPU PC Board No.SVN00002, the adjustments of the Game & Sound PC Board can be made as follows: (See Page 9)