

B O N Z E A D V E N T U R E

<u>SOLDER SIDE</u>		<u>PARTS SIDE</u>		<u>DIP SW A</u>								
				1	2	3	4	5	6	7	8	
	1	GND	1	TABLE TYPE	OFF							
	2	GND	2	UPRIGHT TYPE	ON							
	3	+5V	3	MONITOR	Normal	OFF						
	4	+5V	4		Reverse	ON						
	5	-5V	5	NORMAL GAME			OFF					
	6	+12V (+13V)	6	TEST MODE			ON					
	7	POST	7	DEMO SOUND	Yes				OFF			
	8	COIN COUNTER B	8		No				ON			
	9	COIN LOCKOUT B	9	PLAY CHARGE								
	10	SPEAKER (-)	10	(COIN A)	1coin 1play				OFF	OFF		
	11		11		1coin 2play				ON	OFF		
	12	VIDEO GREEN	12		2coin 1play				OFF	ON		
	13	VIDEO SYNC	13		2coin 3play				ON	ON		
	14	SERVICE SW	14	(COIN B)	1coin 1play						OFF	OFF
	15	TILT SW	15		1coin 2play						ON	OFF
	16	(COIN B)	16		2coin 1play						OFF	ON
	17	2P START	17	COIN A	2coin 3play						ON	ON
	18	2P UP	18	1P START								
	19	2P DOWN	19	1P UP								
	20	2P LEFT	20	1P DOWN								
	21	2P RIGHT	21	1P LEFT								
	22	2P SHOT BUTTON	22	1P RIGHT								
	23	2P JUMP BUTTON	23	1P SHOT BUTTON								
	24		24	1P JUMP BUTTON								
	25		25									
	26		26									
	27	GND	27									
	28	GND	28									

		<u>DIP SW B</u>							
		1	2	3	4	5	6	7	8
		DIFFICULTY	B	OFF	OFF				
			Easy A	ON	OFF				
			C	OFF	ON				
			Difficult D	ON	ON				
		EXTEND CHARGE							
		50000/150000/500000			OFF	OFF			
		40000/100000/300000			ON	OFF			
		60000/200000/500000			OFF	ON			
		80000/250000/500000			ON	ON			
		NUMBER OF PLAYER	3				OFF	OFF	
			2				ON	OFF	
			4				OFF	ON	
			5				ON	ON	
		CONTINUE PLAY	No						OFF
			Yes						ON
		NOT USED							OFF