

DIP SWITCH 1									
NO.	SETTING								REMARKS
1	OFF	ON	OFF	ON	OFF	ON	OFF	ON	COIN/CREDIT COIN-MECH(RIGHT)
	OFF	OFF	ON	ON	OFF	OFF	ON	ON	
	OFF	OFF	OFF	OFF	ON	ON	ON	ON	
	ICOIN	1	1	1	1	1	2	3	
IPLAY	2	3	4	5	6	1	1		
4	OFF	ON	OFF	ON	OFF	ON	OFF	ON	COIN/CREDIT COIN-MECH(LEFT)
	OFF	OFF	ON	ON	OFF	OFF	ON	ON	
	OFF	OFF	OFF	OFF	ON	ON	ON	ON	
	ICOIN	1	1	1	1	1	2	3	
IPLAY	2	3	4	5	6	1	1		
7	OFF				ON				画面ローテーション SCREEN ROTATION
	通常		NORMAL		反転		REVERSE		
8	OFF				ON				コントロールパネル CONTROL PANEL
	テーブル TABLE				アップライト ラバーライト アップライト				

DIP SWITCH 2									
NO.	SETTING								REMARKS
1	OFF	ON	OFF	ON	持ち数 NUMBER OF LIVES				
	OFF	OFF	ON	ON					
	3	4	1	2					
3	OFF	ON	OFF	ON	ゲーム難易度 GAME DIFFICULTY				
	OFF	OFF	ON	ON					
	通常	易	やや難	難					
	NORMAL	EASY	HARD	HARDEST					
5	OFF								取扱禁止 DON'T CHANGE
6	OFF								
7	OFF				ON				コンティニューの有無 CONTINUE MODE
	有		YES		無		NO		
8	OFF				ON				アイドル中サウンドの有無 ATTRACT MODE SOUND
	無		NO		有		YES		