

18



CE

PRINCESSES



**OPERATING INSTRUCTIONS
FIELD SERVICE MANUAL**

Table of contents

OWNERS MANUAL

Service adresses	6
1. Unpacking - Installation	7
1.1. Unlocking	7
1.2. Removal of shipping guards	7
1.3. Verification of power voltage	7
1.4. Wall mounting	8
1.5. Speaker connection	8
1.6. Power on	9
2. Loading compact discs	10
2.1. Position of CD's in magazines	10
2.2. Remove magazines	10
2.3. CD handling precautions - CD and Player cleaning	11
2.4. Inserting title cards	12
2.5. Programming number of CD's in magazines	13
2.6. Adjustment of the page limitation	14
3. Coin operation or free play ?	15
3.1. Coin operation	15
3.2. Free play	15
3.3. Test credit	15
4. Track selection	16
4.1. How to select a track	16
4.2. I do not like this track - The button CANCEL with amplifier I84	16
4.3. I do not like this track - The button CANCEL with amplifier F91	17
4.4. Albumplay - playing a whole CD	17
5. Automatic random select (Playstimulator)	18
6. Volume, sound and balance control	19
6.1. Volume, sound and balance control - amplifier F91	19
6.2. Volume, sound and balance control - amplifier I84	20

FIELD SERVICE MANUAL

1. Coin and price settings	24
1.1. Price settings	24
1.2. Examples	24
1.3. Free play programming	24
1.4. Color codes of coin inputs	25
1.5. Selecting, displaying and programming of the top tunes	25
1.6. The bonus jumper system how it works	26
2. Amplifier F91	28
2.1. Verification of power voltage	28
2.2. Position of fuses and plug connectors on the power stage	29
2.3. The first power ON	30
2.4. Pre-settings for volume, bass and treble	30
2.4.1. Pre-settings for volume	31
2.4.2. Pre-settings for bass and treble	31
2.5. Speaker connection	32
2.5.1. The operating mode STEREO	33

2.5.2.	Connecting external speakers in operating mode 2-CHANNEL	34
2.6.	BGM mode - volume attenuation	35
2.7.	Automatic volume control (AVC) and clipping stage	35
2.8.	Overdrive protection	35
2.9.	Overload protection	36
2.10.	Tape input	36
2.11.	70V - output transformer (0043157)	36
3.	Amplifier I84	40
3.1.	Verification of power voltage	40
3.2.	Fuses. Which one controls what circuit?	40
3.3.	Maximum amplifier load and external speakers of I84	41
3.4.	70 V output transformer (part no. 0006926)	42
3.5.	The option feature of the I84 infrared remote control	42
4.	Programming short view	43
5.	Jukebox programming	44
5.1.	Calling service programs	44
5.2.	Programming of the time functions	45
5.2.1.	Clock setting	45
5.2.2.	Set date	45
5.2.3.	Set year and weekday	45
5.3.	Programming of the Playstimulator (random selections without coin insertion)	46
5.3.1.	Repeat time programming	46
5.3.2.	Programming start and stop time	47
5.4.	Back Ground Music	48
5.4.1.	Number of BGM CD's and BGM repeat time	48
5.4.2.	Start position for BGM CD's and configuration	49
5.4.3.	BGM time zones at different weekdays	50
5.5.	Happy hour pricing (additional bonus plays)	51
5.5.1.	Programming of the happy hour start and stop time	51
5.5.2.	Programming of the additional bonus plays	51
5.6.	Number of tracks played successively on the same disc	52
5.7.	Selective disabling of tracks	52
5.8.	Location or Identification number	53
5.9.	Album selection and memory reset by power off	53
6.	Data retrieval	54
6.1.	Operator data	54
6.1.1.	Retrieval of least popular discs (flops)	54
6.1.2.	Top Tunes	54
6.1.3.	Cash box contents	55
6.1.4.	Total number of plays	55
6.1.5.	CLEAR ALL counters (reset to 0 0 0 0)	55
6.1.6.	Memory of not playable CDs	55
6.1.7.	Statistic print-outs	56
6.1.8.	Printer port settings	58
6.2.	Service data	59
6.2.1.	Retrieval of the last occurred mechanism faults	59
6.2.2.	Counter for complete mechanism cycles	60
6.2.3.	Counter for total number of mechanism faults	61
6.2.4.	Counter for total number of power up's	61
6.2.5.	Counter for total operating time	61
7.	Function tests	62
7.1.	Digital display test / EPROM-version	62
7.2.	Mechanism single step tests	62
7.2.1.	Take CD to turntable	62
7.2.2.	Step selection sledge upwards	62
7.2.3.	Step selection sledge downwards	63
7.2.4.	Get a CD from LH magazine	63
7.2.5.	Get a CD from RH magazine	63
7.3.	Mechanism continuous tests	63

7.4.	Light gate tests	65
7.4.1.	Light gate snapshot	65
7.4.2.	Light gate function test	65
7.5.	CD-PRO function tests	67
7.5.1.	CD player check (START)	67
7.5.2.	NEXT	68
7.5.3.	PREVIOUS	68
7.5.4.	STOP	68
7.5.5.	STOP playing and go back to level 4	68
8.	Integrated test program of the CD-PRO player	69
8.1.	Access to the player functions without S&CC unit	69
8.2.	Special test functions of the CD-PRO player	71
9.	Accessories	72
9.1.	Microphone kit (part no. 0006953)	72
9.2.	BGM-Connector	72
9.3.	RCA (Cynch) adapter for amplifier I84 (0053702)	72
10.	Steps to solve mechanical problems	73
10.1.	Treating simple errors	73
10.2.	Treating simple errors by hand	73
10.3.	Set the mechanism to '0' position	73
11.	Declaration of conformity	74
12.	Wiring diagrams	75
	Wiring diagram control terminal F91	74
	Wiring diagram interface 5 coins part no. 0004197	74
	Princess - Flourescent Lamps	76
	Connection diagram CD2 mechanism, CD-PRO player type and amplifier I84	77
	Connection diagram CD2 mechanism, CD-PRO player type and amplifier F91	78
	Wiring diagram and board layout BGM adapter I84	79
	Board layout Selection & Credit Computer 53408	80
	Wiring diagram Selection & Credit Computer 53408	81
	Wiring diagram CD-PRO - serial controller	82
	Board layout CD-PRO - serial controller	83
	Board layout CD2-SCC interface	84
	Wiring diagram CD2-SCC interface	85
	Diagrams of the selection sledge, CD2 mechanism	86
	Wiring diagram microphone kit	86
	Block diagram CDM12 Philips	87
	Wiring diagram amplifier I84	88
	Pre amplifier for amplifier I84	89
	Board layout amplifier I84	89
	Wiring diagrams output transformer, cross over network F91	90
	Block diagram amplifier F91	91
	Board layout power stage amplifier F91	92
	Wiring diagram power stage amplifier F91	93
	Board layout pre-stage amplifier F91	94
	Diagram overview pre-stage amplifier F91	95
	Wiring diagram pre-amp amplifier F91	96
	Wiring diagram sound controller (analogue part) F91	97
	Wiring diagram AVC stage F91	98
	Wiring diagram Volume, Balance (analog part) F91	99
	Wiring diagrams digital stage volume, balance; mikrophone terminal, power supply F91	100
	Wiring diagram digital stage sound F91	101
13.	Technical Data	102

Warning

Although the beam emitted by the laser diodes is nearly invisible, it may cause severe damage to the human eye. Use an infrared indicator to check the laser beam.



Caution

The CD mechanism and many ICs are extremely susceptible to electrostatic discharges. The photo diodes and the laser diode are more sensitive to discharges than MOS ICs. Careless handling may immediately destroy components or can drastically reduce life expectancy of these components so that it will lead to failure after several weeks or even months of use.

Before you touch the Player, discharge your hands and tools by touching a grounded metal part of the jukebox, such as the amplifier or the mechanism chassis. Make sure that you are connected via a wrist wrap with resistance to the same potential as the chassis of the jukebox. Keep parts and tools at the same potential.

If you remove the player in case of repair or for transport, short the harness with a short circuit plug.

When repairing, observe all valid safety rules. Do not change the original condition of the jukebox. Use original spare parts only.



This manual belongs to machines equipped with program versions 4.09 (or higher).

Subject to alterations.

Owners Manual

Service addresses

D

Deutsche Wurlitzer GmbH
Niederdorf 5
D-32351 Stemwede-Levern
Tel.: (05745) 28-0
Fax: (05745) 28220
E-mail: deutsche-wurlitzer @ t-online.de

GB

Deutsche Wurlitzer U.K.
6, Devonshire Court
Victoria Road, Feltham
Middlesex, TW13 7LU
Tel.: (0181) 867 0224
Fax: (0181) 867 0227

Deith Leisure Ltd.
Unit 2 Industrial Estate
Leigh Close, New Malden
Surrey KT3 3NL
Tel.: (0813) 36 1222
Fax: (0813) 36 1487

USA

Wurlitzer Jukebox Company
235 Moonachie Road
Moonachie, NJ 07074
Tel.: (201) 807 2616
Fax: (201) 807 9543
Web Site: <http://www.wurlitzer-jukebox.com>
E-mail: bubbles @ wurlitzer-jukebox.com

AUS


Wurlitzer Australia Pty. Ltd.
77 Allingham Street
Bankstown N.S.W. 2200
Tel.: (02) 9791 0922
Fax: (02) 9791 0683

NZ

Wurlitzer Pty. Ltd.
Unit 1, 83 Springs Road
East Tamaki, Auckland
P.O. Box 58-616 Greenmount
Tel.: (09) 27 46 010
Fax: (09) 27 44 888


1. Unpacking - Installation

1.1. Unlocking

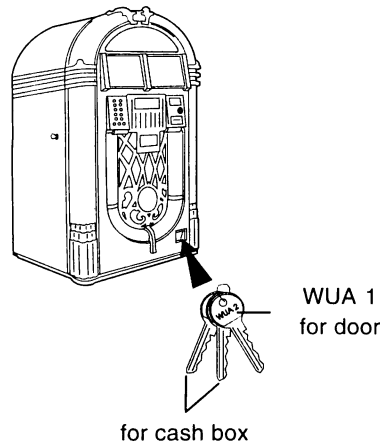

The key is stored in the coin return cup in the RH bottom side of the door. The key WUA 1 unlocks the cabinet by turning the key clockwise. The lock is spring loaded, press slightly against the door, this allows to turn the key easily. The two other keys with 5 digit number codes unlock the cash box inside of the cabinet. In this box also the hand transmitter is located.

1.2. Removal of shipping guards

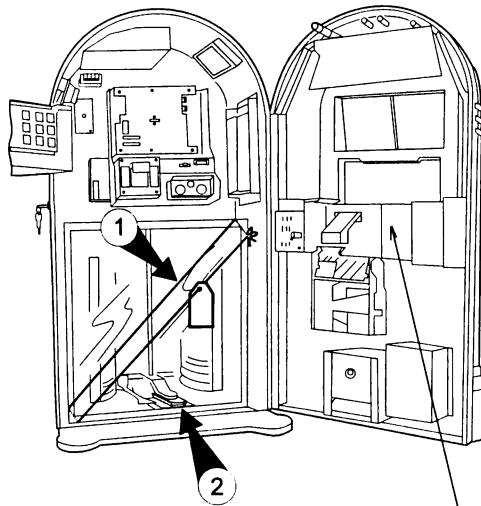


1. Remove elastic band from the magazine cabinet.
2. Remove CD lens cover.



IMPORTANT

Save the removed shipping guards. You may need them should you decide to move your machine to another location.

1.3. Verification of power voltage

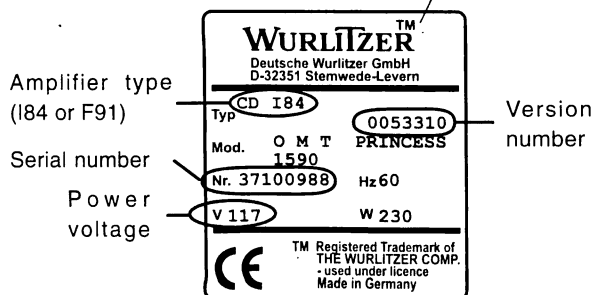


Compare your power voltage with the voltage printed on the label inside of the door. If your voltage does not match the voltage of the label do not switch on the jukebox. Contact your dealer to set the voltage according to your mains. In case of standard UL-versions (for USA) it is impossible to adjust another voltage.

At the other types you can check and modify the power setting on the power transformer of the amplifier. It is described in the according chapter 'amplifier F91' and 'amplifier I84'.

For any service call please have ready your serial and version number.


1.4. Wall mounting

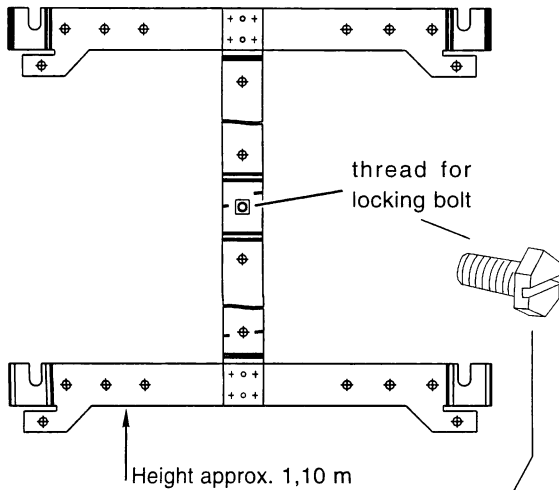

Depending on the installed amplifier the weight of the jukebox is 78 to 85kg (amplifier F91). Because of this take great pains when you mount it on a wall. Use the delivered mounting frame (part no. 0051361) and check the structural quality of the wall. Calculate a security factor of 2 (170kg) for home use and a factor of 4 (340kg) for public use when you select your dowels. Use all the dowel holes of the frame. Contact your architect and a dowel manufacturer to select suitable mounting devices. The manufacturer does not accept liability for damages caused of not proper mounted machines!

Fasten the jukebox with the locking bolt which you will find in the bypack.



1.5. Speaker connection

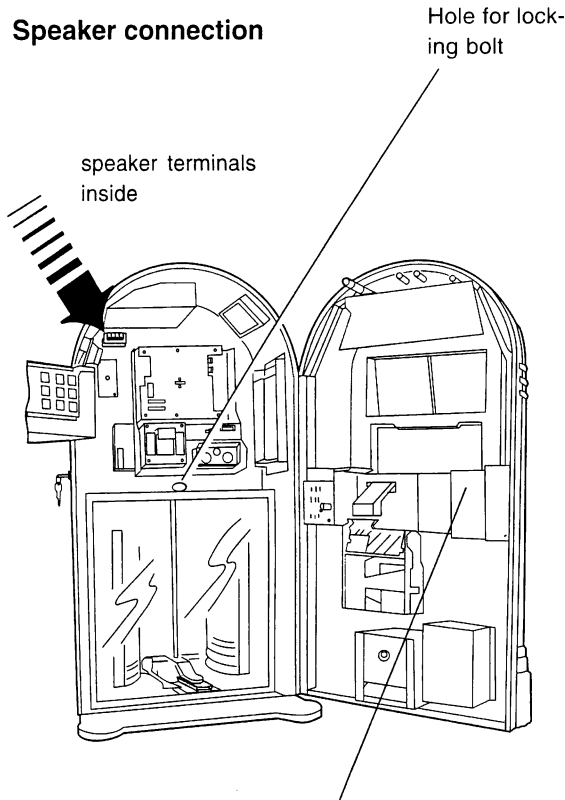


To attain a good sound of the jukebox, take care when connecting the speakers. Connect the speakers to either the terminals inside of the jukebox or to the terminals on the back side. Pay attention of the correct polarity. The red terminals belong to "+" the black ones to "-".

The jukebox can be delivered with two different amplifiers F91 or I84. You can distinguish both types by means of the product label inside the door or compare your amplifier with the pictures below here.

Amplifier type

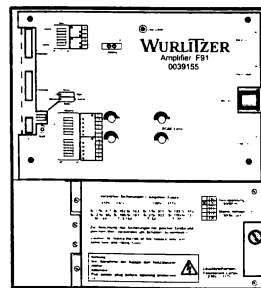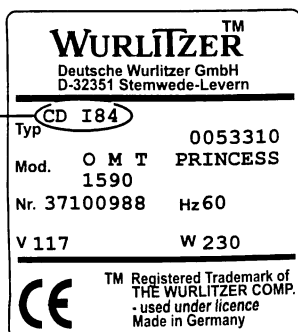

F91

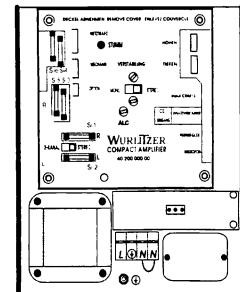


I84

Both amplifiers may not be loaded with more than 4Ω per channel. **Less Ohms means more load!** The output of the amplifier I84 to a 4 Ω load is 60 Watts rms power at 1 % distortion, to 8Ω it is about 30 Watts, to 12Ω it is about 20 Watts.

The output of the amplifier F91 to a 4 Ω load is 170Watts rms power, to 8Ω it is about 85 Watts, to 12Ω it is about 57 Watts.

speaker terminals on
the back side

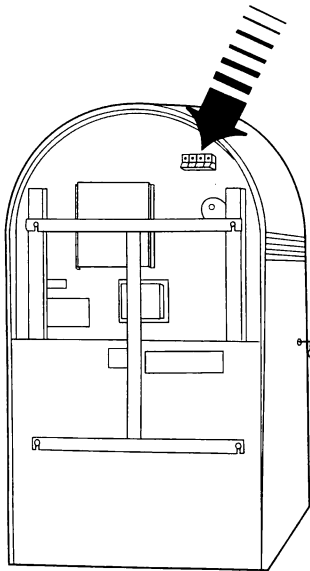

That means, that e.g., a 8Ω speaker connected to the 184 amplifier must be a type of at least 35 Watts, otherwise the speaker is in danger of destruction at higher volumes.


If the amplifier is operating in 2-Channel mode, the speakers at the normal terminals are all loaded in parallel to the left hand channel. If you use 4Ω speakers you must disconnect one speaker from the terminals before you switch the jukebox to 2-channel mode.

The right channel (now switched to the sockets "R-Extern" and "L-Extern") now may be also loaded with a minimum of 4Ω .

Note that speaker groups like in hi-fi boxes may have, at certain frequencies, impedances much lower than their rating.

After having connected all speakers disconnect the monitor speaker inside the jukebox. It is for test purposes only.

1.6. Power on

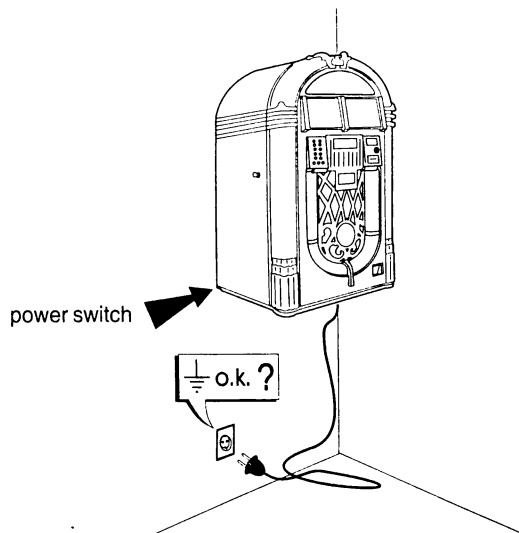


IMPORTANT

Make sure that power outlet is grounded properly.

Insert the power plug. Set the power switch on the L.H. side of the jukebox to on. The illumination will light. The selection sledge starts an initialisation run and the counting of the disc compartments can be watched in the display. If all compartments are recognized the display shows "6 1 6 1" for short time. After all the sledge stops in its home position. The digital display shows the most played track. If the box is brandnew and the selection memory empty the display shows "0 0 0 0".

2. Loading compact discs


2.1. Position of CD's in magazines

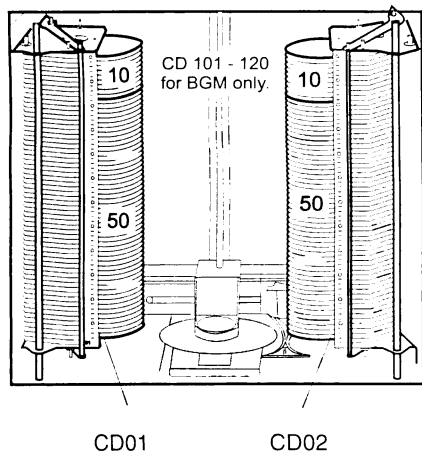

Up to 120 CDs can be inserted in total. The left magazine contains all CD's with odd compartment numbers (01, 03, 05 ...), the right one contains all even numbers (02, 04, 06 ...). But only 100 CDs can be selected in normal operation. (CD-no. 01 to CD no. (1)00). The CD's number 101 - 120 you can use only for Back Ground Music.

You have to update the 'number of CD's in the magazines' in service level 1 button 5 if you insert a lower number of CD's than 100 (factory pre setting).


2.2. Remove magazines

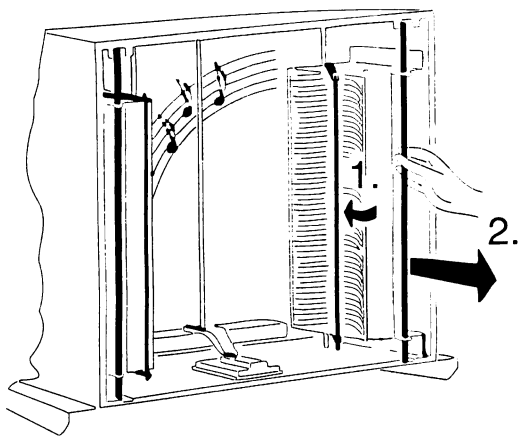

You can pull out the magazines separately. By pushing the latch bar (1) inwards the magazine released. At the same time the CD's are locked into place. Pull the handle bar (2) to remove the magazine completely. When you insert the magazine the latch bar clicks into place and releases the CD's.

Note:

In theory it is possible to use only one magazine. In this case the empty one has to be removed and the jukebox needs to be switched off and on once. After the initialisation run all selections belonging to the missing magazine are disabled. If e.g. the RH magazine is missing, all even selections are disabled. If such a selection is made the digital display will flash.

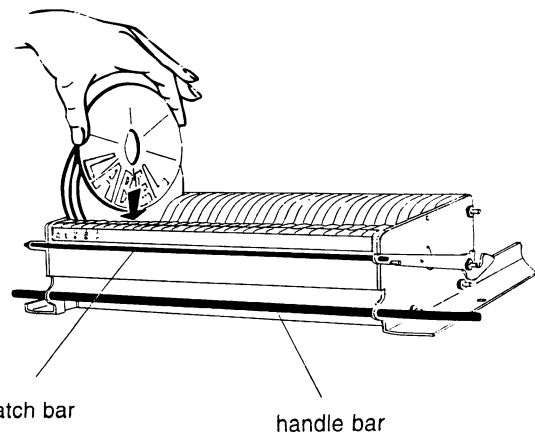


You can lay the magazine on its back side. Note, that the left magazine contains all CD's with odd numbers, the right one all with even numbers. Insert the CD's starting with the compartment 01, in the LH magazine then insert the second CD into compartment 02 which belongs to the RH one etc.. The CD label has to face upwards.




IMPORTANT

Always push the magazine into its frame until the latch bar clicks into place properly!

2.3. CD handling precautions - CD and Player cleaning

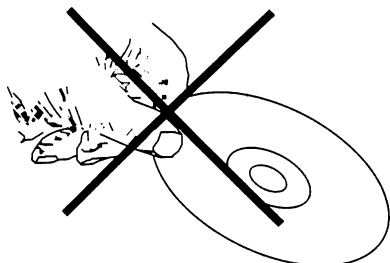

Dust, fingerprints or other dirt on the disc surface can cause skipping, jumping or sticking problems. Because of this never touch the surface of a disc! However it is rather easy to remove nicotine, dust or fingerprints.

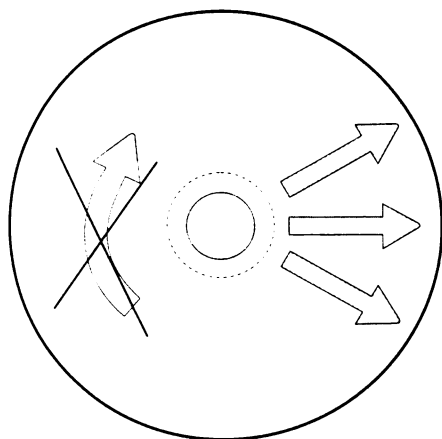


Nicotine, dust, fingerprints:

Dust can be removed with a lintfree soft cloth. If necessary, remove heavy dirt or fingerprints with a moistened soft cloth soaked in a solution of water and a detergent. Never use record cleaning sprays or anti static sprays! Furthermore, do not use other types of cleaners containing benzene, thinner or other solvents. These liquids will cause damage to the surface of discs. Move the cloth from the inside towards the outside and not in circular motion.

Removing scratches:

Use a soft cloth and a soft polish.

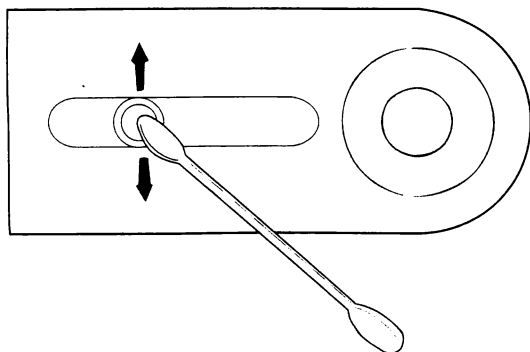


Laser lens cleaning:

Smoke and dust soils the lens. It can be cleaned with a cue-tip soaked in a detergent (i.e. "B04" from KONICA). Place the tip on the lens and press down carefully.

Caution!


- The whole laser unit is very sensitive!
 - Move the cue-tip only in the direction shown in the picture (perp. to the sledge direction).
 - Do not scratch the special treated surface of the lense.
 - The cleaning solution must not run into the focus unit.
- Keep away metal parts from the lens unit. A strong magnet is located underneath the lens. It attracts also smallest metal parts and so can block the complete unit.

2.4. Inserting title cards

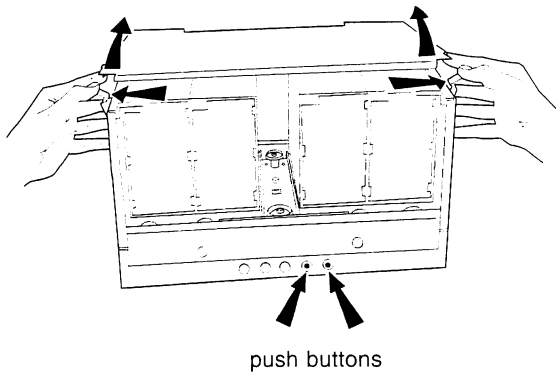


After inserting the CD it is recommended to insert the appropriate title card into the paternoster book at the same time. Leaf through the book by means of the two push buttons.


To remove the cabinet lid bend both springs to outside.

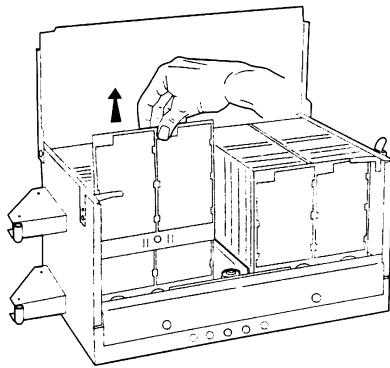

So you can pull out each page.

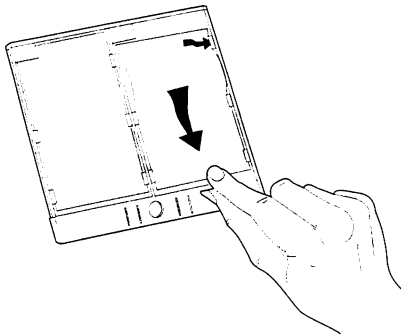

Insert the title cards as shown in the picture. After inserting a page turn it forward and backward once to check its proper function. After power on the book always moves itself to the beginning.

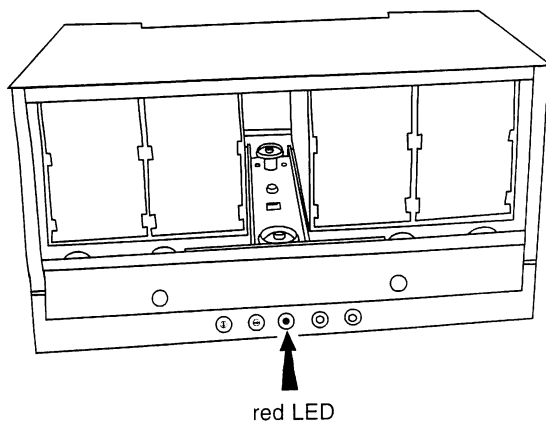

If the page system works properly the red LED lights continuously. A blinking LED indicates the following error's:

- 1x - LH light gate indicates an error, or is defective
- 2x - Lead through gate indicates an error, or is defective
- 3x - RH light gate indicates an error, or is defective
- 4x - no or to slow page transport
- 5x - no zero page identification


LED blinks continuously: BCD-switch adjustment out of range 0 to 120.

2.5. Programming number of CD's in magazines

level 1	button 5
---------	----------

You have to update the 'number of CD's in the magazines' and make page limitation adjustment if you insert a lower number of CD's than 100 (factory pre setting) or after a change of the number of inserted CD's .

If the number of CD's is programmed correctly the display will flash when you select an empty compartment. A flashing display indicates an 'empty' selection or no credit.

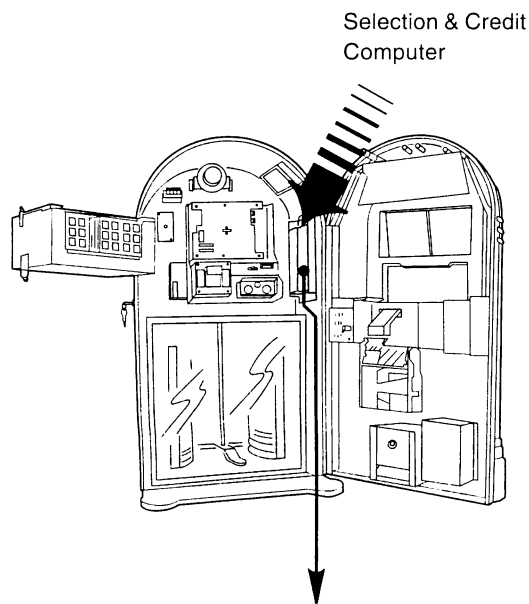


At the RH wall inside of the jukebox cabinet the so-called Selection & Credit Computer or SCC unit is situated. On it you can find the switch "SERVICE" and the button "LT".

To program the number of inserted CD's (service level 1):

1. Set the slide switch 'SERVICE' at the SCC-unit to ON.
2. Press 'LT' button.
3. Press selection button R -hold down- and press selection button 0 then release both buttons.
4. Press selection button 1. Service level 1 is reached. Display is: 1_ _ _.
5. To check the current setting press button 5, the display shows e.g. 50 or 00.
6. To reprogram press selection button 5 -hold down- and press selection button R. Enter the desired number of CD's with two digits (enter 00 for 100 CD's).


To check the new settings, press button 5 again.

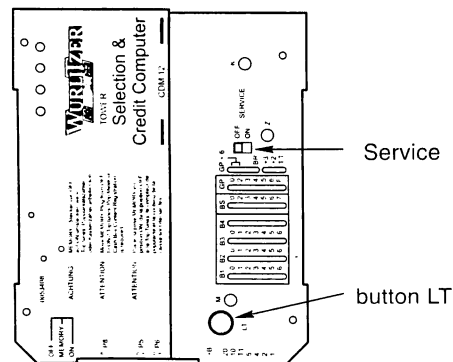**Exit the serviceprogram:**

1. Set the slide switch 'SERVICE' at the SCC unit to OFF.
2. Press 'LT' button.

The changer starts an initialisation run. After this the jukebox is ready to operate.

2.6. Adjustment of the page limitation

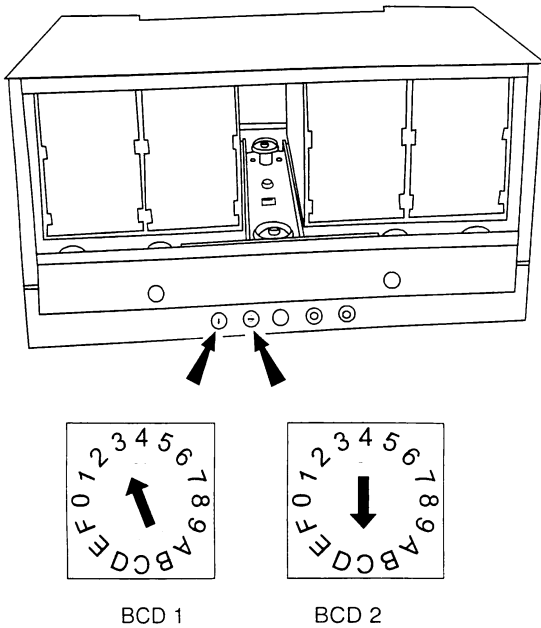

If less than 100 CD's are installed it is useful to disable the not needed pages. It will be done by two BCD switches at the front side of the book.

Especially if you are not a mathematician use the table below to adjust the two switches.

Nevertheless you will find here an example how to calculate the BCD switch adjustment.

The switch BCD1 has a valency of 16. the other one, BCD2 a valency of 1. The meaning of the characters is according to the hexadecimal character set:

A = 10 B = 11 C = 12
 D = 13 E = 14 F = 15.

If you want to adjust a number of 60 CD's divide 60 by 16. It equals 3,75. The number before the decimal point has to be adjusted at BCD1. Ignore the numbers after the decimal point. After this multiply the just adjusted number 3 by 16. It equals 48. Subtract this number from the given number 60. This equals 12. Adjust this number at BCD2 as „C“ (=12) according to the hexadecimal character set.


Pages	BCD1	BCD2	Pages	BCD1	BCD2	Pages	BCD1	BCD2	Pages	BCD1	BCD2	Pages	BCD1	BCD2
1	0	1	26	1	A	51	3	3	76	4	C	101	6	5
2	0	2	27	1	B	52	3	4	77	4	D	102	6	6
3	0	3	28	1	C	53	3	5	78	4	E	103	6	7
4	0	4	29	1	D	54	3	6	79	4	F	104	6	8
5	0	5	30	1	E	55	3	7	80	5	0	105	6	9
6	0	6	31	1	F	56	3	8	81	5	1	106	6	A
7	0	7	32	2	0	57	3	9	82	5	2	107	6	B
8	0	8	33	2	1	58	3	A	83	5	3	108	6	C
9	0	9	34	2	2	59	3	B	84	5	4	109	6	D
10	0	A	35	2	3	60	3	C	85	5	5	110	6	E
11	0	B	36	2	4	61	3	D	86	5	6	111	6	F
12	0	C	37	2	5	62	3	E	87	5	7	112	7	0
13	0	D	38	2	6	63	3	F	88	5	8	113	7	1
14	0	E	39	2	7	64	4	0	89	5	9	114	7	2
15	0	F	40	2	8	65	4	1	90	5	A	115	7	3
16	1	0	41	2	9	66	4	2	91	5	B	116	7	4
17	1	1	42	2	A	67	4	3	92	5	C	117	7	5
18	1	2	43	2	B	68	4	4	93	5	D	118	7	6
19	1	3	44	2	C	69	4	5	94	5	E	119	7	7
20	1	4	45	2	D	70	4	6	95	5	F	120	7	8
21	1	5	46	2	E	71	4	7	96	6	0			
22	1	6	47	2	F	72	4	8	97	6	1			
23	1	7	48	3	0	73	4	9	98	6	2			
24	1	8	49	3	1	74	4	A	99	6	3			
25	1	9	50	3	2	75	4	B	100	6	4			

3. Coin operation or free play ?

Both coin operation or free play are adjustable at the "Selection & Credit Computer"-unit. It is located at the RH side of the cabinet. Special jumpers (short wires, located in the accessory pack of the manual) are used to set prices on


the SCC-unit. As long as no jumper is set in row GP from 0 to F and the jumper in row GP+6 is not removed (free play) the jukebox works with coins only.

3.1. Coin operation

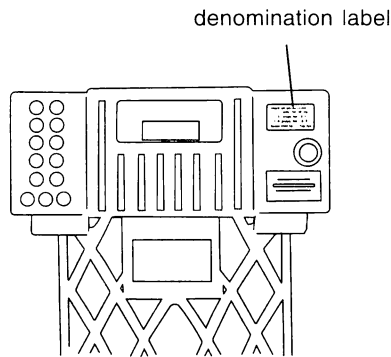

From factory the jukebox is set to coin operation. If you insert a certain number of coins according the denomination label, the jukebox gives the credits or plays it is adjusted for. If you want to change the play prices you have to change the jumper settings on the SCC-unit.


3.2. Free play

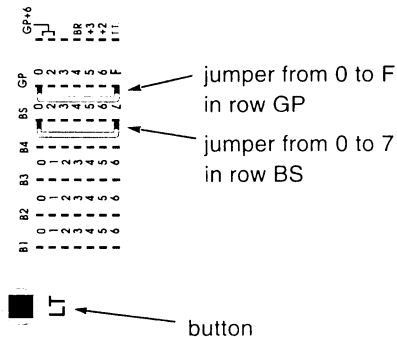

To set the jukebox to free play:


1. Remove all the jumpers on the SCC unit taking note of current setting for future reference.
2. Set a jumper from 0 to F (free play) in the row GP on the S&CC unit.
3. Press 'LT' button.
4. Now **one track** is selectable without coin insertion.
5. From **two to six tracks** are selectable by setting an additionally jumper in the row 'BS' (Bonus Step) from 0 to 2 up to 0 to 6.
6. Up to **47 tracks** are pre-selectable by setting a jumper in this row 'BS from 0 to 7.

3.3. Test credit

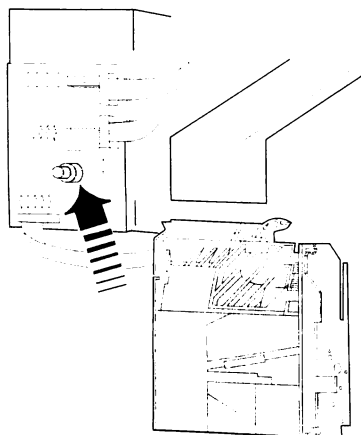

In jukeboxes with an electronic coin validator you can find the test credit button on the coin validator interface board.


For repair and test purposes it is possible to give test credits. By touching the test credit button (in special cases several times) you get one credit also shown in the digital display. You can terminate un-used credits by pressing the LT button.

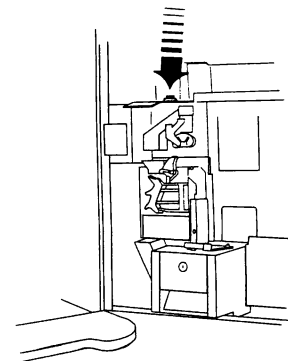

In jukeboxes with mechanical coin validator the test credit button is mounted over the return lever inside.

4. Track selection

4.1. How to select a track

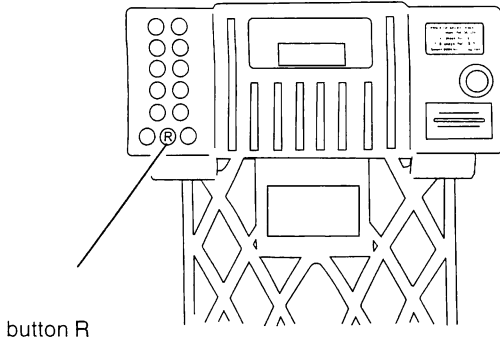

If credit exists or free play is set you can select tracks by means of the buttons 0 - 9 of the keyboard.

First enter the number of the CD with two digits, then the track number with two digits too.(track numbers higher than 35 will not be accepted).

Example: CD 2, track 9: Enter 0 - 2 - 0 - 9.

(Exeption: CD 100 = 00.)

The button R

You can delete wrong entered numbers up to the third digit by means of the button R (Reset). But after having entered the fourth digit the jukebox stores and executes a selection also made by mistake. By pressing the button R the available credit will be displayed for a few seconds.

The display flashes

After entering the fourth digit of a selection the jukebox starts to search and play the selected CD immediately. If the display flashes the entered selection was not valid. Check:


- if credit is available or
- if the selection is higher then the programmed number of CD's in magazines

If you select a higher track number as available on a CD. The jukebox overcounts the tracks and starts at the beginning. Example:

CD 03 contains 17 tracks. But selected track is 0 - 3 - 1 - 9.

The jukebox plays track 02 of CD 03.

4.2. I do not like this track - The button CANCEL with amplifier I84


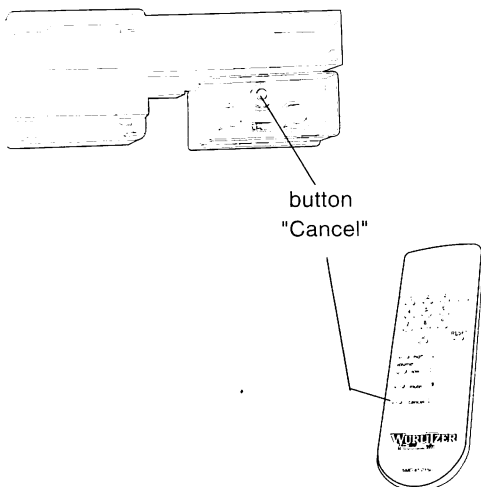


If you do not like a track you can either cancel it by pressing the button 'CANCEL' at the control box inside the jukebox or at the infrared remote control. The jukebox stops playing or plays the next track if a selection has already been made.

You can terminate all selections only by pressing the button LT on the SCC unit .

You can loosen the control box inside the jukebox to use it as an external wire remote control.Its 5-line ribbon cable may be extended as required with any kind of wire .

 4.3. I do not like this track - The button CANCEL with amplifier F91

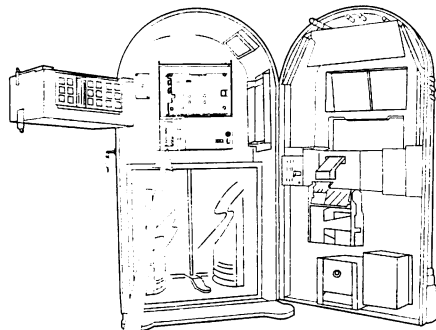

CANCEL button

If you do not like a track you can either cancel it by pressing the button 'CANCEL' at the control box inside the jukebox or at the infrared remote control. The jukebox stops playing or plays the next track if a selection has already been made.


You can terminate all selections only by pressing the button LT on the SCC unit .

You can loosen the control box inside the jukebox to use it as an external wire remote control. Its 10-line ribbon cable may be extended as required with any kind of wire .

As an option it is possible to connect two wired remote controls in parallel or one wired remote control together with one infrared remote control.

4.4. Albumplay - playing a whole CD

You can select a whole CD by entering the CD number followed by two times 0. Condition is that 'Albumplay' is enabled and the SCC has reached the fourth bonus level or if free play is set.

 **IMPORTANT**

If you press the CANCEL button while a complete CD is playing as long as the last track is not reached the next track on this CD will be played .

Program:

To enable 'Albumplay', enter the service level 1:

1. Set the slide switch 'SERVICE' at the SCC-unit to ON.
2. Press 'LT' button.
3. Press selection button R -hold down- and press selection button 0 then release both buttons.
4. Press selection button 1. Service level 1 is reached. Display is: 1 _ _ _.


To enable 'Albumplay' press selection button 9 -hold down- and press selection button R. Release both buttons. Enter 01 to enable (or 00 to disable) 'Albumplay'.

Exit the serviceprogram:

1. Set the slide switch 'SERVICE' at the SCC unit to OFF.
2. Press 'LT' button.

The changer starts an initialisation run. After this the jukebox is ready to operate.

5. Automatic random select (Playstimulator)

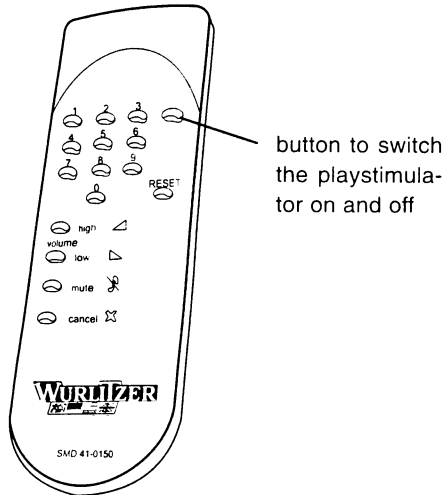


Remote control of the I84 amplifier

If the playstimulator is switched on by means of the continuous play switch or the service program the jukebox plays random tracks of the registered CDs in magazines (service program level 1 button 5). CDs declared as BGM CDs will not be used (ref. to chapter 5.4. of the enclosed FIELD SERVICE MANUAL)!

The volume is the same as in normal operation. If a selection is made the playstimulator will be interrupted immediately and remains after having played the selected tracks.

You can program the playstimulator by software too. Then the time between the random tracks of the playstimulator is programmable from 1 up to 98 min. You may also program a time window in which the playstimulator works. Ref. to chapter 5.3. of the enclosed FIELD SERVICE MANUAL to work it out.

The I84 remote control allows to switch on and off the playstimulator by means of the remote control.

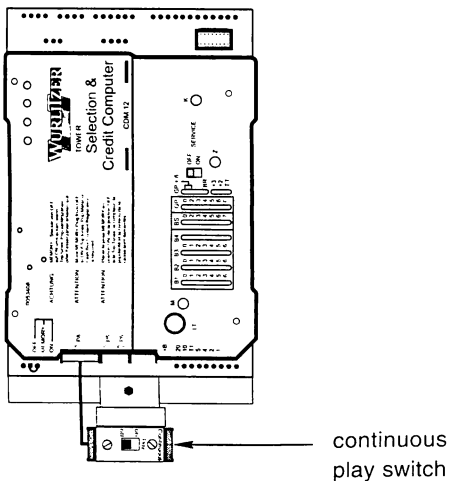

On jukeboxes with F91 amplifier or without remote controls you can switch on CONTINUOUS PLAY with the continuous play switch. Part number is 0034410. It has to be connected to P8 of the SCC unit.



6. Volume, sound and balance control

6.1. Volume, sound and balance control - amplifier F91



CAUTION

Depending on the adjusted volume of the jukebox loudness levels of more than 70 dB can be reached.

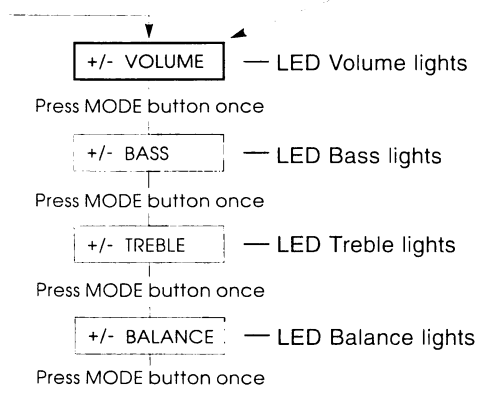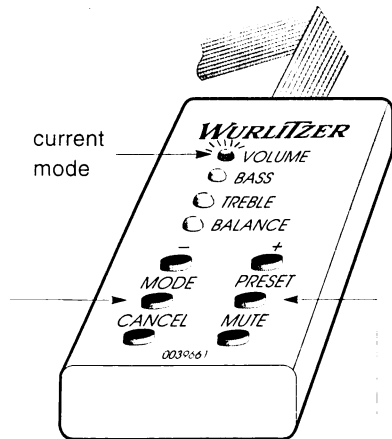

IMPORTANT

After power off all adjustments are reset to dip switch settings. For permanent adjustment e.g. treble, bass use the dip switches (ref. to chapter 2.4 of the enclosed FIELD SERVICE MANUAL).

With the control terminal inside of the jukebox the volume, treble, bass and balance can be controlled individually.


After power up or if no button has been pressed for approx. 5 sec or after the button PRESET has been pressed, the terminal stays in the mode "VOLUME". The LED "VOLUME" lights. In this mode you can control the volume by means of the buttons '+' and '-'. (Adjustments return to pre-set after power off.)

One LED corresponds to each mode. All reachable by pressing the 'MODE' button. With the buttons '+' and '-' treble, bass or balance can be controlled.


The control terminal can be taken out and be used as a wired remote control.

The meaning of the buttons...

- **VOLUME:**
Volume LED lights.
+ button increases volume
- button decreases volume.
- **BASS:**
Press 'MODE' button once.
Bass LED lights.
+ button increases bass volume
- button decreases bass volume.
- **TREBLE:**
Press 'MODE' button twice.
Treble LED lights.
+ button increases treble volume
- button decreases treble volume.
- **BALANCE**
Press 'MODE' button 3 times.
Balance LED lights.
+ button increases right hand channel volume and decreases left hand channel volume
- button decreases right hand channel volume and increases left hand channel volume.
- **MODE:**
Switches to the next operating mode. After about 5 seconds without operating any buttons, 'VOLUME' mode is resumed.
- **PRESET:**
Volume, bass, treble, and balance are set to the pre-set according to DIP switch setting. Actual mode is set to 'Volume'.
- **CANCEL:**
Rejects a playing track. If album play is selected the next track will be played.
- **MUTE:**
As long as this button is activated, the amplifier output is muted.

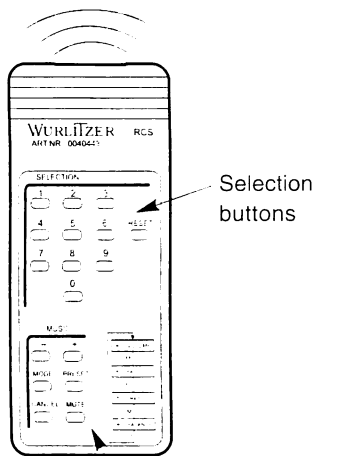

Music control buttons

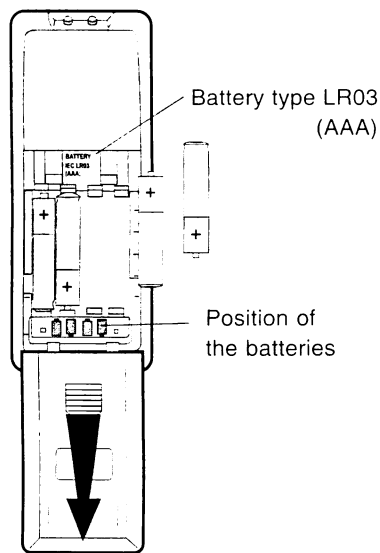

Battery type LR03 (AAA)

Position of the batteries

The control terminal inside of the jukebox can be taken out and be used as a wired remote control. If required its 10-line ribbon cable may be extended with any kind of wire. The voltage of the control wire is 5V DC.

It is possible to connect two wired remote controls in parallel or one wired remote control together with one infrared remote control. The control mode is displayed with 4 LED's. The mode can be changed by using the 'MODE' button to control volume, bass, treble and balance:

The infrared remote control

As desired an infrared remote control will be installed from factory or can be delivered as conversion kit (part no. 40435). If it has been installed the hand transmitter is located in the cashbox. If credit is given or free play is programmed a CD can be selected with the buttons 0 to 9 and R.

Double button functions as required in the service programs (i.e. press button 5 -hold down- and press button R), are impossible. For this you only can use the keyboard of the jukebox.

The meanings of the music control buttons are according to the buttons on the control terminal on the rear side of the jukebox (ref. to the prev. section).

The receiver eye of the infrared remote control is located behind the hole on the top RH front side of the door. Beam this point directly if possible.

The common control terminal can be connected besides. It can be mounted outside to display the actual mode.


Batteries will not be delivered. Necessary are 4 micro cells type LR03 (AAA).

To open the battery compartment move the cover like shown in the picture.

Needed battery type and position of the batteries in the hand transmitter are shown on the casing.

Part no. of the hand transmitter: 0040443.

6.2. Volume, sound and balance control - amplifier I84

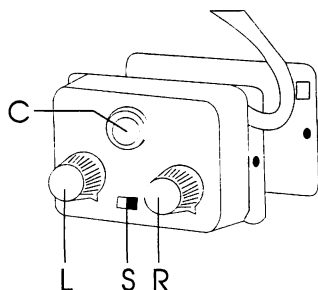

The volume control unit can be taken out and may be mounted at another place as a remote control.



Volume control

The control box, accessible from inside, is a separate unit and has two knobs (L and R). In „stereo mode“ (switch S in position stereo) only the left knob is effective. In position „2 Kanal“ (two channel) of the slide switch both channels are controllable separately.




CAUTION

Depending on the adjusted volume of the jukebox loudness levels of more than 70 dB can be reached!

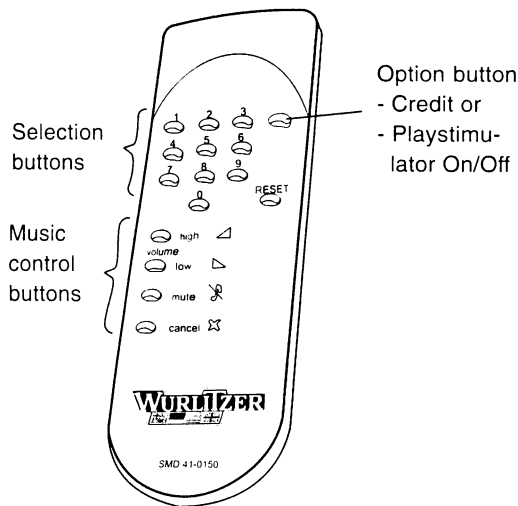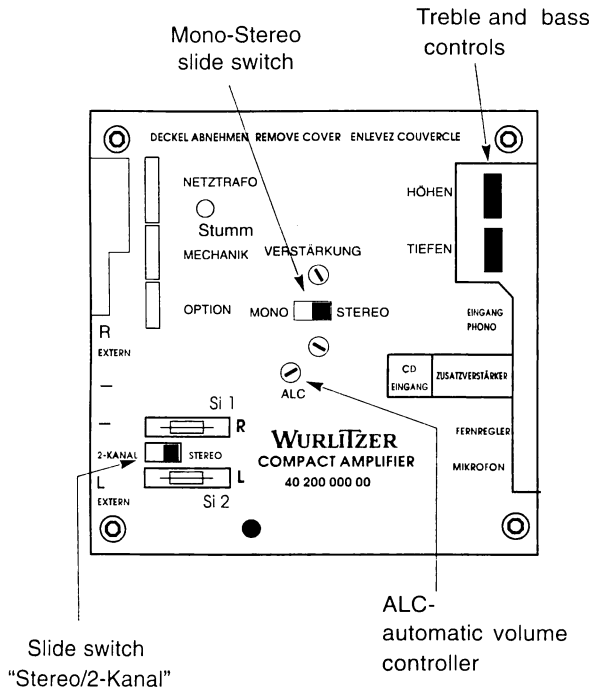

Batteries will not be delivered. Two micro cells Typ LR03 (AAA) are needed.

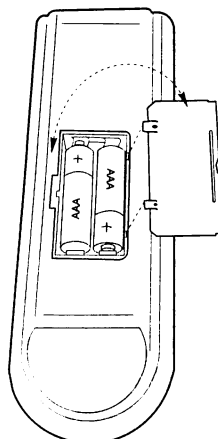

Treble and bass control

The treble and the bass controls at the top RH-side of the amplifier may be set to any position to suit local acoustic requirements. The Mono-Stereo switch may also be set to either position, however, it must be set to 'Stereo' if a stereophonic reproduction is desired.

Slide switch „Stereo/2-Kanal“

In common operating mode the slide switch „Stereo/2-Kanal“ is in position „Stereo“. In Position „2-Kanal“ the speaker terminals of the jukebox are switched to the left amplifier channel. Both sockets for the 'external speakers' L and R are switched to the right amplifier channel. If the slide switch of the volume control unit is switched to „2-Kanal“ a separate control of both channels (e.g. one channel for another room) is possible (left knob for normal terminals, right one for extern. speaker sockets). The slide switch „Mono-Stereo“ has to be set to mode „Mono“.

Automatic loudness control

An internal automatic volume controller decreases the volume level of CDs recorded too loud to an output level defined by the ALC pot. So an equal volume level is reached. The ALC pot is pre-set from the factory. The ALC does not operate if the adjustment pot is set to left position.

Infrared remote control

As desired an infrared remote control will be installed from factory or can be delivered as a conversion kit (part no. 0047522; amplifier I84). If it is already installed you can find the hand transmitter in the cashbox. The receiver eye of the infrared remote control is located behind the hole on the top RH front side of the door. Beam it directly if possible.

The meanings of the buttons...

- **BUTTONS 0 - 9 and RESET**
If credit is given or free play is programmed a CD can be selected with the buttons 0 to 9 and R.


Double button functions as required in the service programs (i.e. press button 5 -hold down- and press button R), are impossible. For this you only can use the keyboard of the jukebox.

- **OPTION button:**
This button can be used either as credit button or to switch on and off the continuous play function.(ref. to chapter 3.5. of the FIELD SERVICE MANUAL)
 - **HIGH:**
Increases the volume.
 - **LOW:**
Decreases the volume.
- The jukebox saves the actual volume if it is switched off.
- **MUTE:**
The first button operation switches the sound off. The next operation switches it on e.t.c. ('Toggle-function').
 - **CANCEL:**
Cancels the playing track. If 'albumplay' is enabled the next track will be played.

1. Coin and price settings

1.1. Price settings


If other combinations are required, refer to chap. 1.6.

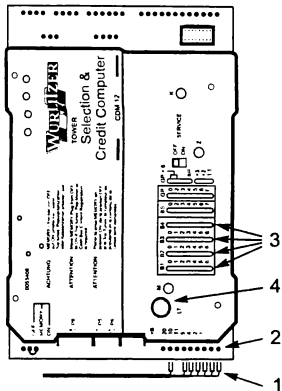


Usually the prices are preset by the factory according to the denomination label. In the "Unipack" version no play prices are pre-set. To set the play prices do the following steps:

1. Switch on the jukebox.
2. Coin output plugs (1) should be set according an separate attached instruction by connecting to the pin row (2) on the SCC unit. Pay attention to wiring colors (ref. to chap. 1.4).
3. Set the attached jumpers in B1 to B4 according to the number of the desired additional bonus plays. (3) (ref. to chap. 1.2)
4. Press „LT“ button once (4) to accept the new bonus setting.

1.2. Examples

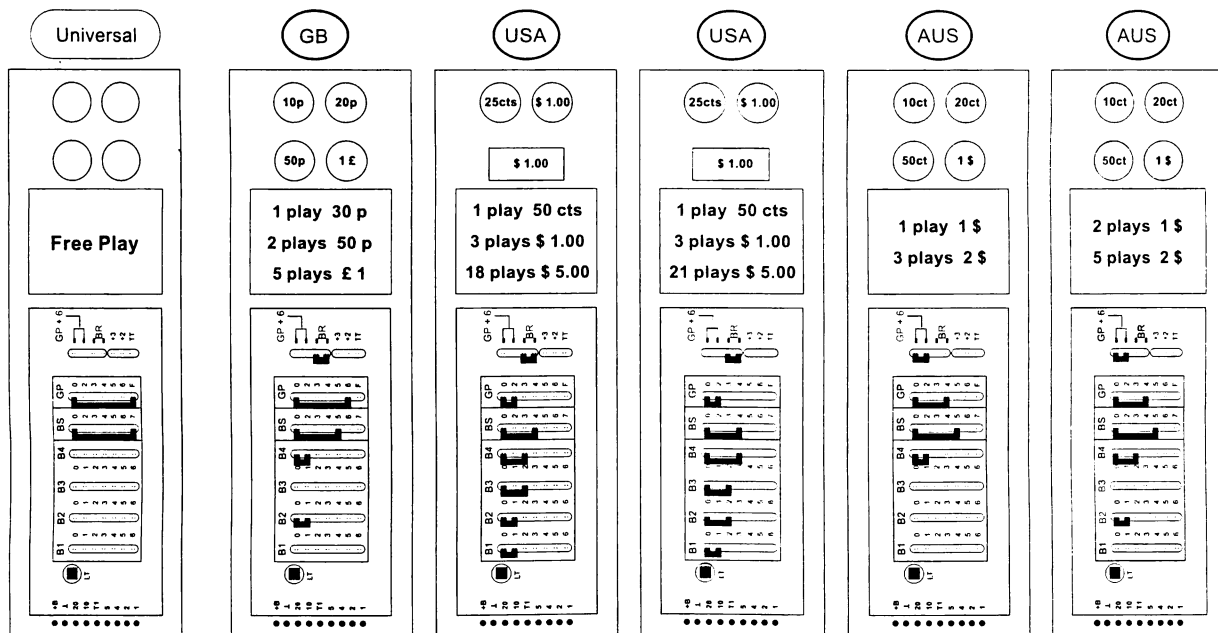

1.3. Free play programming

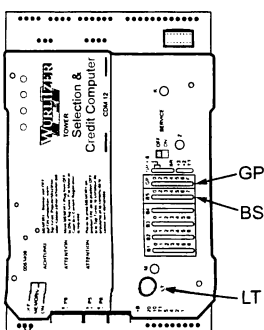


Set a jumper from 0 to F (free play) in the row GP on the SCC unit and be shure that jumper GP+6 is removed. Then press 'LT' button.

Now **one track** is selectable without coin insertion.

In between **two to six plays** are selectable by setting an additionally jumper in the row 'BS' (Bonus-Stufe, Bonus Step) from 0 to 2 or from 0 to 6.

Up to **47 tracks** are pre-selectable by setting a jumper in this row 'BS' from 0 to 7.


1.4. Color codes of coin inputs

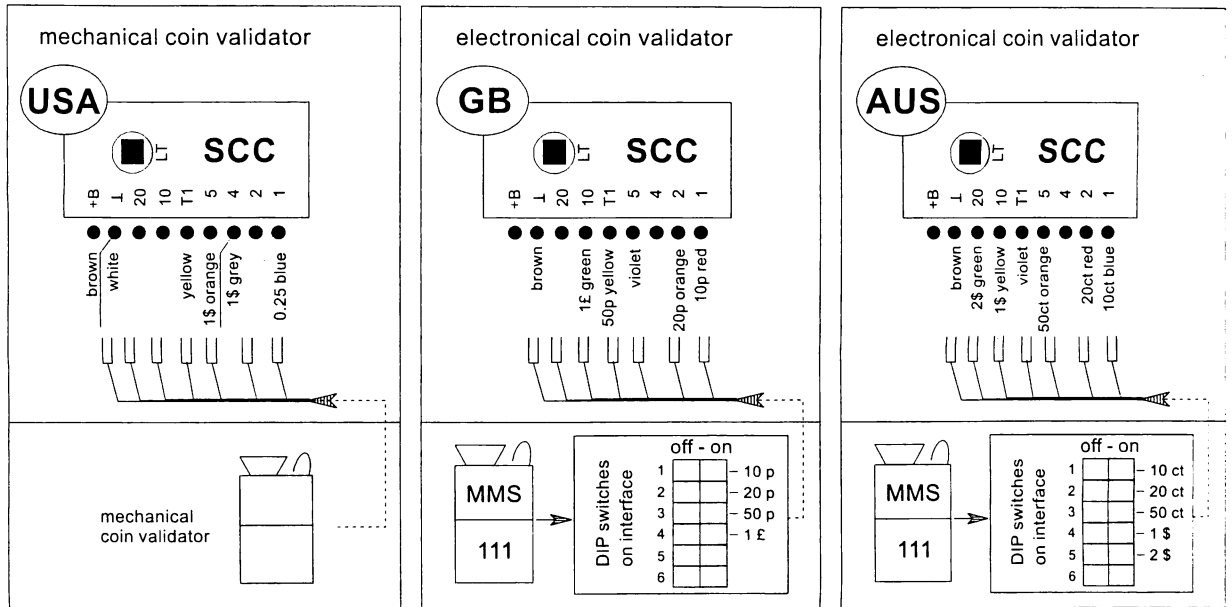

1.5. Selecting, displaying and programming of the top tunes

You can select the most played tracks (top tunes) by selecting 9999 in the normal operation mode. Condition is that the 2nd bonus step (B2) of the jukebox is reached by coin insertion. The total number of played tracks depends on the bonus price settings of the first two bonus levels (B1 and B2, ref also to chap. 1.6). Additional to this setting the jukebox plays one track more.

As example we use the US price settings
50 cts 1 play, 1\$ 3 plays, 5\$ 21plays :

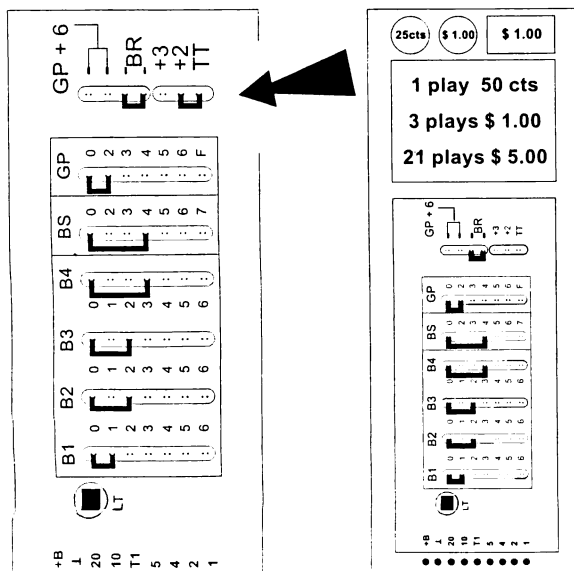


After having reached the bonus level 2 the SCC unit gives 7 credits (4 basic credits total + 1 bonus credit from B1 + 2 basic credits from B2 = 7 credits total). If you select the top tunes with 9999 the jukebox plays one track more (= 8 tracks).

If you set an additional jumper from TT (Top Tunes) of the SCC unit to +2 the jukebox plays two additional tracks (in our example 9 tracks).


If you set a jumper from TT to +3 the jukebox plays 3 additional tracks (in our example 10 tracks).

To find out what tracks will be played after selecting 9999 you can display the single tracks by entering 9998. At first the most played track will be displayed. Then you have to enter 9998 again and so the jukebox shows the second most played track etc. To display the tracks the SCC unit needs about 2-3 sec for calculation. If the display starts to flash press the selection button R once.

Price settings:

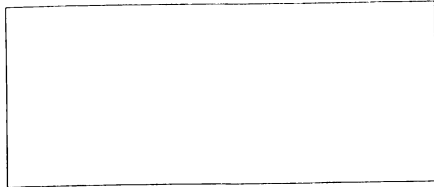


TT	:	F	:	7	:	:	6	:	6	:	6	:		
+2	:	6	:	6	:	:	5	:	5	:	5	:		
+3	:	5	:	5	:	:	4	:	4	:	4	:		
BR	:	4	:	4	:	:	3	:	3	:	3	:		
	:	3	:	3	:	:	2	:	2	:	2	:		
	:	2	:	2	:	:	1	:	1	:	1	:		
	:	0	:	0	:	:	0	:	0	:	0	:		
		GP+6		GP		BS		B4		B3		B2		B1

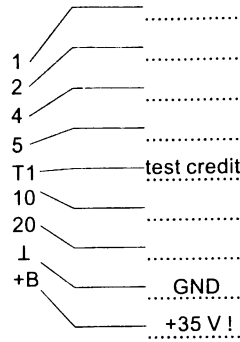

pulse	1.	2.	3.	4.	5.	6.	7.	8.	9.	10.	11.	12.	13.	14.	15.	16.	17.	18.	19.	20.	21.	22.	23.	24.	25.
inserted money																									
plays from GP:																									
from bonus step																									
plays B1...B4																									
total plays																									

2. Amplifier F91

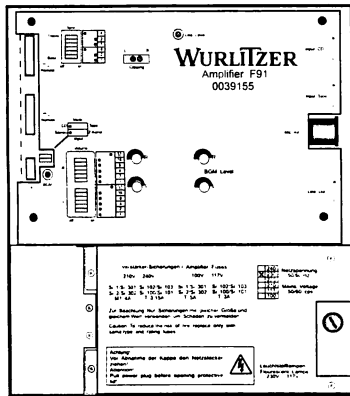


The amplifier F91 is the version with higher power output (2 x 170 W rms.). Equipped with protection and watch dog functions described below. The BGM adapter (to attenuate the volume in BGM mode) is integrated. The volume of CD's with different recording levels is kept constant automatically.

In 2-channel mode it is possible to control both channels with the IR-remote control.


You can also make selections with the optional infrared remote control.

2.1. Verification of power voltage

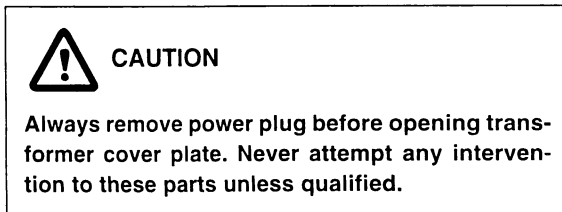

The power voltage setting is on the cover plate of the F91 transformer. Machines for USA are set to 117 V. Juke-boxes „UNI-Pack“ are shipped in 230 V setting. This is marked on the machine label inside of the door. If the voltage setting is not clear the transformer cover plate has to be removed.


The main fuse (T3,15 A, res. T8 A for 117V) is located near the RH. side of the cover plate.

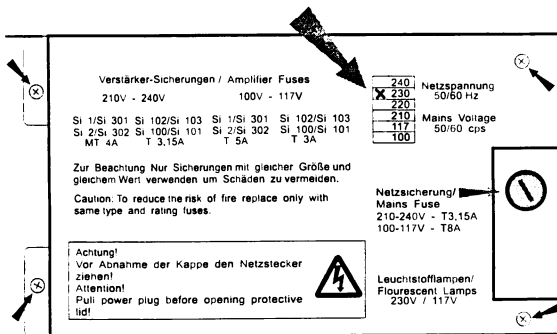

The position of the two plug connectors on the transformer terminals 1 to 9 (primary side) indicates the current voltage setting. The following combinations are possible:

- 240V = 1 - 9
- 230V = 1 - 8
- 220V = 2 - 9
- 210V = 2 - 8
- 117V = 1 - 6
- 100V = 2 - 6

Loosen the four screws to remove the cover plate (small arrows).

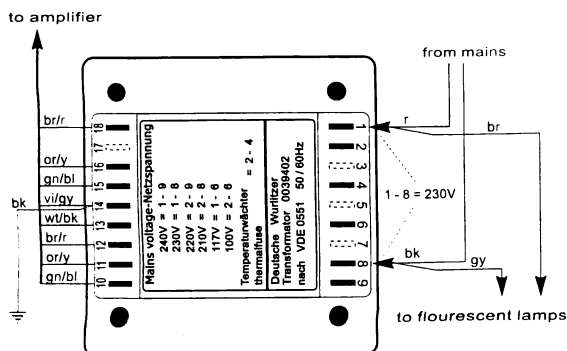

Never connect the fluorescent supply to other contacts .

If you intend to change the power voltage for a higher voltage (e.g. from 117V to 230V) it is better to use a subtransformer for the fluorescent lamps or change the ballast according to the used voltage (e.g. for 230V).


The power consumption in standby is approx. 146W. With max. volume it is approx. 540W.

2.2. Position of fuses and plug connectors on the power stage



CAUTION

A voltage of approx. +60V res. - 60V applies to the fuse terminals also a certain time after power off. Change the fuses with caution !

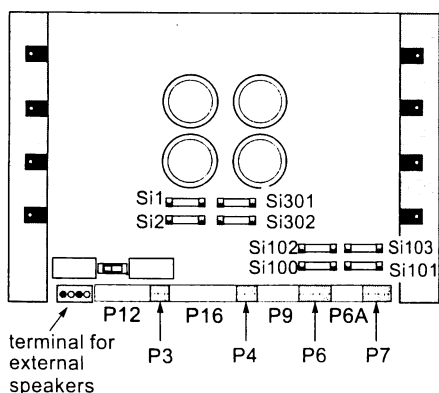

Usually the jukeboxes are fitted with fuses of DIN 41571 (5x20 mm) slow blow or medium blow. Slow blow fuses of DIN standard bear the letter T (T = "Träge") e.g. T 4/250 means T = slow blow, 4 amps, 250 V maximum operating voltage. Which fuses have to fit in where is printed on the power transformer cover. Fast blow fuses (F = Flink) are unsuitable for the jukebox.

The fuse holder on the amplifier P.C.B. are capable to hold also fuses of 6x32 mm size.

Position of the plug connectors:

P12 - jukebox speakers

P 3 - bubble tubes

P16 - power transformer

P 4 - CD sub transformer, CD player

P 9 - mechanism, Selection and Credit Computer


P 6 - option, coin interface

P6A - option

P 7 - service

Fuse	Failure
Main fuse T 3,15, res. T8 A for 110/117 V.	No illumination, machine completely dead.
Fuse Si1: T4A (T5A) +70V= L.H. channel power stage	No sound in the L.H. channel. Speaker relay is not energized. According green LED does not light.
Fuse Si2: T4A (T5A) -70V= L.H. channel power stage	
Fuse Si301: T4A (T5A) +70V= R.H. ch. power stage	No sound in the R.H. channel. Speaker relay is not energized. According green LED does not light.
Fuse Si302: T4A (T5A) -70V= R.H. ch. power stage	
Fuse Si100: T3,15A (T3A) supply -30 V=	The jukebox operates normal. The CD2 mechanism does not use this voltage.
Fuse Si101: T3,15A (T3A) supply +30 V=	No initialisation run after power ON. All displays light. No function.
Fuse Si102: T3,15A (T3A) supply +12 V=	SCC unit dead - digital display dark (except red LED M still lighting up on coin insertion). The LED's K and Z on the SCC unit are dark . No initialisation run after power ON.
Fuse Si103: T3,15A (T3A) supply 30V ~	The digital digit on the CD-control is dark . Power supply for CD player and control unit is interrupted. Credit circuit via LED M is interrupted. If credits are still in memory or free play is programmed, a CD will placed on turntable but is not spinning. After about one minute the CD is taken back.. If no credits in memory, no CD will be taken to turntable, the display is flashing.


2.3. The first power ON

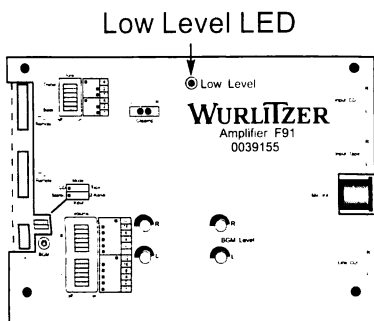

The mains switch is located at the bottom left hand rear side of the jukebox. In position 'I' jukebox and amplifier are switched on. The amplifier is now in STANDBY MODE:

The yellow 'Low Level LED' lights. The 'Low Level' circuit detects low music parts and pauses. It effects the AVC circuit not to raise the audio level in music pauses. So disturbing noises will not be heard. This LED may light for short times during play.

MUTE - LED

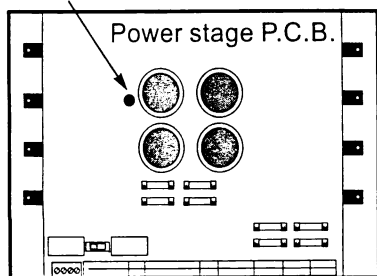


The yellow 'Mute LED' lights (on the power amp board, only visible after lifting up the pre amp board). It indicates that the amplifier is muted.


To avoid power on and other noises, the amplifier output will be switched on only during play.

2.4. Pre-settings for volume, bass and treble

After power on of the jukebox or after pressing the button 'preset' the levels of volume, bass and treble will be set to basic values. These values can be set with different binary DIP switch combinations. The switches are located on the amplifier pre amp board. You can find the recommended settings on the amplifier cover.

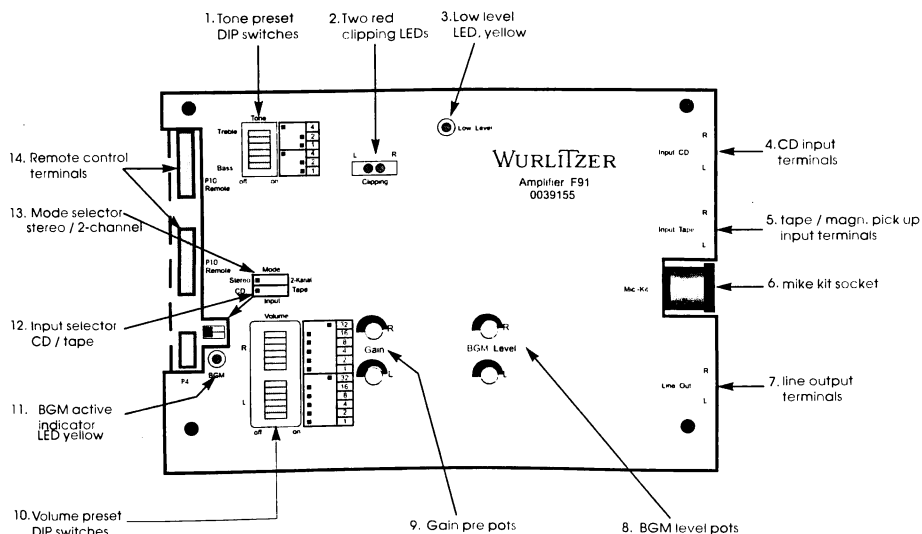

2.4.1. Pre-settings for volume

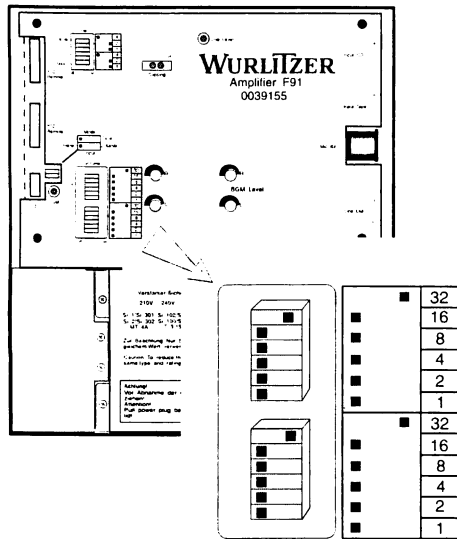

DIP switches for volume pre settings

You can set the basic values for volume in 63 steps (to 2dB) from no up to maximum volume.

At the amplifier front side, opening "Volume", you can find 6 so called DIP-switches for each channel. These switches have different values (1, 2 ... to 32). If you add all the values of the switches in position "ON" you will get the value for the set volume. Consequently the switches 32 and 16 allow a more coarse adjustment the others a fine.


The recommended factory settings are printed on the amplifier cover (32).

If you change the DIP-switch settings while the jukebox is operating remember that the new settings will only take effect after having pressed the button 'PRESET' at the control terminal or on IR remote.




CAUTION

If all switches are in position OFF no volume, if all switches are in position ON, the maximum volume appears at power on !

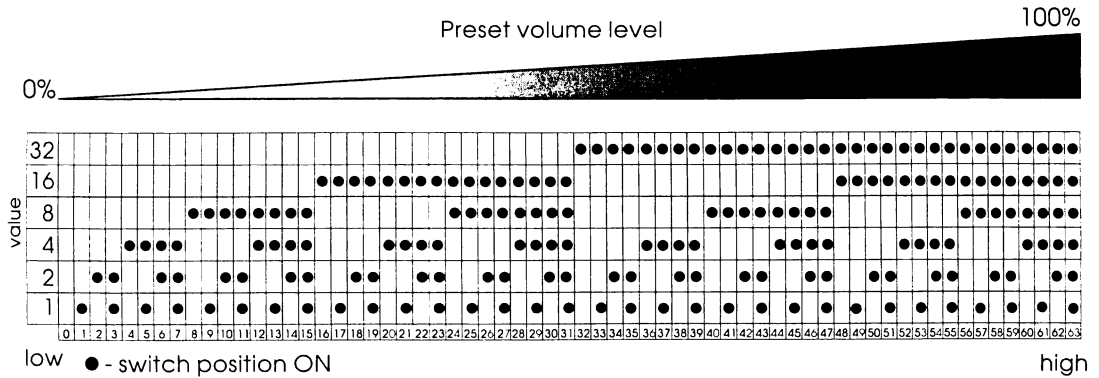


2.4.2. Pre-settings for bass and treble

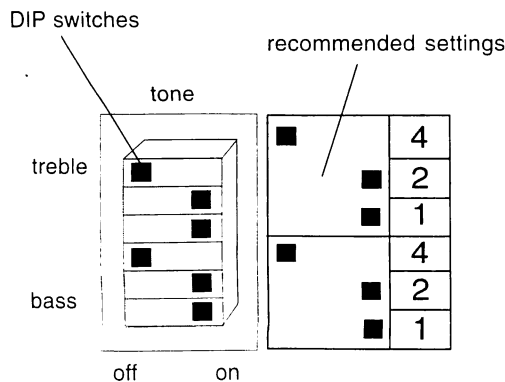

Like-wise the values for bass and treble can be set. However for both channels together.

Table of possible DIP switch settings for volume:

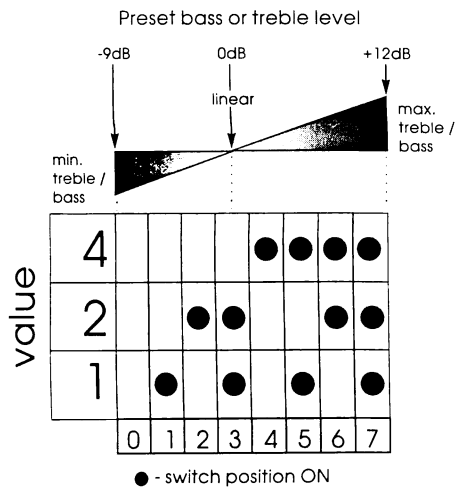

Three DIP-switches with the values 1, 2, 4 are provided for each bass and treble. You can choose 7 different steps in a 3dB distance from minimum (-9dB) to maximum (+12dB). Adding all switches set to "ON" gets the set value.

The 0dB - 'linear' position of these switches is printed as recommended factory settings on the amplifier cover.




IMPORTANT

If you change the DIP-switch settings while the jukebox operates remember that the new settings will only take effect after having pressed the button 'PRESET' at the control terminal or after a power off and on of the box.

Table of possible DIP switch settings for sound:

2.5. Speaker connection

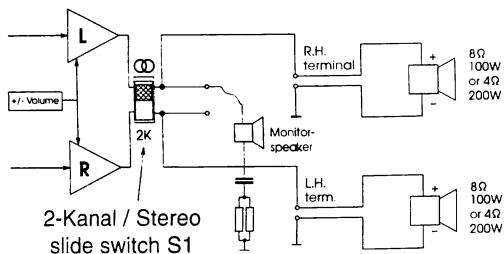

The speaker connector terminals are situated inside and on the back side of the jukebox.


To attain a good sound of the jukebox, take care when connecting the speakers. Pay attention to of the following requirements:

The minimum impedance of 4Ω per channel must not be exceeded!

The power output of each channel at a load of 4Ω is 170 W rms, i.e. the min. power consumption of a 4Ω speaker set should be 200 Watts.

All speakers must be connected with the correct polarity.

If you connect a speaker set with 8Ω per channel the delivered output power will be divided in half (also the achieved loudness is lower). The power consumption of this speaker set can then be 100W.

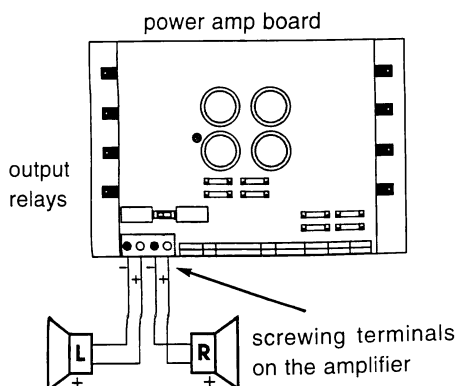

The speakers may be operated as desired in the mode STEREO or 2-CHANNEL .


In **STEREO** mode the stereophonic reproduction survives.

In **2-CHANNEL** mode it is possible to control the volume of both channels independent to each other. It allows to reproduce the sound in a second room with different volume. The sound reproduction in this mode is only monophonic.


In 2-CHANNEL mode the volume of the speakers connected to the normal terminals (R.H. channel) can be controlled with the mode 'VOLUME' and the volume of speakers connected to the screwing terminals on the amplifier (L.H. channel) with the mode 'BALANCE'. The according pre-set volume can be set separately.

2.5.1. The operating mode STEREO


For normal operation the jukebox is set to the STEREO mode. Both amplifier switches, the mode switch and the slide switch S1 on the power amplifier board are set to position STEREO.

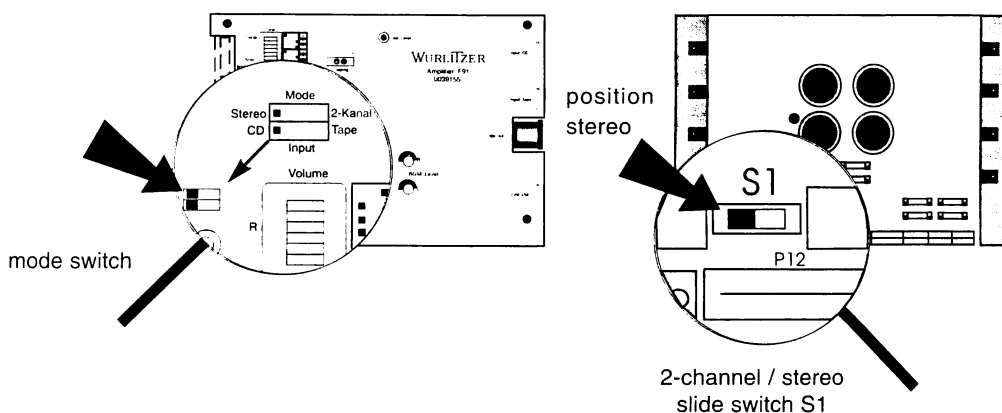


Examples:

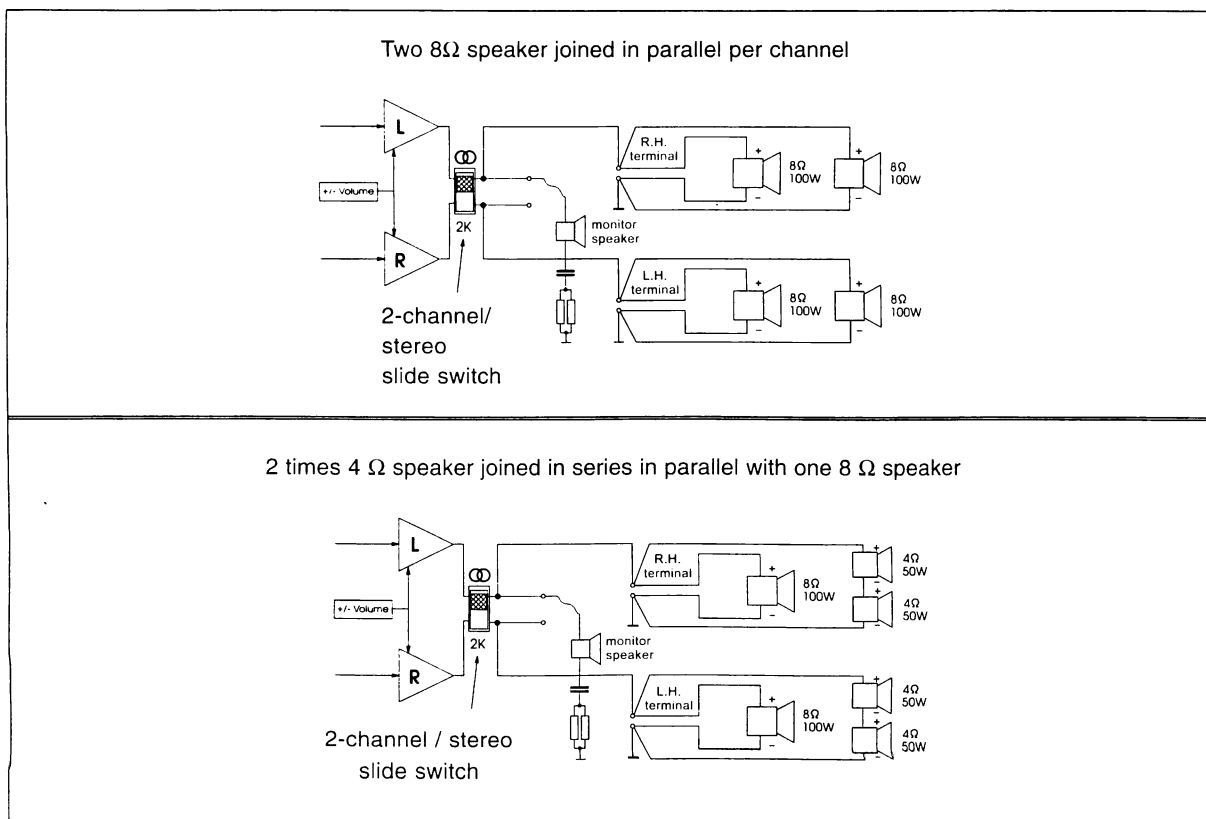

2.5.2. Connecting external speakers in operating mode 2-CHANNEL

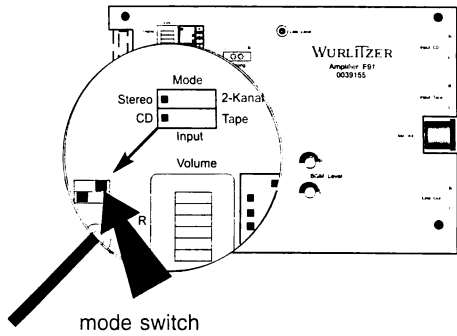

2-channel / stereo
slide switch S1
position 2-channel

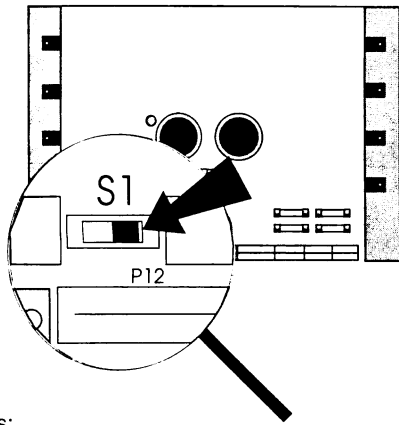


For 2-CHANNEL operation both amplifier switches, the mode switch and the slide switch S1 at the power amplifier board are set to position 2-CHANNEL.


As the following examples show, in the 2-CHANNEL mode it is possible to connect different loads to each amplifier output. Only take care to keep the min. impedance of 4Ω per channel.

Examples:


1st room a speaker of 4Ω 200W, 2nd room 4speaker of 2Ω 30W joined in series

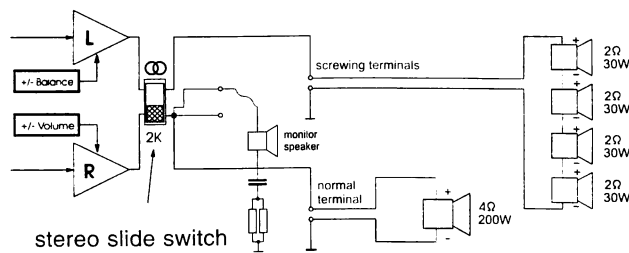

1st room a speaker of 4Ω 200W, 2nd room 4speaker of 16Ω 50W connected in parallel

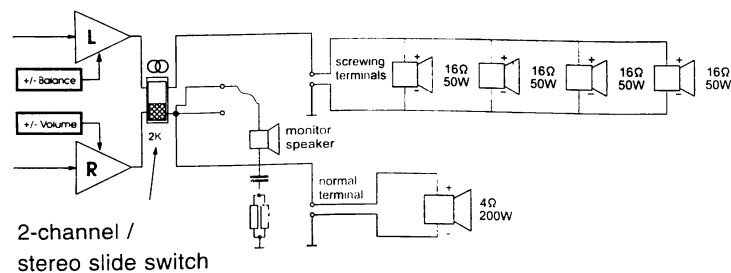


2.6. BGM mode - volume attenuation

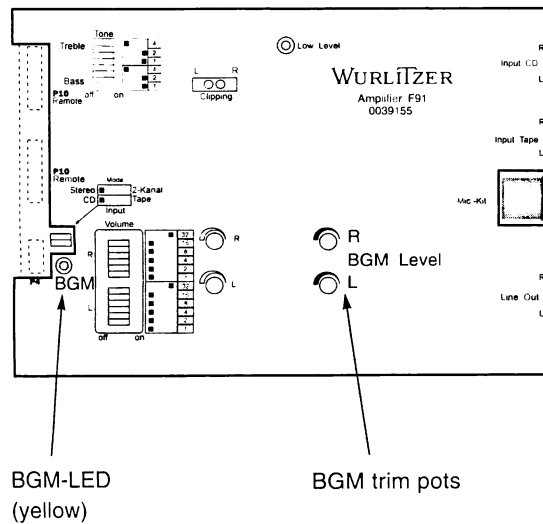

In the BGM (**B**ack **G**round **M**usic) mode the reproduction loudness will be reduced by a certain factor. This function is controlled by the signal „BGM“ pin 1 plug brown from the SCC unit. The active BGM mode is displayed with a yellow LED near plug P4. In this mode the volume attenuation from normal sound is adjustable by two BGM trim pots in the middle of the pre amplifier board.


2.7. Automatic volume control (AVC) and clipping stage

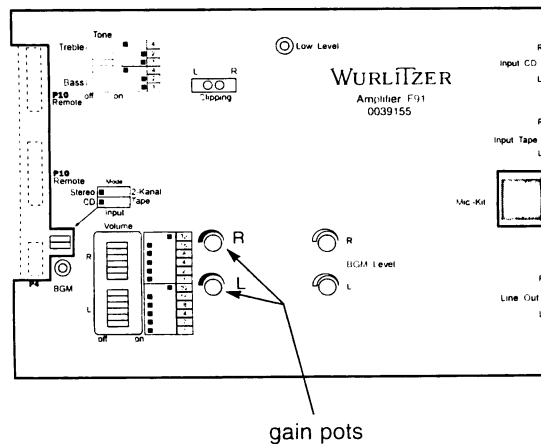

The AVC sets CDs with different volume levels to an equal level. The level of CDs with a high level will be reduced, the level of low leveled CDs will be increased. This control works rather slow to save the dynamic range of the track.

The pre amp gain pots are situated between the volume pre-set switches and the BGM level trim pots. These two pots are factory pre set should **not** be adjusted.


2.8. Overdrive protection

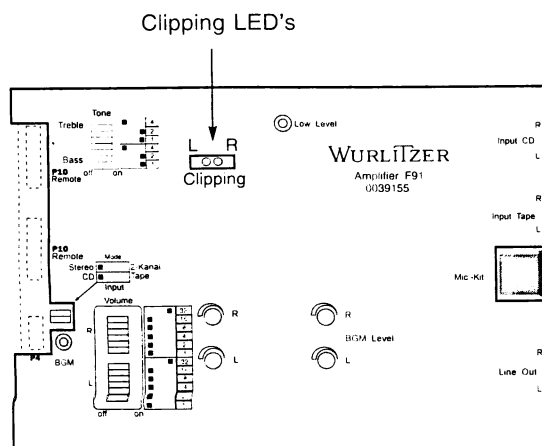

In case of an overdriven power amp one or both red clipping LED's will light. The clipping circuit will have an effect on the AVC circuit and the volume will be reduced. Occasional lightning of the clipping LED's during a loud performance is normal. Continuously lightning of one or both LED's indicates an overdriven channel and distortion can be heard. It is recommended to reduce the volume.

Also additional speakers with an impedance lower than 8Ω (in STEREO mode) may cause an overload and the LED's will light.

2.9. Overload protection

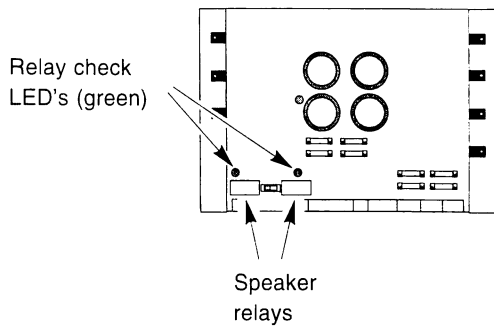


The power amplifier is provided with an overload protection circuit.

While the CD is playing two green LED's indicate that the speaker output relays are energized. If one of these LED's is dark during play and no sound appears an overload of the power amp stage has occurred, which is for example caused by a short circuit in the connection wires of any external speakers.

An additional internal watchdog circuit checks that the audio signal contains no DC Voltages, no high frequencies and no too high treble levels. It also indicates that the load limitation cut off has been reached. If only one test is not successful the relays will be switched off.

2.10. Tape input

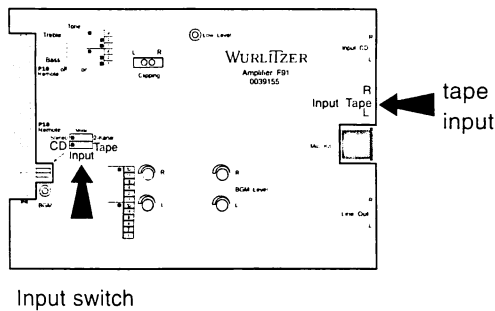

Additional to the CD input a tape input with a higher input sensitivity is provided. As an option this input stage may be wired as a correcting network to work with a magnetic pick up (RIAA). Set the 'input' DIP switch to tape position to select the tape input.


2.11. 70V - output transformer (0043157)

If you want to work with different speakers with any other impedances or with 70V systems, we recommend to use the output transformer. You can then connect speakers between $2\ \Omega$ and $16\ \Omega$ together but complete independent to each other.

If you want to connect several speakers by means of an output transformer pay attention to the following hints:

1. At first you should check if it is possible to work without an transformer too. Optimal speaker dimensions are 200-300W $4\ \Omega$ per channel. The use of an output transformer makes sense only at long cable distances or many different kinds of speakers
2. To avoid an interruption of all speakers by the overload protection circuit or a decrease of volume by the clipping stage, the total power outlet of the amplifier should not be exceeded.
3. All speakers must be connected with the correct polarity.
4. To work each external speaker with the desired volume level, pay attention to the respective efficiency, impedance and load limit.
5. To avoid cable losses on long speaker lines (more than 60 feet) and low impedance's, 70Volt-systems should be used as much as possible.
6. If speakers with low impedance's ($2\ \Omega$, $4\ \Omega$) are used, each speaker should have its own line with sufficient cross-section.
7. When an output transformer is used **no** speakers should be connected to the screwing terminals on the power amplifier board P4A.
8. Note: The 2 - channel - option can not be used in connection with an output transformer without modifying the pre amp board.
9. The output transformer 40038, for the amplifier I84, must not be used for amplifier F91.

The switches 'volume internal speakers'

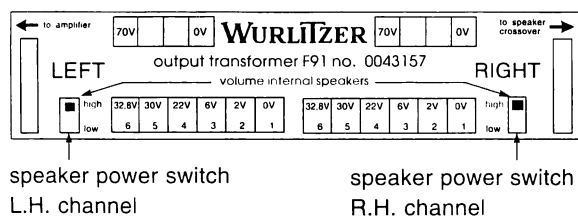

On the output transformer are two speaker power switches. With these switches the voltage applying on the normal speaker terminals comes either from the terminals 4 and 3 (16V) or 5 and 2 (28V) of the transformer (ref. to the following table). On jukeboxes with inside speakers the real assignment of this switches is to reduce the power consumption of these speakers to free resources for external speakers. You can ignore these switches at jukeboxes without own speakers if you connect all speakers on the terminals of the transformer.

Hints of connectable speaker loads

The maximum power output per channel is 170 Watts (rms). The power consumption of the connected speakers can be higher (i.e. 200 W) than the maximum remaining power outlet of the amplifier.

If the power consumption is lower (i.e. 10 W) than the maximum remaining power outlet of the amplifier, it can be adapted by means of the output transformer.

Determination of the connectable speaker power

The real power consumption of a speaker equals the square of the voltage applied to the speaker terminals divided through the speaker impedance ($P = U^2 / R$). The power values calculated in this way are shown in the ta-


ble below. The volume level really delivered depends also on the speaker efficiency and varies from type to type, but it is possible to even out these differences in certain limits.

	delivered maximum power in Watt if speakers with an impedance of xx Ω are connected						voltage applied to the terminals in V_{rms}	terminal number and polarity	
	16Ω	12Ω	8Ω	6Ω	4Ω	2Ω		pos	neg
LOW			0,5	0,7	1	2	2	2	1
			0,7	1	1,3	2	3,9	6	5
		1	1,3	2	2,7	4	8	3	2
		2,3	3	4,5	6	9	18	6	3
		4	5,3	8	10,7	16	32	8	5
		7,3	9,7	15	19	29	58	10,8	6
HIGH	16	21	32	43	64	128	16	4	3
	25	33	50	67	100	200	20	4	2
	30	40	61	81	121	*	22	4	1
	36	48	72	96	144	*	24	5	3
	49	65	98	131	196	*	28	5	2
	56	75	113	150	*	*	30	5	1
	59	79	119	158	*	*	30,8	6	2
	67	90	134	179	*	*	32,8	6	1

Hints for speaker connection:

- The load of all speakers has to be added.
 - If the total load of all speakers per channel is higher than the delivered amplifier outlet power, not all speakers may work with the maximum power.
 - If the total load of all speakers per channel is lower than the delivered amplifier outlet power, all speakers may work with the maximum power, a power reserve additionally.
- For an efficient use of the speaker power the optimum impedance in conjunction with the output transformer connection possibilities has to be determined. (ref. to connection example 3)

Connection example 1:

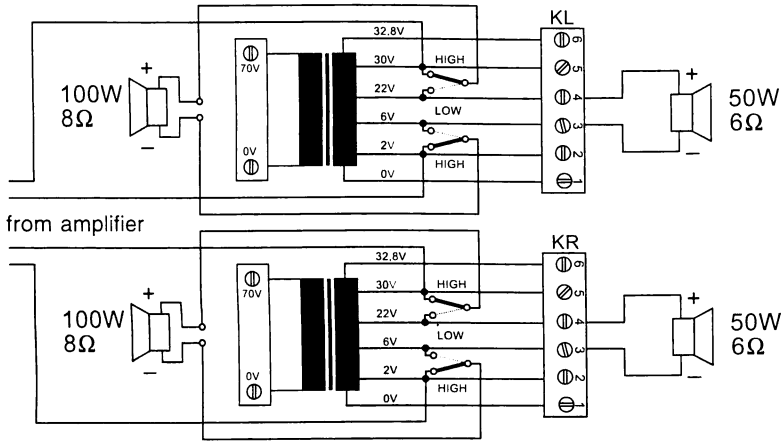


Like recommended to the normal terminals are connected speakers of 100W 8Ω per channel. To the output transformer should be connect one speaker of 50W 6Ω per channel.

The total load of 150W causes no amplifier overload. Possible connection combinations can be taken out of the row for 6Ω. For 50W all combinations up to 43W are possible. Lower power values also cause a lower volume level. To work with the maximum power the speaker have to be connected to the terminals 4 (+) and 3 (-).

Connection example 2:

Per channel should be connected:
 one speaker 80W 4Ω.
 one speaker 180W 2Ω.
 one speaker 8W 12Ω.

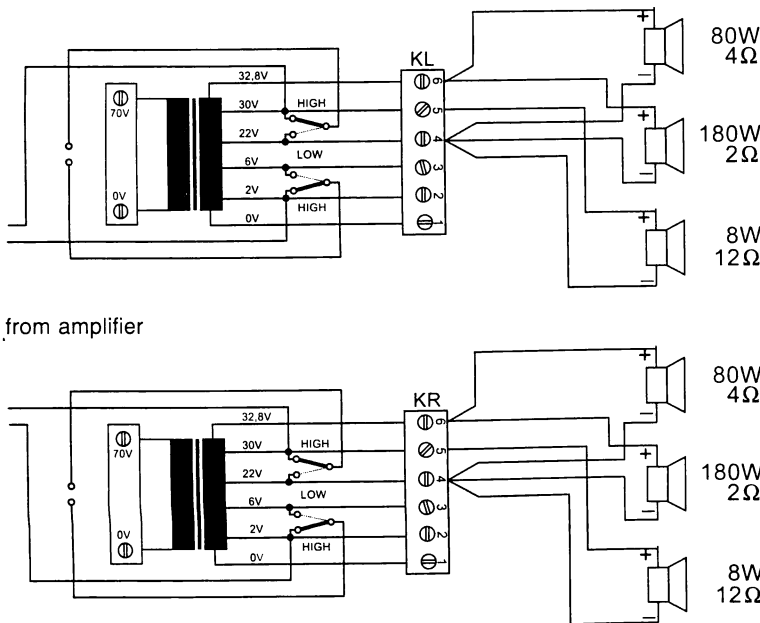

The total power rate is 268W, even in switch position LOW it is not possible to work with this high power. At first a look at the table :


1. Speaker 80W 4Ω (take out of row for 4Ω) can work with a maximum of 64W. The next higher value of 100W would cause an overload of the speaker!
2. Speaker 180W 2Ω (take out of row for 2Ω) can work with a maximum of 128W. The next higher value of 200W would cause an overload of the speaker!
3. Speaker 8W 12Ω (take out of row for 12Ω) can work with a maximum of 5,3W. The next higher value of 9,7W would cause an overload of the speaker!

The power needed from the amplifier is added: 64W + 128W + 5,3W = 197,3W. The amplifier is not able to supply this power. Therefore the power consumption of one speaker has to be decreased. For example, by connecting the 80W 4Ω speaker to the terminals 6 and 4 for 29W (total.: 162,3W).

Connection example 3:

On closer examination of example 2 it is showing that the speakers used, are not work with their optimum power. The speaker 180W 2Ω can only work with 128W. For a more optimal use, the desired speaker power has to be

included when the impedance will be selected. For example a 100W speaker with an impedance of 4Ω can work optimally with 100W at the terminals 4 and 2.

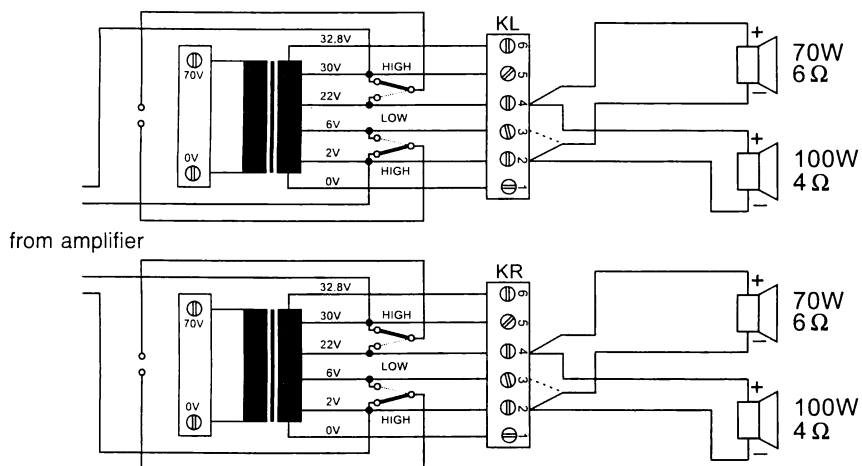


If an outlet power of 170W should be used optimally, it can be effected by connecting one speaker 6Ω 70W to terminals 4 and 2 and one speaker 4Ω 100W to the terminals 4 and 3.

If you have the impression that the speaker 4Ω 100W is too loud it can be connected to the terminals 4 and 3. Due to that it will work only with maximum 64W, the sound would be reduced.

CAUTION

If you have the impression that the speaker volume is too low it must not be connected to higher power levels as indicated. This will damage the speaker!

Connection of 70V systems:

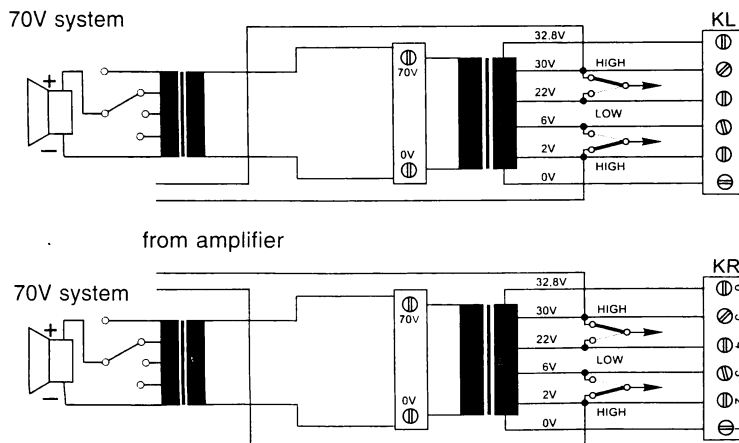

70V systems are intended for transmissions over long distances. They also have their own transformer in front of the speakers. The primary (input-)side of this transformer has to be connected in correct polarity with the 70V terminals of the Wurlitzer output transformer. It is not allowed to consume more power than the amplifier is able to supply (60W or 170W), minus the additional speakers eventually connected to the output transformer. At some 70V - systems the load is capable of variation.


3. Amplifier I84

3.1. Verification of power voltage

CAUTION

Some parts of the electrical circuitry are connected to the power line (power transformer, fluorescent tube, ballast and associated wiring). Never attempt any intervention to these parts unless qualified! Always remove power plug before opening plastic cover!

Machines for USA are set to 117 V. Jukeboxes "UNI-Pack" are shipped in 230 V setting. This is marked on the machine label inside the door. Other machines with indication 100 - 240V on the label have a transparent cover on the power transformer so that the terminals 1 - 3 - 5 - 7 - 9 indicate the actual power voltage setting. The following combinations are possible:

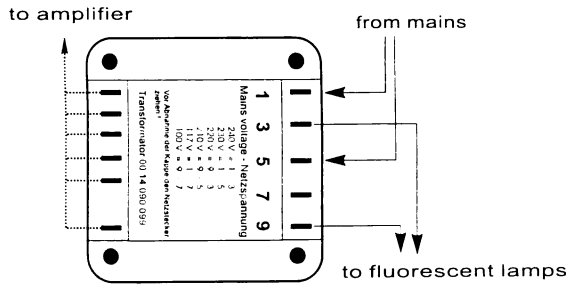


- 240 V = 1 and 3
- 230 V = 1 and 5
- 220 V = 9 and 3
- 210 V = 9 and 5
- 117 V = 1 and 7
- 100 V = 9 and 7

IMPORTANT

The power supply for the fluorescent lamps is 230V. Always connect their wires to the pins 1 and 5 of the transformer.

The power consumption in standby is approx. 190W. With max. volume it is approx. 250W.

3.2. Fuses. Which one controls what circuit?

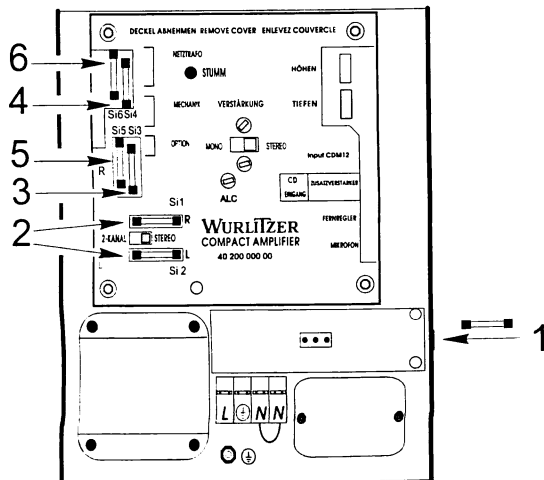

Usually the machines are fitted with fuses of DIN 41571 (5x20 mm) slow blow. Slow blow fuses of DIN standard bear the letter T (T = "Träge"), hence T 3,15 is the proper type to be used. All fuses in the amplifier are rated T 3,15 250V.

The open holders of the LT fuses are capable to hold either 5x20 mm fuses of DIN 41571 standard or fuses of 6x30 mm size. Fast and medium blow fuses are unsuitable for the machine.


Only exceptions are countries with 110/117 V supply where a fast blow fuse of 6,3 Amps (F 6,3 of 6x30 mm size) is used for the primary main fuse.

Fuse	Failure
01. Powerfuse: T 3,15 ; for 110/117 V: F6,3A.	No illumination, jukebox completely dead.
02. Fuses Si1 and Si2: Speaker fuses	No sound on LH channel (Si1) or RH channel (Si2); the reason for a blown fuse here might be a shorted power transistor.
03. Fuse Si3: supply -30 V to ground	Green LED on the amplifier does not light. After power on the jukebox does not initialize itself. After some seconds the fuse Si4 blows too. No function. In some cases the display shows the code 254 - total error.
04. Fuse Si4: supply +30 V to ground	Amplifier is muted, even though the red LED (mute) is off. After power on the jukebox does not initialize itself. No function.
05. Fuse Si5: supply +12 V=	SCC unit dead - digital display dark (except red LED M still lighting up on coin insertion). The LED's K and Z are dark too. After power on the jukebox does not initialize itself.
06. Fuse Si6: supply 30V ~	The one figure display on the CD player is dark . The power supply for the CD player is interrupted. Credit circuit via LED M is interrupted. If credits still exist or free play is set a CD will be placed on the turntable but does not spin. After approx. 1 min. the CD will be taken back. If no credit exist no CD's will be placed on the turntable, the display flashes.


3.3. Maximum amplifier load and external speakers of I84

The amplifier may not be loaded with more than 4 Ω per channel! **Less Ohms means more load!** If the amplifier is operating in 2-Channel mode, pay attention that the speakers of the normal terminals are all loaded to the left hand channel. For example, if you have connected one 4 Ω speaker to each channel in stereo mode both speakers will be switched in parallel to the left hand channel causing there an overload of 2 Ω . To avoid this disconnect one speaker before you switch the amplifier to 2-Channel mode.

In 2-Channel mode the right channel is switched to the sockets "R-Extern" and "L-Extern". The output to a 4 Ω load is 70 Watts sinus power at 1 % distortion, to 12 Ω it is about 24 Watts, to 24 Ω it is about 12 Watts. That means, that e.g., a 12 Ω speaker must be a type of at least 24 Watts, otherwise the speaker is in danger of destruction at higher volumes. Note that speaker groups like in hi-fi boxes may have, at certain frequencies, impedances much lower than their rating!

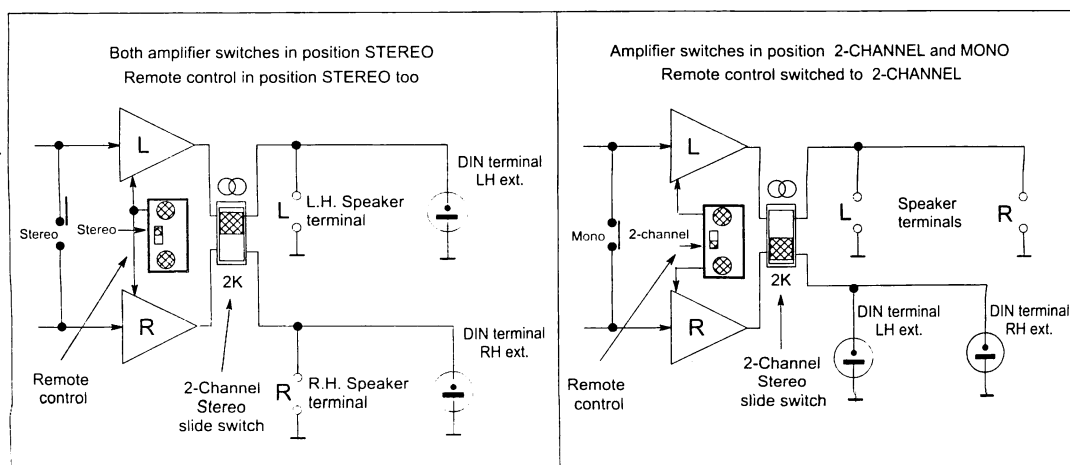


3.4. 70 V output transformer (part no. 0006926)

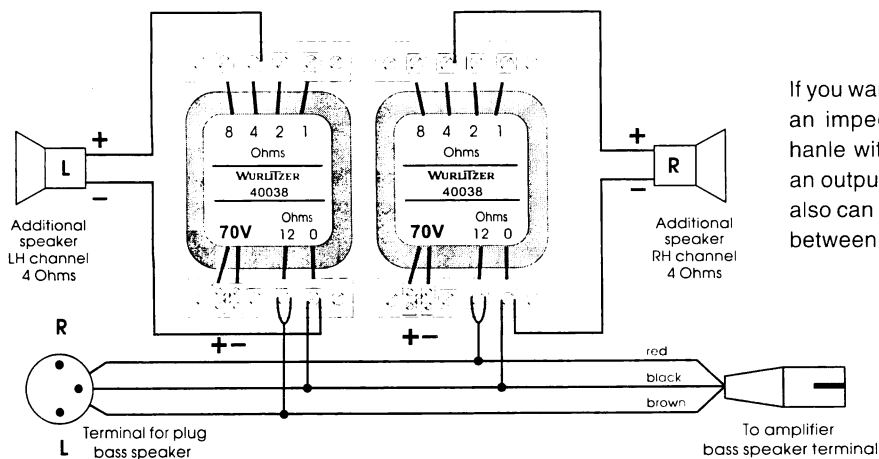

If you want to connect external speakers with an impedance of less than 4Ω or want to handle with 70 V systems on long distances an output transformer is deliverable. So you also can connect speakers with impedances between 1Ω and 12Ω additionally:


3.5. The option feature of the I84 infrared remote control

Installing the continuous play option for the OPTION button:

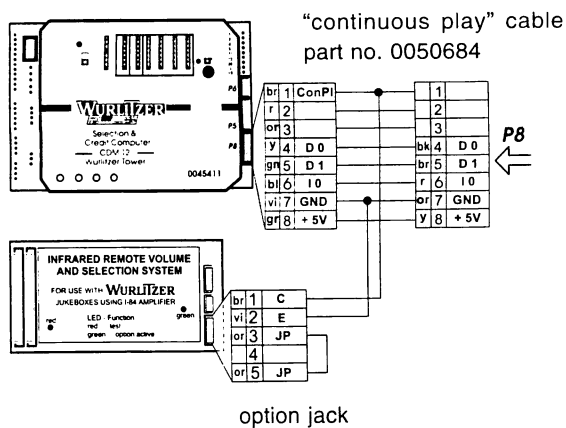


- Insert the 5 pin plug of the “continuous play” cable into the jack marked “Option” on the infrared remote control box. Remove plug P8 of the RH side of the SCC unit and insert the 8 pin plug of the opposite end of the cable into jack P8. Insert P8 itself into the socket of the cable. If your machine is equipped with a continuous play switch it can be connected in series. So insert at first the continuous play switch into the jack marked “P8” and then the plug of the cable into the bottom jack of the continuous play switch.
- Whenever the OPTION button is pressed the continuous play mode is started. Pressing the button again will turn off the continuous play feature. Whenever the power is interrupted to the jukebox, the continuous play feature is automatically turned off.

Installing the “add credit” option for the OPTION button:

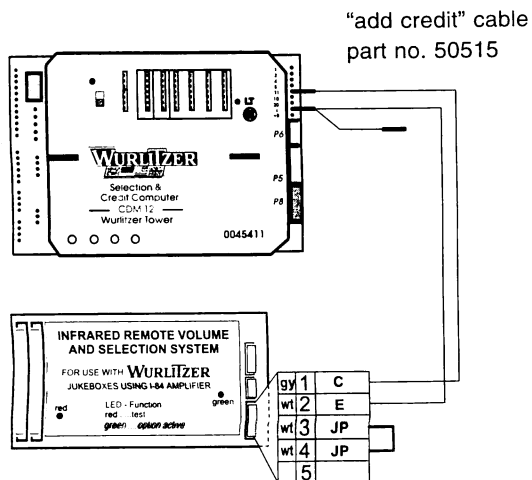

- For this option a different option cable is used. This cable must be purchased separately (part no. 50515). Each time the OPTION button on the hand transmitter is pressed, the unit will add 1 credit to the jukebox.
- Insert the 5 pin plug into the jack marked “Option” on the infrared remote control box. At the top RH side of the SCC unit remove the plug inserted into the pin marked “1”. Insert the black plug from the white wire of the gray/white cable onto this now empty jack. Connect the black plug previously removed onto the free pin connected to the gray/white cable. Remove the black plug connected to the pin marked “T1”. Connect the black plug on the gray/white cable to the pin marked “T1”.

4. Programming short view

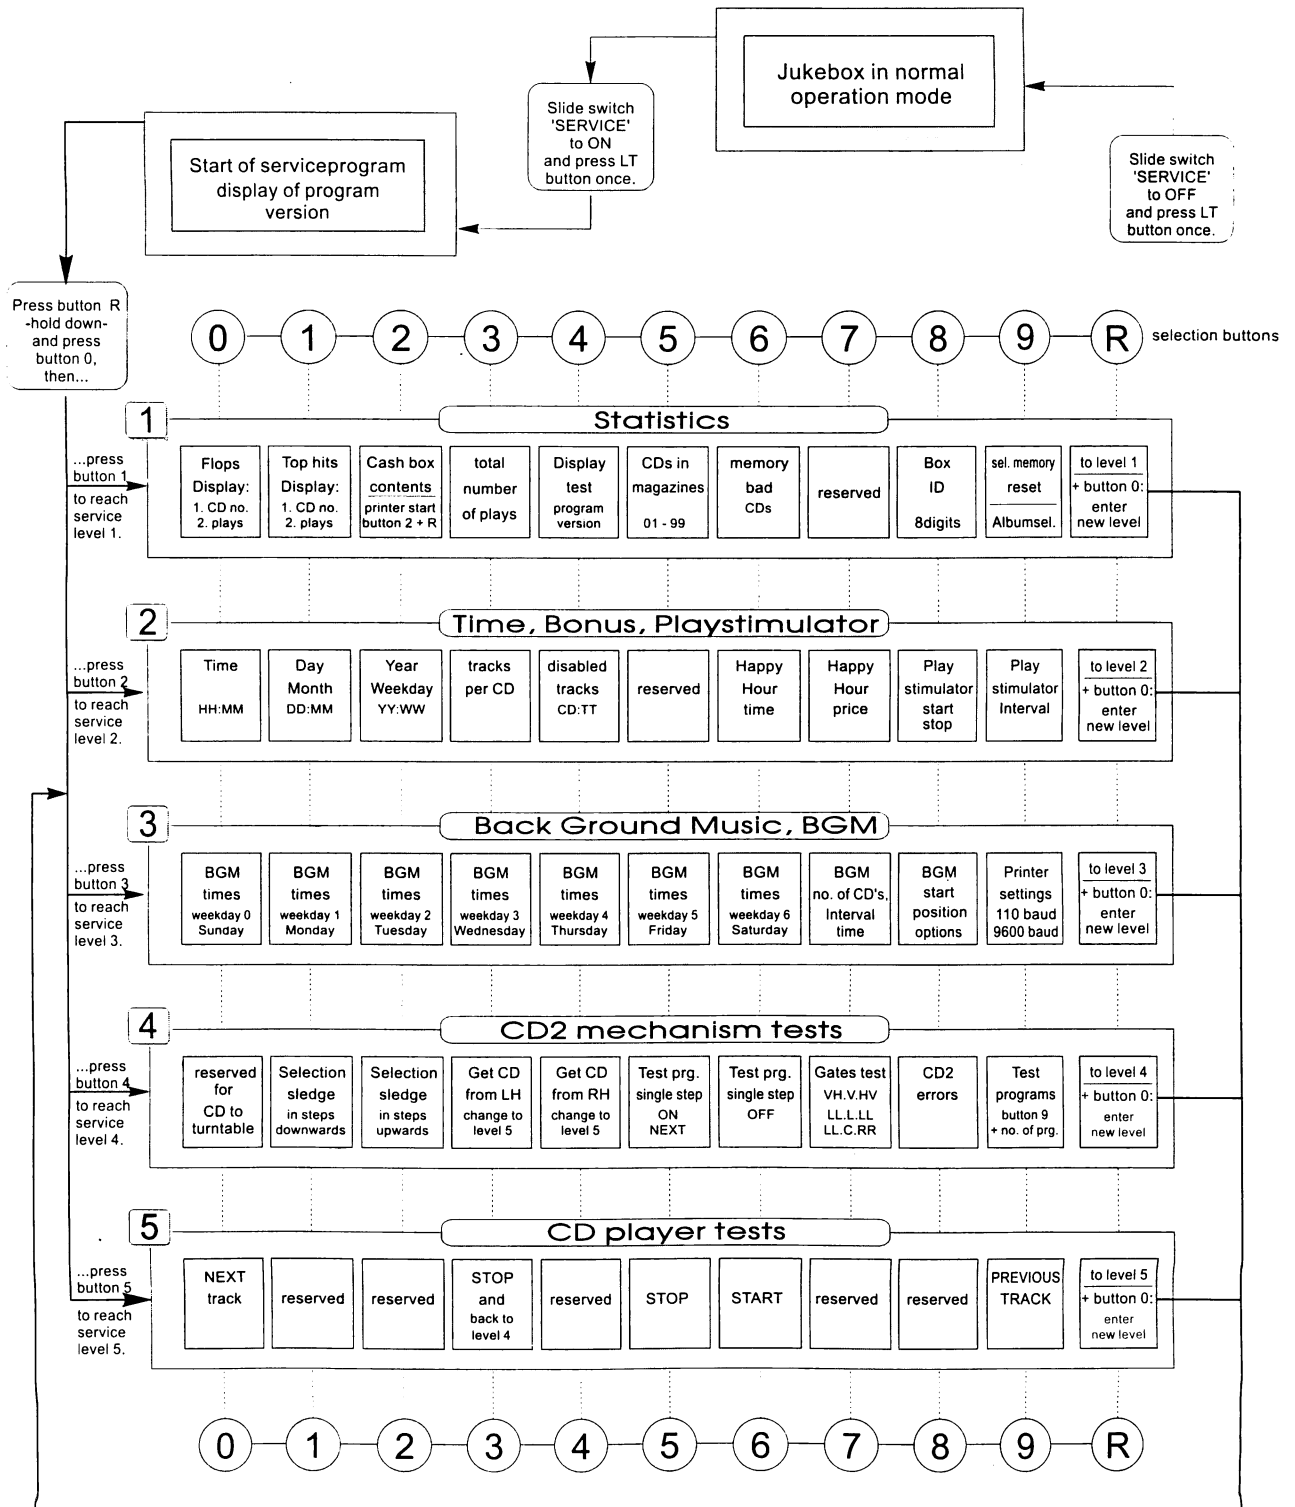


Programming: Press according button - hold down - and press selection button R, release both buttons and enter the new value.

5. Jukebox programming

Additional features like Playstimulator, BGM time and Happy Hour time are programmable. These features are programmable in the service mode of the SCC unit.

5.1. Calling service programs

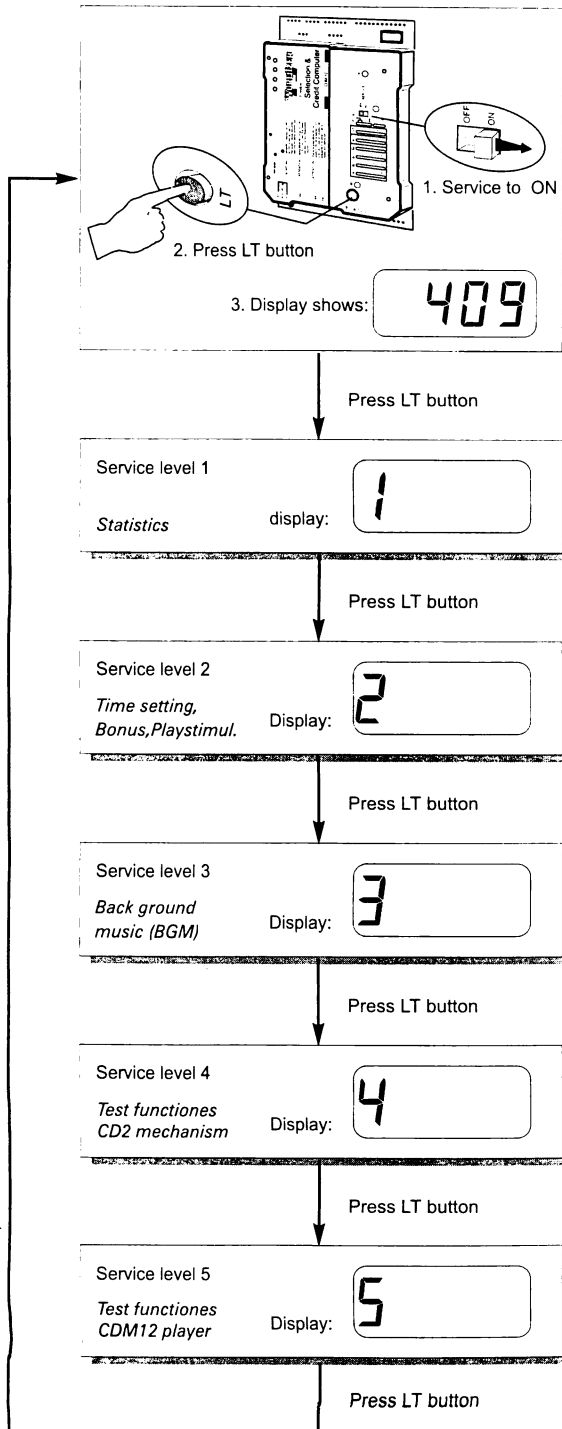


Hint:

To keep the data stored when power is off the plug "Memory" must be set to "ON" position on the SCC unit, otherwise all programmed data in service levels are reset when power is interrupted.

Calling service programs:

Set slide switch "Service" from position OFF to ON, then press the LT button. After an initialization run the display will show the actual jukebox (SCC) program version (e.g.: in the display 4.08) and gives a message whether the magazines are installed properly.

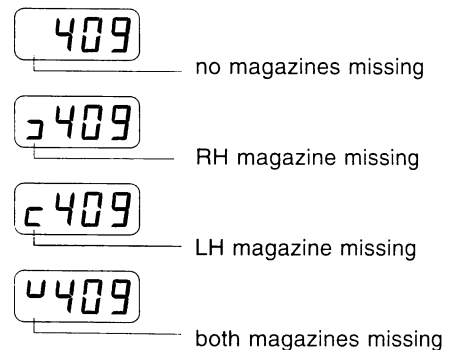

Calling service levels:

By pressing the LT button. The display shows the actual service level number in the LH digit. Each option can be called by pressing the according selection button.

Calling a certain service level (recommended method):

Press selection button R - hold down - and press selection button 0. Release both buttons. The display is dark. Enter the number of the desired service level.

Exit:

Set the slide switch 'SERVICE' to OFF and press the LT button once.


5.3. Programming of the Playstimulator (random selections without coin insertion)

In service level 1 button 5 (ref. to chapter 2.5., page 11 of the enclosed OPERATING INSTRUCTIONS) the actual number of CD's in the magazines is registered. If the playstimulator is programmed the jukebox plays random tracks of these CDs. Exeption: CDs declared as BGM CDs (ref. to chapt. 5.4., page 46) will not be used! The time between the last track played by inserted money

and the first random track of the playstimulator is programmable from 1 up to 98 min. This time is also the repeat time between two random plays. The volume is the same as in normal operation. If a selection is made the paystimulator will be interrupted immediately and remains after having played the selected tracks.

5.3.1.Repeat time programming

Level 2	Button 9
---------	----------


 **IMPORTANT**

The playstimulator only works

- if Back Ground Music is not activated at the same time
- if time is programmed correctly
- if no credit left

1. Set the slide switch 'SERVICE' at the SCC unit to ON.
2. Press 'LT' button. Display shows e.g.: _ 4 0 9 (409 or higher = SCC program version)
3. Press selection button R -hold down- and press selection button 0 then release both buttons. The display is dark.
4. Press selection button 2. Service level 2 is reached. Display is: 2_ _ _.

Example:

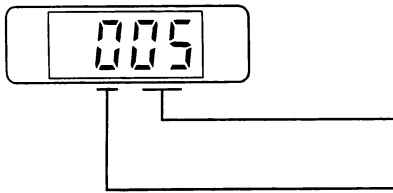


Press selection button 9. The display shows three digits.


Repeat time is set to 5 minutes.

This digit enables or disables the CONTINUOUS PLAY MODE, random tracks one after another.

 - 0 = CONTINUOUS PLAY OFF,
- 1 = CONTINUOUS PLAY ON




Continuously playing of random tracks.

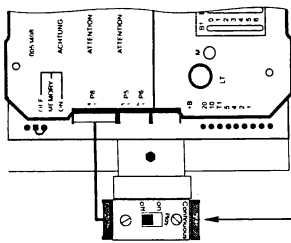

CONTINUOUS PLAY switch

Playstimulator operating modes:

 - You can set the jukebox in an easy way to CONTINUOUS PLAY MODE by programming the digit CONTINUOUS PLAY to '1'. An additional programming of the clock and the start and stop time is not necessary.
- By means of an optional installed switch you can also switch the box to CONTINUOUS PLAY MODE without any need of entering the service program. Part number of this switch is 0034410. It has to be connected to P8 of the SCC unit.
- A more precise programming in conjunction with the internal clock and the start, stop and repeat time is possible if the digit CONTINUOUS PLAY is set to '0'. A correct programming of all these items is necessary.



no random plays



Continuous random plays, however in conjunction with start and stop time.



After a played random track the jukebox waits about 5 minutes before it starts the next one. Random tracks will

only be played in the time between start and stop time. The programming of this 'time window' is described as follows.

To program press selection button 9 -hold down- and press selection button R. Release both buttons. Now enter the digit for CONTINUOUS PLAY and the REPEAT TIME with three digits.


To check the settings: Press button 9 again.

5.3.2. Programming start and stop time


Level 2

Button 8

 
If start and stop time is programmed the jukebox only plays random tracks in this time period.



 
Press selection button 8. The display shows at first a flashing 1. This means 'start time'.



 Then the time will be displayed, here 14.05 o' clock (2.05 p.m.).



 Press selection button 8 once again. The display shows now a flashing 2. This means 'stop time'.



Then the time will be displayed, here 18.30 o' clock (6.30 p.m.).

To reprogram press selection button 8 - hold - and press selection button R. Release both buttons. The digital display goes dark. Enter the start and stop time with eight digits.

Example: The jukebox should play random tracks from 09.00 in the morning to 17.00 in the afternoon.

Enter:

0 - 9 - 0 - 0 - 1 - 7 - 0 - 0

stop time

start time

Then press selection button R.

The display shows 2 _ _ _ .

To check the start time:

Press selection button 8.

To check the stop time:

Press selection button 8 again.



IMPORTANT

You can not program the Playstimulator over 24.00 o'clock (e.g. 23.00 to 2.00 o'clock) !

If the Playstimulator does not work:

Check if:

- the clock is set correctly ?
- start and stop time is programmed?
- repeat time is set correctly (not 0)?
- BGM play mode is disabled (ref. to next chapter).
- credits are still in memory.

Exit the serviceprogram:


1. Set the slide switch 'SERVICE' at the SCC unit to OFF.
2. Press 'LT' button.

The changer starts an initialisation run. After this the jukebox is ready to operate.

5.4. Back Ground Music

Level 3	
---------	--

Amplifier F91

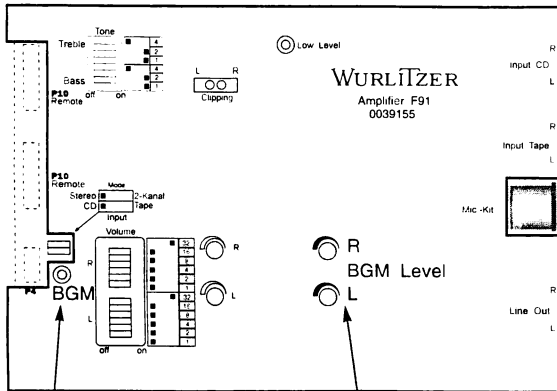

BGM light emitting diode (yellow), indicates whether BGM is active.


pots to reduce the BGM volume

If BGM is programmed and activated a random track from the CDs declared for BGM will be played. The time between the last selected played track and the first BGM track is programmable between 1 and 98 minutes. This time is also the repeat time between two BGM tracks. The volume by BGM reproduction is reduced compared to the common volume. It is adjustable with the two BGM pots (RH channel / LH channel) on the amplifier (F91) res. with the pots on the BGM level adapter (I84). BGM mode is active when the LED on the amplifier (F91) or on the level adapter lights (I84). The source of the BGM control signal is the SCC unit plug brown (X6), pin 1. Once the BGM mode is activated, then it is not possible to operate the Playstimulator.

If a selection is made by means of coin insertion the track being played will be interrupted immediately. Two intervals can be programmed for each weekday.

Amplifier I84

BGM light emitting diode (red), indicates whether BGM is active.

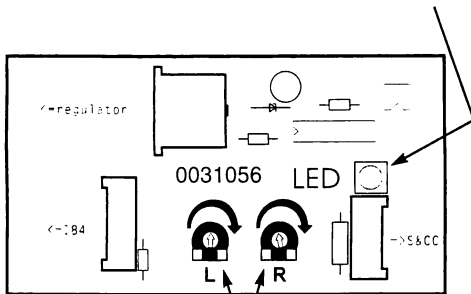


pots to reduce the BGM volume

To enable BGM (service program, level 3) :

1. Set the slide switch 'SERVICE' at the SCC-unit to ON.
2. Press 'LT' button.
3. Press selection button R -hold down- and press selection button 0 than release both buttons.
4. Press selection button 3. Service level 3 is reached. Display is: 3_ _ _.

5.4.1. Number of BGM CD's and BGM repeat time

Level 3	Button 7
---------	----------

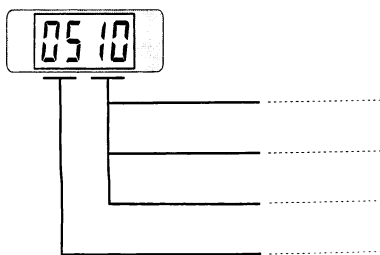

Example:
5 CD's reserved for BGM
repeat time 10 min.

Press selection button 7 the diplay shows e.g.:

repeat time between the single BGM tracks (10 min.)

BGM-continuous play = 99

BGM OFF = 00


number of BGM CD's; disabled for playstimulator!
(The position of the first BGM CD will be programmed in the next step; ref to sec. 5.4.2)

To program press selection button 7 -hold down- and press selection button R. Release both buttons. The display goes dark. Enter the number of CD's and the repeat time by means of the selection buttons with 8 digits.

5.4.2. Start position for BGM CD's and configuration

Level 3

Button 8

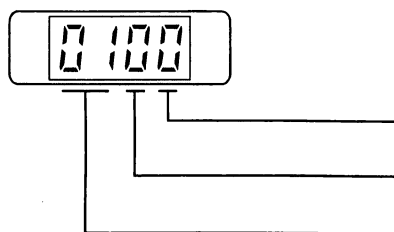

Press button 8. The start position of the BGM CDs is displayed in the left two digits. The RH digit indicates the actual BGM mode.

BGM mode

not used, always 0

start position of BGM CD's

You can determine the digit for the BGM mode as follows:

BGM mode	selection
You want to select BGM CDs by coin insertion too:	yes -> 0; no -> 1
You want that the jukebox plays BGM-CDs also if credit still exists:	yes -> 2; no -> 0
BGM start position over 100:	yes -> 4; no -> 0

Select the desired features and add the according code numbers. Enter the sum of the code numbers as the mode digit.

Example:

BGM-CD's not selectable by coininsertion . . . = 1

BGM-CD's should not be played at still existing credits = 0

BGM start position over 100 = 4

Mode number = 5

To **program** press selection button 8 - hold - and press selection button R. The digital display goes dark. Enter start position followed by a '0' and the BGM mode digit with 4 digits!

**IMPORTANT**

If a wall box is connected the BGM selection option must be set to 0 (yes).

After entering this data the SCC unit calculates the BGM end position itself. For loading of BGM discs the end position can be calculated as follows:

end position = start position + number of BGM-CDs - 1.

5.4.3. BGM time zones at different weekdays

Level 3	Buttons 0-6
---------	-------------

You can program each weekday differently with two intervals per day. The following steps are the same for the buttons 1 to 6 in service level 3 according the table for weekdays.

1. Press button 0, the display shows flashing:



0 (LH) = Sunday
1 means start time one



then the time will be displayed, here 9.00 o'clock

2. Press selection button 0 again, the display shows flashing:



0 (LH) = Sunday
2 means stop time one



then the time will be displayed, here 12.30 o'clock

3. Press selection button 0 again, the display shows flashing:

 


0 (LH) = Sunday
3 means start time two




then the time will be displayed, here 20.00 o'clock

4. Press selection button 0 again, the display shows flashing:



0 (LH) = Sunday
4 means stop time two

 


then the time will be displayed, here 23.45 o'clock

Table of weekdays:	
0 = Sunday	4 = Thursday
1 = Monday	5 = Friday
2 = Tuesday	6 = Saturday
3 = Wednesday	

To program press selection button 0 (or button 1 - 6 depending on the weekday to be programmed). The digital display goes dark. Enter the two time zones in four blocks containing four digits per block one after another (16 digits).

Meaning of the digits to be entered in the example.

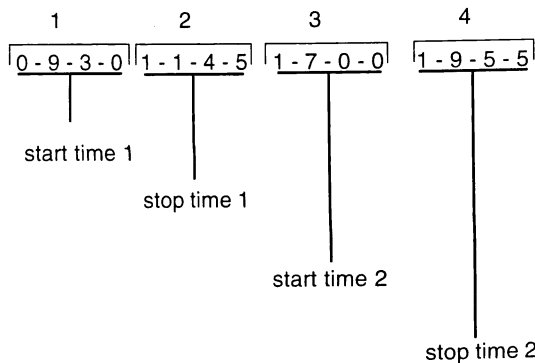

Examples:

The jukebox should play BGM on Tuesday from 9.30 to 11.45 and from 17.00 to 19.55. To program press selection button 2 - hold - and press selection button R. The digital display goes dark. Then enter 0-9-3-0-1-1-4-5-1-7-0-0-1-9-5-5.

If the jukebox should play BGM on Wednesday from 17.00 to 19.55 only, then program on selection button 3 as described: 1-7-0-0-1-9-5-5-0-0-0-0-0-0-0-0. The second time zone has to be filled with zeros. Also this programming is possible: 0-0-0-0-0-0-0-0-1-7-0-0-1-9-5-5.

Repeat this procedure until all weekdays are programmed (selection buttons 0 to 6).

5.5. Happy hour pricing (additional bonus plays)

During the 'Happy hour' time additional bonus plays can be given. Happy hour time zone and number of additional bonus plays have to be programmed before.

5.5.1. Programming of the happy hour start and stop time

Level 2	Button 6
---------	----------

1. Set the slide switch 'SERVICE' at the SCC unit to ON.
2. Press 'LT' button. Display shows e.g.: _ 4 0 9 (409 or higher = SCC program version)
3. Press selection button R -hold down- and press selection button 0 than release both buttons. The display is dark.
4. Press selection button 2. Service level 2 is reached. Display is: 2_ _ _.

5. Press selection button 6. The display shows flashing:

 


1 means start time




then the start time will be displayed with four digits e.g.: 9.00 o'clock

6. Press selection button 6 again. The display shows flashing:



2 means stop time

 


then the stop time will be displayed with four digits e.g.: 12.30 o'clock

7. To reprogram press selection button 6 - hold - and press selection button R. The digital display goes dark. Enter the 'Happy hour' start and stop time with 8 digits. After complete entry the digital display is dark. Example: "Happy Hour" should operate from 09.05 to 11.00 o'clock. Enter 8 figures: 0 - 9 - 0 - 5 - 1 - 1 - 0 - 0 .
8. To check the settings: Repeat the steps 5 and 6 .

5.5.2. Programming of the additional bonus plays

Level 2	Button 7
---------	----------

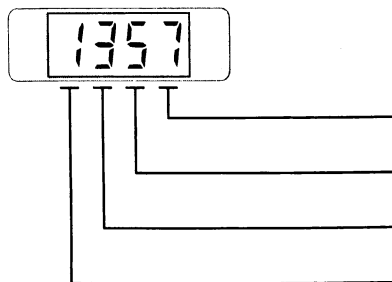

1. Press selection button 7. The display shows e.g.:
 - 7 additional plays at bonus level 1 (B1).
 - 5 additional plays at bonus level 2 (B2).
 - 3 additional plays at bonus level 3 (B3).
 - 1 additional plays at bonus level 4 (B4).
2. To reprogram press selection button 7 - hold - and press selection button R. The digital display goes dark. Enter the new happy hour pricing with 4 digits.
3. To check the new setting, press selection button 7 again.
4. To exit the service program set the slide switch 'SERVICE' to OFF and press button LT on the SCC unit.

5.6. Number of tracks played successively on the same disc


Level 2

Button 3

The display shows the maximum number of tracks played successively from the same disc if more tracks had been selected. Preset value = 04 tracks, i.e. after four tracks from this CD it will be taken back to the magazine, and the next CD stored in the selection memory will be played.

To call the service program (level 2):

 1. Set the slide switch 'SERVICE' at the SCC unit to ON.
2. Press 'LT' button. Display shows e.g.: _ 4 0 9 (409 or higher = SCC program version)
3. Press selection button R -hold down- and press selection button 0 than release both buttons. The display is dark.
4. Press selection button 2. Service level 2 is reached. Display is: 2_ _ _.
5. Press selection button 3 the display shows e.g.:



04 is factory pre setting for number of tracks played successively on the same disc.

If selections still exist for the previous CD they will be played later. This option to limit the tracks played from one CD is more useful for operators. For individual use this value can be set up to 99.

If you set this value to 01 all selections will be played in selection order.

6. To program press selection button 3 - hold - and press selection button R. The digital display goes dark. Enter the desired setting by means of the selection buttons with two digits.
7. To check the settings: Press selection button 3 again.
8. To **exit the service program** set the slide switch 'SERVICE' at the SCC unit to OFF and press the 'LT' button once. The changer starts an initialisation run. After this the jukebox is ready to operate.

5.7. Selective disabling of tracks


Level 2

Button 4

You can disable up to maximum 25 different tracks of different CD's. If somebody selects a disabled track the digital display flashes. This shows that this track is not selectable. Note a special peculiarity at playstimulator or BGM operation. The random procedure always selects tracks out of a number of 25. If the random selected

To disable tracks (service program level 2):

 1. Set the slide switch 'SERVICE' at the SCC-unit to ON.
2. Press 'LT' button.
3. Press selection button R -hold down- and press selection button 0 than release both buttons.
4. Press selection button 2. Service level 2 is reached. Display is: 2_ _ _.
5. Press selection button 4 the display shows e.g.:



track number
CD number

Each operation of selection button 4 indicates the next disabled track, maximum 25 tracks.

After having reached the last disabled track, the first one is indicated again. If the display shows 0000 after the first button operation no track is disabled.

6. **To program:** Press selection button 4 - hold - and press selection button R. The digital display goes dark.

track exceeds the number of tracks on the CD the procedure starts to count from the beginning of the CD. Result is, if you want to disable e.g. track 8 on a CD with 17 tracks you also have to disable track 23 on this disc even if it does not really exist.

7. Enter at first the number of the CD to disable followed by the track (total four digits).
8. To disable the next CD/track, press selection button 4 as often as display shows 0 0 0 0 .
9. Press selection button 4 again - hold - and press selection button R. The digital display goes dark. Then enter CD and track to disable. Continue programming for the next track with step 8.
10. To check the disabled tracks: Press selection button 4 again (up to 25 times, at 25 disabled tracks).
11. To **exit the service program** set the slide switch 'SERVICE' at the SCC unit to OFF and press the LT button.

To enable a disabled track:

When a track is indicated, press button 4 - hold - and press selection button R and enter first the number of the CD followed by 0 0.

To enable all disabled tracks:

Press selection button 4 -hold down- and press selection button R. Then enter 0 0 0 0 (4 times 0).


5.8. Location or Identification number

Level 1	Button 8
---------	----------


A location or identification number of 8 figures can be programmed as a customer or individual machine number.

To enter the number (Service program, level 1):

 1. Set the slide switch 'SERVICE' at the SCC-unit to ON.
2. Press 'LT' button.
3. Press selection button R -hold down- and press selection button 0 then release both buttons.
4. Press selection button 1. Service level 1 is reached. Display is: 1_ _ _.
5. Press selection button 8, the display shows flashing:




1 means higher digits

 

Then the four higher digits will be displayed with 4 figures.

 6. Press selection button 8 again, the display shows flashing:



2 means lower digits



Then the four lower digits will be displayed with 4 figures.

In this case the Id number is 8 5431 049.

7. To reprogram press selection button 8 - hold - and press selection button R. The digital display goes dark. Then enter the complete number with 8 digits.
8. To check the settings: Press selection button 8 again.
9. To **exit the service program** set the slide switch 'SERVICE' at the SCC unit to OFF and press the LT button.

5.9. Album selection and memory reset by power off


Level 1	Button 9
---------	----------

By setting the corresponding digit to 0 or 1 these options are available.

Album selection is possible by entering the disc number followed by 0 0 (track 0 0). All tracks on the CD are played, starting with the first track. An album is only selectable by coin insertion, if credits of the 4th bonus level have been obtained or in free play modus (link in row GP from 0 to F on the SCC unit) of the jukebox.

To alter the settings (Service program, level 1):

 1. Set the slide switch 'SERVICE' at the SCC-unit to ON.
2. Press 'LT' button.
3. Press selection button R -hold down- and press selection button 0 then release both buttons.
4. Press selection button 1. Service level 1 is reached. Display is: 1_ _ _.
5. Press selection button 9, the display shows e.g.:



digit for albumplay; 1 = ON, 0 = OFF


digit for memory reset by power off; 1 = ON, 0 = OFF

Memory reset feature will cancel remaining credits and selections by power off of the jukebox.

This option prevents the jukebox playing pre-selected tracks from the day before. (The jukebox was switched off in the night, not playing all the selected tracks.)

6. To alter the settings press selection button 9 - hold - and press selection button R. The digital display goes dark. Then enter the desired setting with two figures.
7. To check the settings: Press selection button 9 again.
8. To **exit the service program** set the slide switch 'SERVICE' at the SCC unit to OFF and press the LT button.

6. Data retrieval

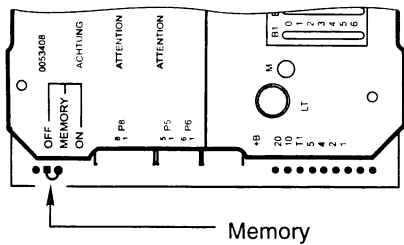

The data retrieval memory keeps only data if the plug 'MEMORY' is always in the position ON (on the bottom side of the SCC unit).

6.1. Operator data


You can retrieve the statistical data for operators in the service program level 1 over the display or with a printer.

1. Set the slide switch 'SERVICE' at the SCC-unit to ON.
2. Press 'LT' button.
3. Press selection button R -hold down- and press selection button 0 than release both buttons.
4. Press selection button 1. Service level 1 is reached. Display is: 1_ _ _.

6.1.1.Retrieval of least popular discs (flops)

Level 1	Button 0
---------	----------

1. Press selection button 0 once.
At first the least played CD is shown. The last two digits are simply a code confirming the least played status. The display counter flashed alternately the disc number and then the number of plays e.g.:

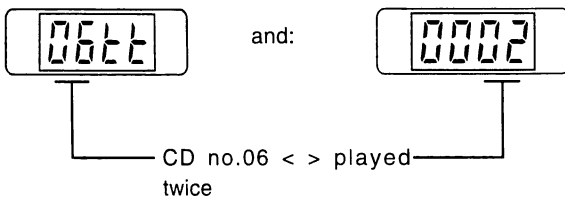


If the counter shows 0 0 0 0, this means the disc had not been played. Press selection button 0 to continue the process for the second least played disc, and so on. At first the CD with the lowest number of plays will be displayed, with the next operation of selection button 0 the CD with the second lowest number of plays etc. If the calculation needs a little longer a '1' scrolls starting from RH. digit over the display.

2. To cancel the procedure press selection button R.

6.1.2.Top Tunes

Level 1	Button 1
---------	----------

1. Press selection button 1 once.
The display counter flashes alternately the number of the most played CD and then the number of plays. For example:

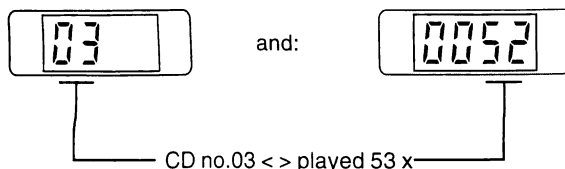

Only 63 selections per CD can be stored in memory. So if a CD have been played more than 60 times all the other values will be decreased by 1. Then the displayed values are only relative.

Press selection button 1 to continue the process for the second most played CD, and so on.

The most frequently played track will also be displayed as HIT OF THE HOUSE in common operation.

6.1.3. Cash box contents

Level 1	Button 2
---------	----------

1. Press selection button 2 once. Digital display shows the cash box contents in basic units; basic units being the value of the lowest coin value.
2. To cancel the procedure press selection button R.


6.1.4. Total number of plays

Level 1	Button 3
---------	----------

1. Press selection button 3 once. Display shows the total number of plays since last reset (maximum 9999).
2. To cancel the procedure press selection button R.

6.1.5. CLEAR ALL counters (reset to 0 0 0 0)

Level 1	Button 3 + Reset
---------	------------------

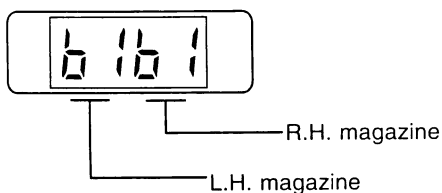

1. Press selection button 3 - hold - and press selection button R (reset).
The counters belonging to the buttons 0 to 3 (least popular disc, most popular disc, cash box and total plays) are cleared and reset to 0 0 0 0.

After leaving the service program the jukebox initializes itself, during this procedure the compartments in the magazines will be counted. At the end of the initialization the display should show 6161 for a short time. If lower numbers are displayed not all compartments have been detected correctly. The sequence of top discs is for the time being 01, 02, 03, 04 etc.

2. To exit the service program first set service switch to OFF and then press the LT button.


6.1.6. Memory of not playable CDs

Level 1	Button 6
---------	----------

Careful handling of the CDs does not completely exclude that CDs may be damaged in different ways. Possibly the player would interrupt this CD at each selection. The SCC provides a watch dog function which finds and memorizes these difficult to play.


The SCC unit can store the numbers of up to six not playable CDs. Once a CD is registered every new try will be counted. So it is possible to find out bad discs and change these for new ones.

 1. Press selection button 6, the display shows flashing:



1 means first defektive CD

than e.g.:

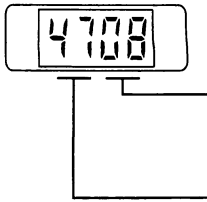

NUMBER of times the CD was not playable or interrupted

CD number

2. Press selection button 6 to display the next not playable CD, etc. After displaying the 6th not playable CD and pressing selection button six the display starts with the first one again.


3. To CLEAR this memory press selection button 6 - hold - and press selection button R.

4. To exit the service program, first set service switch to OFF and then press LT button.

6.1.7. Statistic print-outs

Level 1	Button 2 + Reset
---------	------------------

For data retrieval a printer can be connected to a receptacle located in a wire loom underneath the SCC unit:

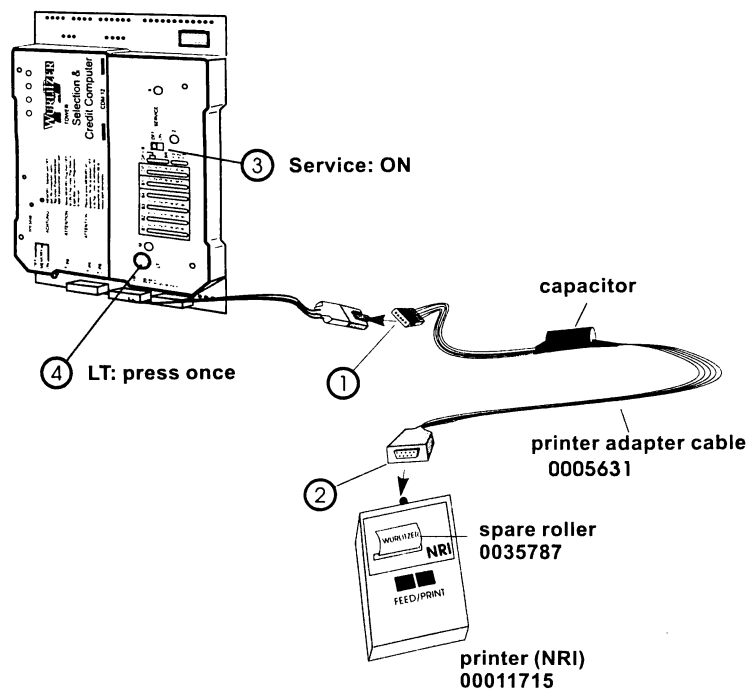

1. Connect printer adapter cable (Part No. 0005631) with receptacle underneath the SCC unit.
2. Connect printer (part no. 0011715) with the printer adapter cable.
3. Enter the service program by setting the service switch to ON position.
4. Press LT button on the SCC unit. Display may show i.e.: _409= SCC program version, may be higher too
5. Press selection button R -hold down- and press selection button 0. The display is dark.
6. To reach service level 1, press selection button 1. Display shows 1 _ _ _.
7. Press selection button 2 - hold - and press button R, the print-out starts.

The following information will be reported:


=====	
WURLITZER	
COMPACT-DISK	
JUKE-BOX	
S+C-COMPUTER	
=====	
PREV. DATE:	Date and time of the previous print out
22.04.96	
09:11	
ACTUAL DATE:	Date and time of current print out
21.01.98	
13:37	
PRINT: 0001	No. of print out
IDENT:	
00000000	Identification number (service level 1, selection button 8)
---SETTINGS---	
=====	
CDBOX: 04.09	Program version number
BOX TYPE:120	max. number of CD's in magazines
BONUS-1 : +1	
BONUS-2 : +1	Jumper setting
BONUS-3 : +1	on the SCC unit
BONUS-4 : +2	
BONUS-STEP:5	row BS
CREDITSTEP:2	row GP
BONUS- RESET	jumper BR
DISCS : 86	Programmed number of CDs in carrier (service level 1, selection button 5)
MINUTES : 01	Programmed repeat time for playstimulator.
-STATISTICS-	
=====	
CASH : 0401	Total income in basic units since last reset..
PLAYS: 0132	Total plays since last Reset.
TOTAL:000401	Total income, not resetable.
CHECK: 2272	Safety number.
-TOP-DISKS--	
=====	
CD :01 =0017	
CD :12 =0008	Shows all discs in carrier (max.100);
CD :30 =0007	and the number of plays.
CD :10 =0006	Top disc is shown at first, least popular disc or
CD :20 =0005	non played discs are shown at last.
CD :00 =0000	
:	
CD :50 =0000	
:	
CD :99 =0000	

To leave the service program, first set service switch to OFF and then press LT.

6.1.8. Printer port settings


In service program 3 button 9 you can change the output format of the printer port. Two baud rates are possible. 110 bit/s (factory pre set for NRI printer) and 9600 bit/s (for data transfer with a computer). You can set the number of data bits of 7 or 8. If you select 9600 bit/s you also get additionally to the CD hit list a list about the most played tracks.

Settings for NRI printer

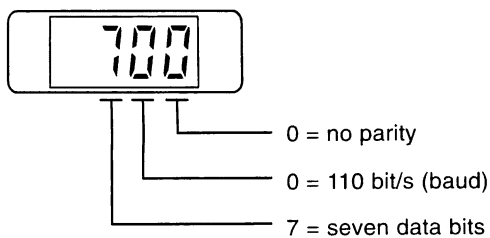


With this settings the data output applies to the open collector output at plug X6-4 of the SCC unit as described in the section 7.1.7. „Statistic print-outs“.

Data output with 9600 Bit/s on plug P5 SCC unit

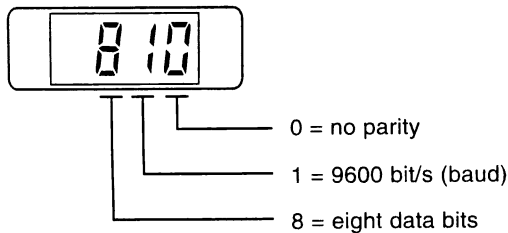

The data output applies to plug P5. Because at this line also applies the communication of the CD-PRO player a special adapter cable is necessary.

Diagram of the printer adapter cable for plug P5 SCC unit

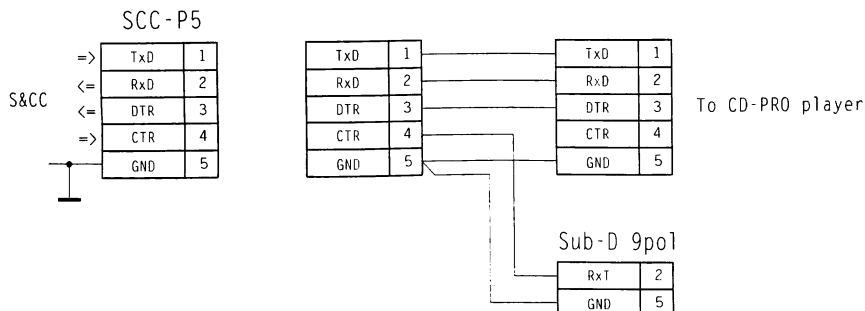

6.2. Service data

Level 4	Button 8
---------	----------

 
Special data for the jukebox service are displayed in service level 4 button 8. By pressing the button 8 several times you can call up the contents of up to 18 different storage locations stored in the below explained statistical values. This data is useful to assess the condition of the jukebox and its mechanism.

1. Set the slide switch 'SERVICE' at the SCC-unit to ON.
2. Press 'LT' button.
3. Press selection button R -hold down- and press selection button 0 than release both buttons.
4. Press selection button 4. Service level 4 is reached. Display is: 4_ _ _.

6.2.1.Retrieval of the last occurred mechanism faults


The SCC unit stores up to 9 of the last occurred mechanism error codes (procedure step codes) If more errors occur the eldest codes will be deleted.

1. Press selection button 8, display shows flashing:



1 = 1st error code

 then e.g.:




1st error code is always 000 (memory check).

2. Press selection button 8 again, display shows flashing:



2 = last occurred error code

 then e.g.:



Error 160: Error when reaching the vertical take out position.

3. Press selection button 8 once more to display the next error code etc. After displaying the 10th code, special values will be displayed (ref to the following chapters).
4. DELETE this data: Press selection button 8 - hold - and press button R.
5. Exit: Press button R.

Procedure step codes for 'CD to turntable':

in rest	in action	meaning
32	160	selection sledge reaches the vertical 'take out position'
33	161	open gripper (before taking a CD)
34	162	move gripper into magazine
35	163	close gripper (get a CD)
36	164	get a CD from magazine an move to the vertical transport level (LH or RH side).
37	165	reach the CD player - move sledge to player unit.
38	166	move gripper to the horizontal player position.
39	167	move sledge with CD to the player.
40	168	open gripper (release CD)
41	169	move gripper out of player range.
42	170	fix the CD with the pressure disc.
43		CD on player, end of procedure.


Procedure step codes for 'CD to magazine':

in rest	in action	meaning
16	144	get vertical sledge position over the player
17	145	move gripper horizontal to take the CD.
18	146	close gripper.
19	147	lift CD.
20	148	move to vertical transport level.
21	149	move sledge to magazine return position.
22	150	move gripper with CD into magazine.
23	151	open gripper.
24	152	move gripper out of magazine.
25	153	move sledge to 0-position.
26		CD is taken back, end of procedure.

6.2.2. Counter for complete mechanism cycles


After the end of each replacing procedure the counter will be incremented. This information given in the steps 11 and 12 of service level 4 button 8 will be displayed with 8 figures. Because of a only four digit display, this value will be displayed in two parts the 4 higher and the 4 lower digits. To display the complete value:

 1. Press selection button 8 as often as, display shows flashing:



11 = next displayed value is the high part of the mechanism counter

 then e.g.:




value, means 1 600 000

2. Press selection button 8 again, display shows flashing:



12 = next displayed value is the low part of the mechanism counter

 then e.g.:




value, means 3 467

In this example the machine has placed and replaced the CD's 1603467 times.

6.2.3. Counter for total number of mechanism faults

Each mechanism error will be counted. This information given in the steps 13 and 14 of service level 4 button 8 will be displayed with 8 figures too. To display the complete value:

 1. Press selection button 8 as often as, display shows flashing:



13 = next displayed value is the high part of the error counter

then e.g.:



 
value

2. Press selection button 8 again, display shows flashing:



14 = next displayed value is the low part of the error counter

then e.g.:




value

In this example 250 errors have occurred.

6.2.4. Counter for total number of power up's

Each power up will be counted. This information given in the steps 15 and 16 of service level 4 button 8 will be displayed with 8 figures too. To display the complete value:

 1. Press selection button 8 as often as, display shows flashing:




15 = next displayed value is the high part of the power up counter

then e.g.:



value

 2. Press selection button 8 again, display shows flashing:



16 = next displayed value is the low part of the power up counter

then e.g.:



 
value

In this example the power was switched on 10023 times.

6.2.5. Counter for total operating time

The operating time displayed in the steps 17 and 18 of service level 4 button 8 will be displayed in minutes with 8 figures too. To retrieve the complete value:

1. Press selection button 8 as often as, display shows flashing:




17 = next displayed value is the high part of the operating time counter

then e.g.:



value

 2. Press selection button 8 again, display shows flashing:



18 = next displayed value is the low part of the operating time counter

then e.g.:



value


In this example the total operating time is 241453 minutes. (approx. 4024 h).

7. Function tests

The function tests are divided in 3 groups. Display test (level 1), mechanism tests (level 4) and player tests (level 5).

7.1. Digital display test / EPROM-version

Level 1	Button 4
---------	----------

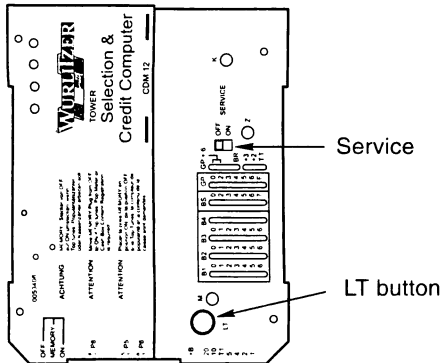

1. Set the slide switch 'SERVICE' at the SCC unit to ON.
2. Press 'LT' button. Display shows e.g.: _ 4 0 9 (409 or higher = SCC program version)
3. Press selection button R -hold down- and press selection button 0 than release both buttons. The display is dark.
4. Press selection button 1. Service level 1 is reached. Display is: 1_ _ _.
5. Press selection button 4. All segments counting 0 to 9 are displayed, then the program version number (EPROM version).
6. To cancel the procedure press selection button R.

7.2. Mechanism single step tests

Service level 4 includes all functions to check the CD-2 mechanism. Single step and continuous tests can be made.

1. Set the slide switch 'SERVICE' at the SCC unit to ON.
2. Press 'LT' button. Display shows e.g.: _ 4 0 9 (409 or higher = SCC program version)
3. Press selection button R -hold down- and press selection button 0 than release both buttons. The display is dark.
4. Press selection button 4. Service level 4 is reached. Display is: 4_ _ _.

7.2.1. Take CD to turntable

Level 4	Button 0
---------	----------

1. Press selection button 0 and enter the desired CD number.
This function is not supported from program versions up to 4.09!

7.2.2. Step selection sledge upwards

Level 4	Button 2
---------	----------

1. Press selection button 2. The button has an auto repeat function.

Each button operation makes the sledge move one step upwards and the display will be increased by 2. Last position is 120.

If both magazines exist, the left one will be used as reference. If the L.H. magazine is missing the other one is used.

7.2.3. Step selection sledge downwards

Level 4	Button 1
---------	----------

1. Press selection button 1. This button has an auto repeat function.

Display shows __ 0 0:

If the display is still 0 0, the selection sledge (german: AusWahlSchlitten - AWS) is located in its lowest position (basic position). So it is impossible to move it further down. It can only be moved if the sledge had been moved up with selection button 2 before. Then the display will also show a greater number as 0 0, e.g.: 22.

Display shows a number greater than 0 0, e.g.: __ 2 4

Each button operation makes the sledge move one step downwards and the display will be decreased by 2. Last position is 02.

7.2.4. Get a CD from LH magazine

Level 4	Button 3
---------	----------



CAUTION

After having taken the CD to the turntable the SCC automatically jumps to service level 5! You only can jump back to SL 4 by pressing the button 3 to run the procedure 'STOP and back to SL 4'.

1. Press selection button 3. A CD is taken from the actual sledge position and placed to the turntable. The service program automatically jumps to service level 5.

7.2.5. Get a CD from RH magazine

Level 4	Button 4
---------	----------



CAUTION

After having taken the CD to the turntable the SCC automatically jumps to service level 5! You only can jump back to SL 4 by pressing the button 3 to run the procedure 'STOP and back to SL 4'.

1. Press selection button 4. A CD is taken from the actual sledge position and placed to the turntable. The service program automatically jumps to service level 5.

7.3. Mechanism continuous tests

Level 4	Button 9
---------	----------

To locate certain faults occurring only from time to time it may be helpful to run continuous tests. During the tests described below, the display shows special procedure step codes. These codes are divided in rest and action codes (ref. to the table opposite).

If the machine stops at a certain point in conjunction with these codes you can determine the point of fault. In this case you should switch off the jukebox and try to find

the reasons of this fault. Then you have to take the selection sledge in its home position by hand. Home position means: The position of the magnetic pressure disc is approx. 1 cm (1/2 ") over the player and the gripper motor stays on the RH side of the pressure disc holder. The LH edge of the gripper holder should align with the RH edge of the pressure disc holder. Then switch on the jukebox it initializes itself.

Test start:

1. Press selection button 9 -hold- and press button R. Release all buttons
2. Press selection buttons 1 ,2 ,3 or 4, according the table 'continuous test procedures'. The continuous test starts.

Test stop:

Press selection button 9.

All continuous tests can be switched to single step mode while running:

Single step - ON: Press selection button 5.

The just running step runs to its end. The machine waits.

Single step - NEXT: Press selection button 5 again. Only the next one step runs. Press button 5 again etc.

Single step - OFF: Press selection button 6.

Continuous test procedures

Selection button 1	CD change test Remove all CD's and insert only the CD's no. 119 and 120!	The gripper takes the CD from compartment 119, takes it to the turntable and back to compartment 099! Now the gripper takes this CD to the turntable and back to compartment 079 e.t.c.. At the end the gripper takes the CD back to comp. 119. The the same procedure starts on the RH side with CD 120. If an error occurs the machine will stop displaying the corresponding error code.
Selection button 2	gripper test	The gripper opens and closes continuously.
Selection button 3	takes the CD no. 30 to and from turntable	
Selection button 4	takes the CD no. 29 to and from turntable	

Procedure step codes

in rest	in action	meanig	
16	144	get vertical sledge position over the player	CD back to compartment
17	145	move gripper horizontal to take the CD.	
18	146	close gripper.	
19	147	lift CD.	
20	148	move to vertical transport level.	
21	149	move sledge to magazine return position.	
22	150	move gripper with CD into magazine.	
23	151	open gripper.	
24	152	move gripper out of magazine.	
25	153	move sledge to 0-position.	
26		CD is taken back, end of procedure.	
32	160	selection sledge reaches the vertical 'take out position'	'CD to turntable'
33	161	open gripper (before taking a CD)	
34	162	move gripper into magazine	
35	163	close gripper (get a CD)	
36	164	get a CD from magazine an move to the vertical transport level (LH or RH side).	
37	165	reach the CD player - move sledge to player unit.	
38	166	move gripper to the horizontal player position.	
39	167	move sledge with CD to the player.	
40	168	open gripper (release CD)	
41	169	move gripper out of player range.	
42	170	fix the CD with the pressure disc.	
43		CD on player, end of procedure.	
48	176	attempt to move the selection sledge to the player	to initialize
49	177	initialize the magazines (count to 6161).	
50	178	move the sledge to the player, after initialization.	
80	208	close gripper	gripper
81	209	open gripper	
	112	check sum error in memory for CD2 mechanism (e.g. after 'battery off operation')	errors
	126	error while error was handled	
	254	total error, e.g. defective RAM or CPU...	

7.4. Light gate tests


Five light gates are used to position the selection sledge. These sensors scan certain rulers. The name of a light gate corresponds to the principal ruler (in German: Lineal).

1. Vertical-Lineal-Left (VLL), vertical ruler LH side
2. Horizontal-Lineal-Left (HLL), horizontal ruler LH side
3. Vertical-Lineal-Centre (VLC), vertical ruler centre
4. Horizontal-Lineal-Right (HLR), horizontal ruler RH side
5. Vertical-Lineal-Right (VLR), vertical ruler LH side

7.4.1. Light gate snapshot

Level 4	Button 7
---------	----------

To start the test: Press selection button 7.

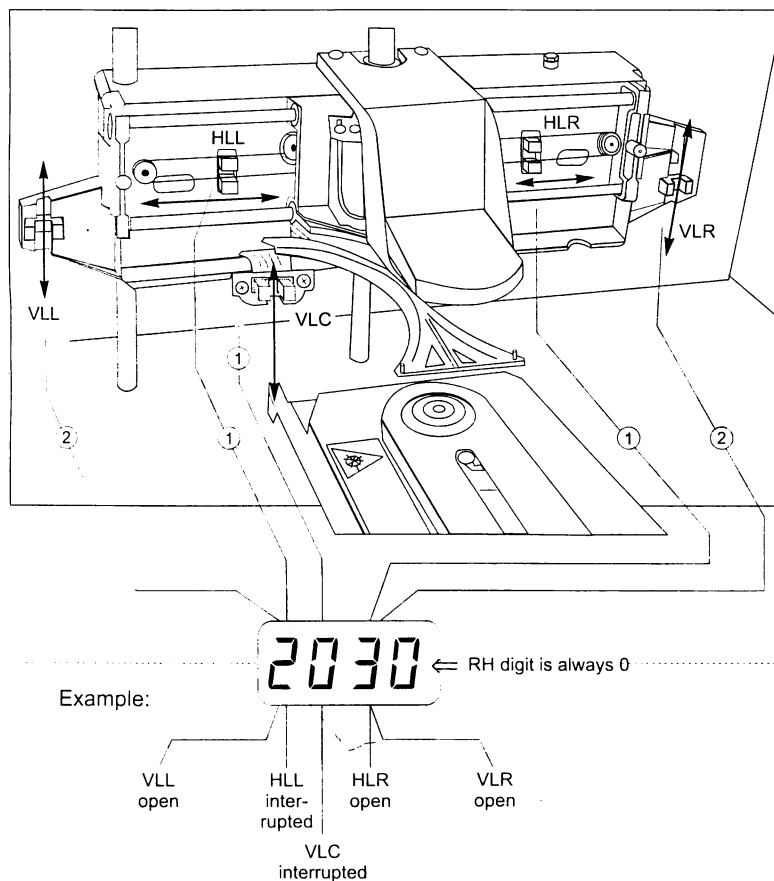

- By pressing selection button 7 a 'snapshot' of the actual gate state will be made. Then this state will be displayed in a coded form.
- An interrupted gate sends a '0' to the principal digit in the display.
- Two gates are combined in the second and fourth digit (from RH side) of the display.
- Both left and right gates (VLL, VLR) send a '2' if open to the corresponding digit, the others a '1'. This value adds itself.
- The RH digit is always 0.

To exit the test: Press selection button R.

7.4.2. Light gate function test


Level 4	Button 9
---------	----------

With this test you can check each single light gate by a continuous test loop during operation. A "0" in the display represents an open gate, a "1" represents a closed one.

The gate to be checked is connected by software to the interrupt request line INT1 which is used in normal operation. INT1 is always shown in the most RH digit of the display.


So do not worry that the left ruler VLL is displayed in the second digit from right.

Test start: Go to service level 4 press selection button 9 - hold - and press selection button R Release both buttons and press selection button 9 again. The display shows

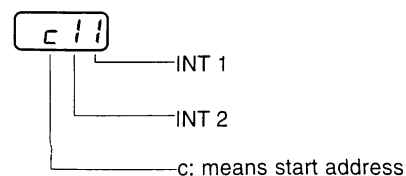


Now you can select different test procedures. Each procedure checks a certain function and the corresponding light gate. The procedures are numbered from 0 to 9 and can be selected with the selection buttons 1 (counts downwards) and 2 (counts upwards). The procedures 7, 8 and 9 have no function.


Depending on the selected test you can carry out special actions by means of the selection buttons 3 and 4. If you use the selection buttons 5 or 6 each action will be stopped at an occurring bright dark or dark bright change (auto edge stop) of the gate.

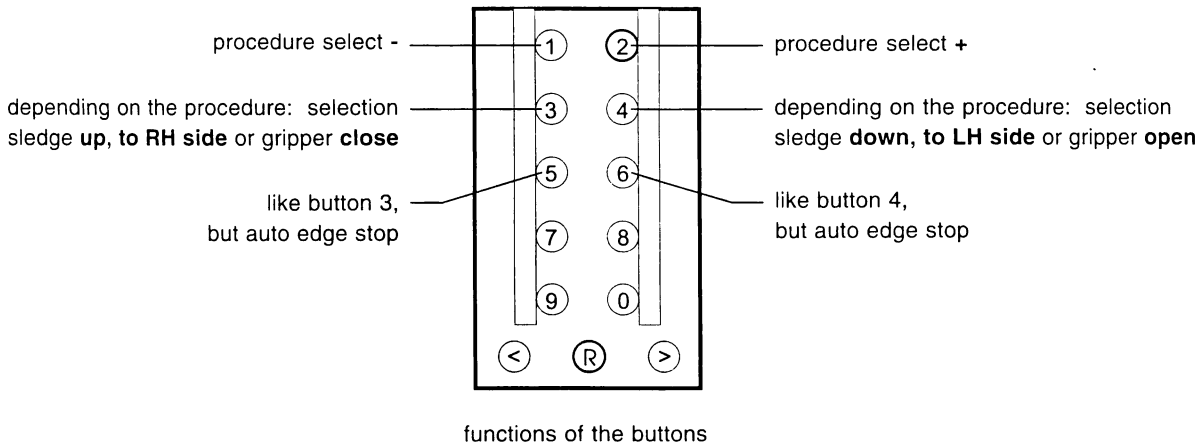


Meaning of the tests:

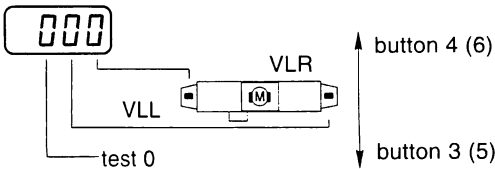


0 Test: VLL & VLR together. **VLL** is displayed in the **RH** digit (INT1), **VLR** in the second digit from RH (INT2). 1=gate is interrupted, 0=gate is open. Button 3 (5) makes the selection sledge move downwards, button 4 (6) upwards.

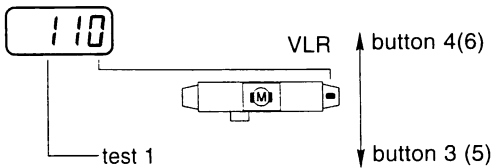


1 Test: VLR. State is displayed in the RH digit (INT1). 1=gate is interrupted, 0=gate is open. Button 3 (5) makes the selection sledge move downwards, button 4 (6) upwards.

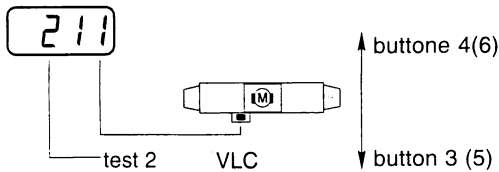


2 Test: VLC (Centre). State is displayed in the RH digit (INT1). 1=gate is interrupted, 0=gate is open. Button 3 (5) makes the selection sledge move downwards, button 4 (6) upwards.

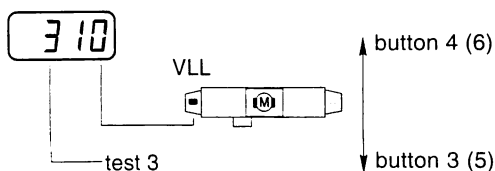


3 Test: VLL. State is displayed in the RH digit (INT1). 1=gate is interrupted, 0=gate is open. Button 3 (5) makes the selection sledge move downwards, button 4 (6) upwards.

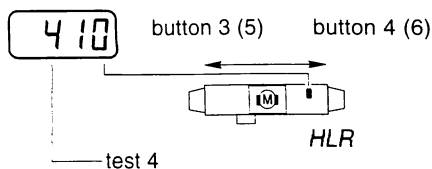

4 Test: VLL. State is displayed in the RH digit (INT1). 1=gate is interrupted, 0=gate is open. Button 3 (5) makes the gripper move to the LH side, button 4 (6) to the RH side.

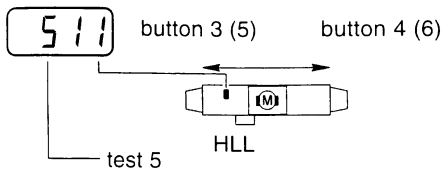

- 5 Test: HLL . State is displayed in the RH digit (INT1). 1=gate is interrupted, 0=gate is open. Button 3 (5) makes the gripper move to the LH side, button 4 (6) to the RH side.

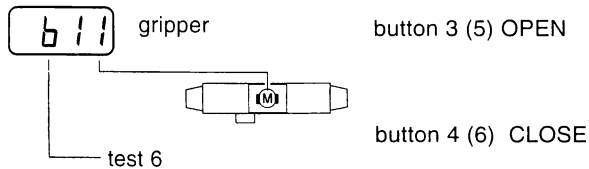

- 6 Test: Gripper. State is displayed in the RH digit (INT1). 1=gate is interrupted, 0=gate is open. Button 3 (5) opens the gripper, button 4 (6) closes it.

7.5. CDM12 function tests

Level 5

The following tests can be done in service level 5. In some cases level 5 is reached automatically (ref. to chap.7.2.4, 7.2.5.), because these tests are parts of complete test procedures.



1. Set the slide switch 'SERVICE' at the SCC unit to ON.
2. Press 'LT' button. Display shows e.g.: _ 4 0 9 (409 or higher = SCC program version)
3. Press selection button R -hold down- and press selection button 0 than release both buttons. The display is dark.
4. Press selection button 5. Service level 5 is reached. Display is: 5_ _ .

7.5.1.CD player check (START)

Level 5	Button 6
---------	----------

Before starting this test a CD has to be placed on the turntable (ref to chap. 7.2.4.). If no track had been selected with the buttons 0 or 9 the complete CD will be played.

 1. Press selection button 6, the CD will start to play beginning with the first track. The display shows at first:

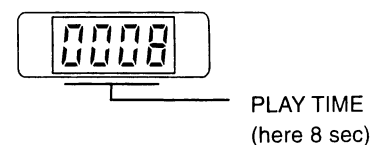

CAUTION


The displaying of the play time in this test is an important indicator for the serial communication *between the SCC unit and the CD controller!*

7.5.2.NEXT

Level 5	Button 0
---------	----------


Service level 5 has to be reached and a CD has to be placed on turntable (ref. to chap. 7.2.4).

 1. Press selection button 0 (several times). The CD starts and the track number according to the number of key actuation will be played. Only this track will be played. The digital display shows at first e.g.:



TRACK number

 then the current play time in sec (e.g. 8 sec).



PLAYTIME of actual track

If selection button 0 is pressed again once the next track will be played or if selection button 6 is pressed the remaining tracks of the CD will be played.

7.5.3.PREVIOUS

Level 5	Button 9
---------	----------

Service level 5 has to be reached and a CD has to be placed on turntable (ref. to chap. 7.2.4.).

1. Press selection button 9 (several times too).

The player jumps to the previous track with each button actuation.

If track 1 is reached it will be played continuously.

If button 6 is pressed in between, the remaining tracks of the CD will be played.

7.5.4.STOP

Level 5	Button 5
---------	----------

1. Press selection button 5.
CD stops playing. Display shows 5 _ _ _ (service level5).

7.5.5.STOP playing and go back to level 4

Level 5	Button 3
---------	----------

1. Press selection button 3.
CD stops playing. Display shows 4 _ _ _ (service level 4).




IMPORTANT

To terminate all the tests to return to normal operation: Set slide switch 'SERVICE' on the SCC unit to OFF. Press 'LT' button also on the SCC unit.

8. Integrated test program of the CD-PRO player


8.1. Access to the player functions without S&CC unit

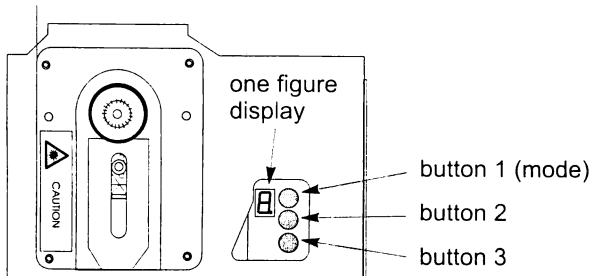

For a test the complete player unit CD-PRO can be operated without S&CC unit.

The power supply from the installed amplifier, the sub-transformer and an amplifier with CD input for the audio signal is required.

A one digit digital display indicates the current operation mode and three command buttons are located on the player chassis.

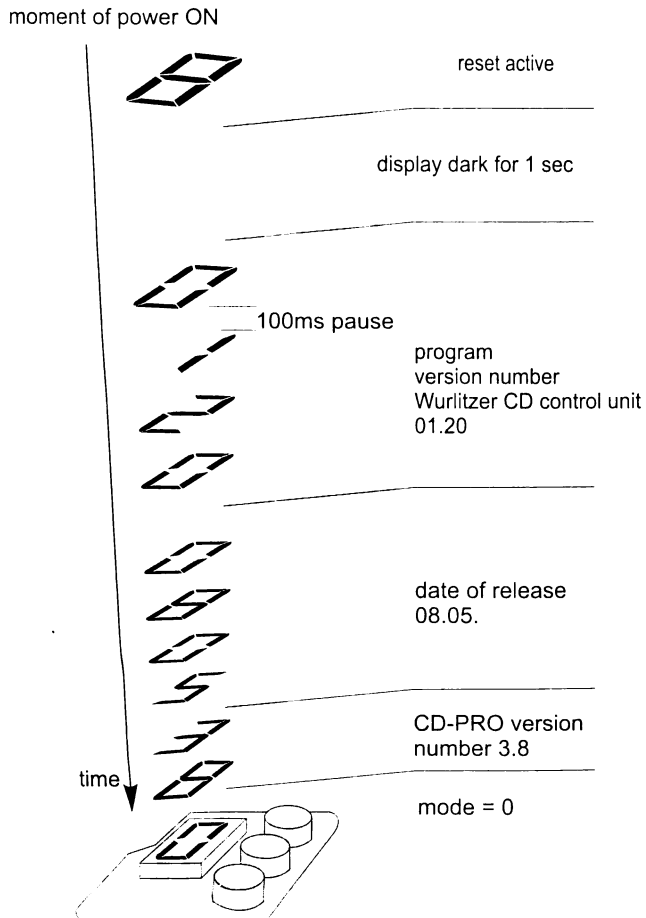


The one digit display is able to display more information.

To display two or more digits the information starts with a dark phase of approx. 1 sec. followed by the digits shown one after another with dark phase of 100 msec. between each digit. The most significant digit will be displayed at first.

After power on and after a general reset command (display shows "8"), the program version number of the Wurlitzer CD control unit will be displayed with four digits followed by the version number of the CD-PRO servo processor with two digits.

If the player is in stand by and the three buttons on the player are pressed at the same time the above mentioned sequence will be displayed but without showing "8" for "reset active".

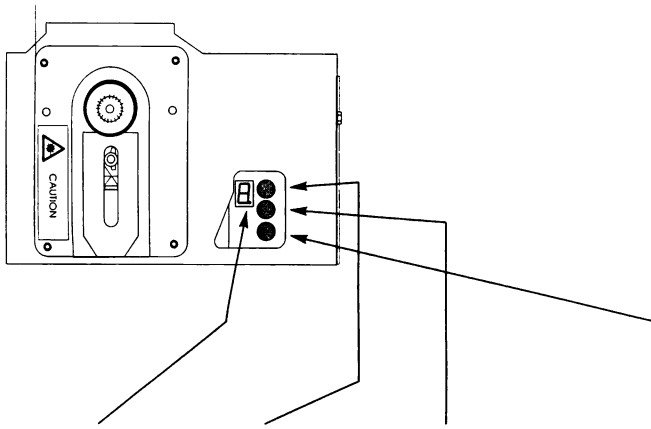

Test functions CD-PRO

(Example: If mode display = 3 and button 2 will be pressed, then pause is switched on.)

mode display	button 1 (mode)	button 2	button 3	buttons 2 + 3 together
0	mode 1	start	stop	repeat CD
1	mode 2	next track	previous track	repeat track
2	mode 3	search forward	search backward	single, double speed.
3	mode 4	pause ON	pause OFF	
4	mode 5	volume +	volume -	mute
5	mode 0	track #1	track -1	play selected track (read TOC if necessary)

CDM 12 error codes:

Error code	Meaning
0	No error
2	Focus error or no disc
7	Subcode error, no valid subcode
8	TOC error
10	Radial error
12	Fatal sledge error
13	Turntable motor error
31	Search time out
32	Search binary error
33	Search index error
34	Search time error
40	Illegal command
41	Illegal value
42	Illegal time value
43	Communication error
44	Reserved
45	HF detector error
48	Emergency stop

If "repeat CD" had been selected with the buttons 2 + 3 in mode 0 the display will be "99". At each beginning of a new track it will be displayed with two digits.

If "repeat track" had been selected with the buttons 2 + 3 in mode 1 the actual played track will be displayed.

By pressing of two buttons at the same time additional values will be displayed:

Buttons 1+2: The last occurred error code will be displayed (ref. to error code table). This error code will be reset after this retrieval or after a CD-PRO reset (e.g. the next power on).

Buttons 1+3: The actual playing track will be displayed.

Buttons 1+2+3:

- a) No CD is playing: Program version and date of release..
- b) CD is playing: Max. / min. track number will be displayed.

Remark:


If commands will be sent to the CD-PRO player, the display will flash. During this time no commands given by the buttons will be accepted.

While the table of contents (TOC) is read an 8 flashes in the display. In this way, the necessary time to read the TOC can be prolonged. So bad CDs can be recognised and taken out.

8.2. Special test functions of the CD-PRO player

Service program of CD-PRO (mode 9)

With this service program different functions of the CDM12 player can be tested.

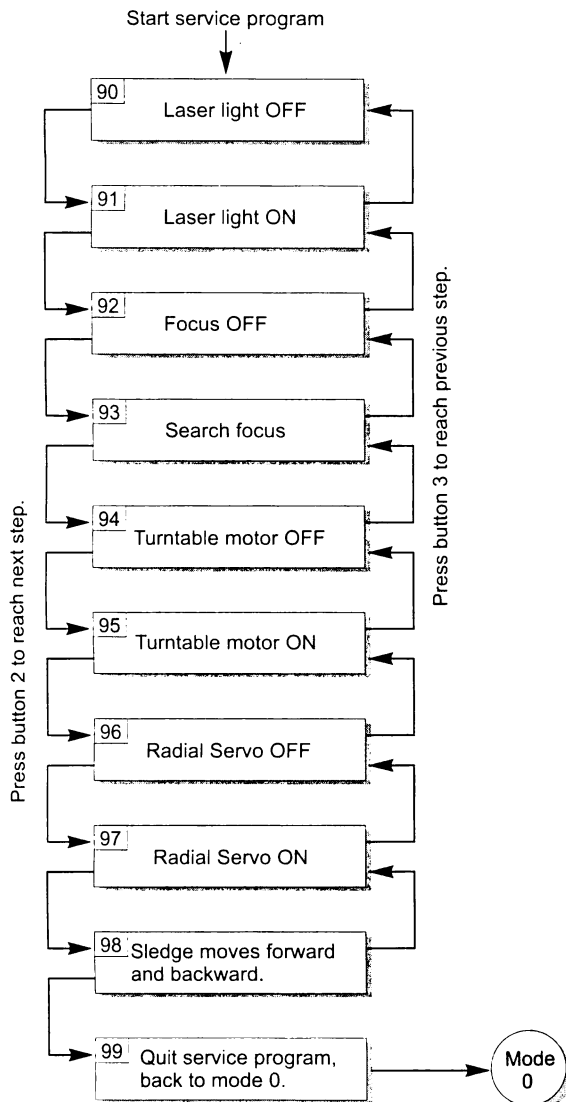

Test results:

- Test 91: You can check the laserlight with an infrared indicator.
- Test 93: With out a CD: laser lense moves up and down. If you put a CD on the turntable while the test runs the lens stops moving if it finds the focus point.

How to call:

Switch main power OFF. Press button 1 - hold down - and switch main power on. (Remark: "Power ON - OFF" can also be done by disconnecting the wire bk./gy. from pin 6 of the sub transformer.)

Function:

The Wurlitzer CD control unit steps into mode 9 and runs the tests 90 up to 99. Mode 9 will be displayed continuously. While changing the test step it will be displayed with two digits

Remarks:

Starting test step 94 a CD has to be placed on turntable.


The button 1...
has no function during this test.

The button 2...
switches to the next test step.

The button 3...
switches to the previous test step.

Quit:

Press button 2 while test 98 is running. Control unit steps over test 99 to mode 0 automatically.

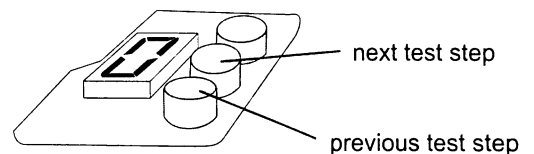


Test 95: The turntable motor must spin.

Test 98: The sledge moves itself from inside to outside and back again. If this test is successful the speed of the disc must change to lower speed at the outside of the disc.


9. Accessories

9.1. Microfone kit (part no. 0006953)

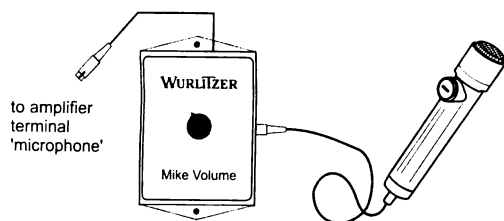

This unit enables the use of the jukebox as a paging system, when playing as well as during idling periods. If the paging microphone is switched on while the jukebox is playing, the music fades away or will be muted for this period. This kit is to be connected at the microphone socket of the amplifier. The length of the cable between mike pre-amp and the jukebox is approx. 45 ft / 15 m.

9.2. BGM-Connector

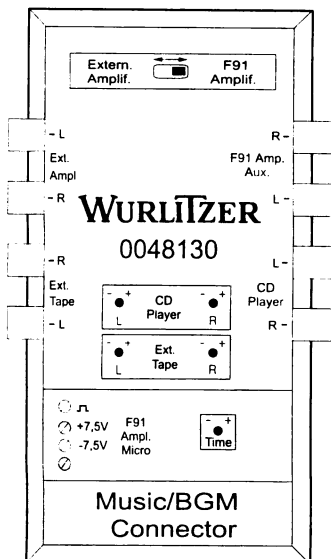

This equipment offers two features:


1. The sound of an external source (300mV - 1V), e.g. radio or tape, will be reproduced over the speakers of the jukebox with reduced volume. A selection over the jukebox will mute this source, and it returns only after all selections have been played. (Time-lag can be adjusted).
2. Distribution of the sound from the jukebox to an existing background system (amplifier). The sound of this equipment is switched off as long as the jukebox is playing. The hook-up for this adapter is the same as the microphone.

BGM connector for I84 (part no. 0035579)

BGM connector for F91 (part no. 0048133)

For more information order the Wurlitzer technical information leaflets TI-MA-67b for I84 and TI-MA-116 for F91.

9.3. RCA (Cynch) adapter for amplifier I84 (0053702)

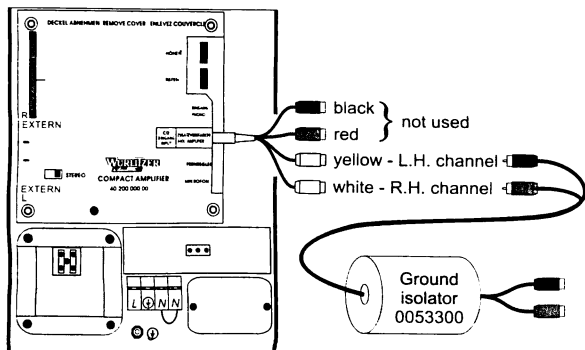

To connect an external amplifier use the RCA - DIN adapter. Insert the DIN plug in the socket AUX. AMPLIFIER of the I84 amplifier. Use the jacks yellow (LH) and white (RH) to connect your external amplifier.

If you get problems with ground loops (you can hear a hum in the speakers) use the special ground isolator (part no. 0053300). Connect it between the RCA - DIN adapter and your external amplifier.

10. Steps to solve mechanical problems

In case of a mechanical error the software tries to solve the problem itself. If this is not successful the mechanism switches itself off. Then the display shows an error code (ref. to chapt. 7.3. page 64). The jukebox is then out of order.

10.1. Treating simple errors

Switch the jukebox off and on several times.
(The software tries to solve the problem again.)
No success ? Step to chapter 10.2.

10.2. Treating simple errors by hand

1. Switch off the jukebox
2. Move the gripper by pressing against the motor as far as the CD can be taken out by hand.
3. Take the CD out of the gripper.
4. Insert the CD in the corresponding compartment.
5. Switch on the jukebox, it will be run automatically:
 - Error elimination
 - Initializing phase
 - jukebox ok.
6. No success ?
Step to chapter 10.3.

10.3. Set the mechanism to '0' position

1. Power OFF!
2. Open the Jukebox.
3. Open the mechanism housing, replace any CD's that may have been dropped.
4. Move gripper to RH. 0-position.
 - Move, by pressing against the gripper motor, gripper holder of selection sledge so that LH. side of gripper holder aligns with RH. side of pressure disc holder.
 - If RH. position impossible:
Move gripper to the LH. 0-position, so that right edge of gripper holder aligns with LH side pressure disc holder.
5. Remove the left magazine. (to reach the gear).
6. Free the selection sledge.
 - The sledge has to be at least 1,3 " (3 cm) over the housing bottom. Therefore move the sledge up and down by hand using the toothed belt wheel on the top LH. side of gear group.
7. Insert the left magazine.
8. Check the fixing of the magazines by hand.
9. Close the mechanism housing.
10. Set the slide switch 'SERVICE' on the SCC unit to ON.
11. Power ON.
12. Delete the stored data of the jukebox.
 - Press 'LT' button
 - Press 'LT' button again and hold it for at least 6 sec.

Followed by:

 - an automatic orientation phase
 - an automatic initialization phase
 - the display of the program version
13. Programming
 - insert CD's if necessary
 - program number of inserted CD's in service level 1 button 5 as follows:
 - Press selection button R -hold down- and press selection button 0 than release both buttons.
 - Press selection button 1. Service level 1 is reached. Display is: 1_ _ _.
 - To reprogram press selection button 5 -hold down- and press selection button R. Enter the desired number of CD's with two digits. (expection: 100 CD's = 00)
 - program options as desired
14. Switch to normal operation mode
 - Set the slide switch 'SERVICE' on the SCC unit to OFF.
 - Press 'LT' button on the SCC unit once.
15. Close the jukebox.

11. Declaration of conformity

Product Description:

Geräteart:

Jukebox / Musikbox

Model No.:

Typenbezeichnung:

Princess

Directives Complied With:

Angewandte EG-Richtlinien:

73/23/EEC

Low Voltage Directive
Niederspannungsrichtlinie

89/336/EEC

EMC Directive
Elektromagnetische Verträglichkeit

Standards Used:

Technische Vorschriften:

EN 50081-1

Electromagnetic Compatibility
Generic Emissions Requirements
Elektromagnetische Verträglichkeit
Fachgrundnorm Störaussendung

EN 50082-1

Electromagnetic Compatibility
Generic Immunity Requirements
Elektromagnetische Verträglichkeit
Fachgrundnorm Störfestigkeit

EN 60335-1

Safety Of Household And Similar
Electrical Appliances
Sicherheit Elektrischer Geräte Für Den
Hausgebrauch Und Ähnliche Zwecke

EN 60335-75

Safety Of Household And Similar
Electrical Appliances
Sicherheit Elektrischer Geräte Für Den
Hausgebrauch Und Ähnliche Zwecke

EN 55022

Limits And Methods Of Measurement Of Radio
Interference Characteristics Of Information
Technology Equipment.
Grenzwerte Und Meßverfahren Für Funkstörungen
Von Informationstechnischen Einrichtungen

Signature

Unterschrift



Print Name

Gedruckter Name

Jürgen Obermeier

Position

Position


Chief Engineer / Technischer Leiter

Date


Datum

2. January 1998 / 2. Januar 1998


12. Wiring diagrams

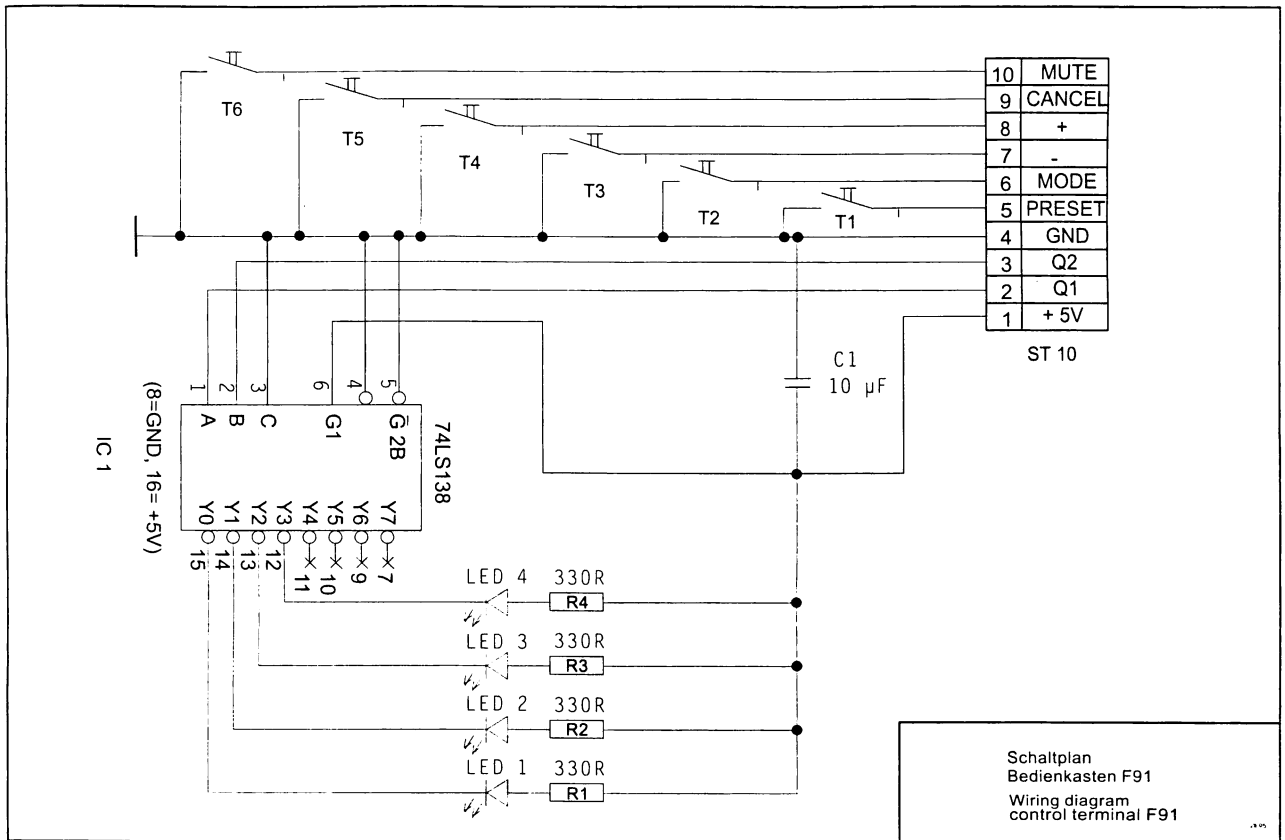

Schaltplan
Bedienkasten F91
Wiring diagram
control terminal F91

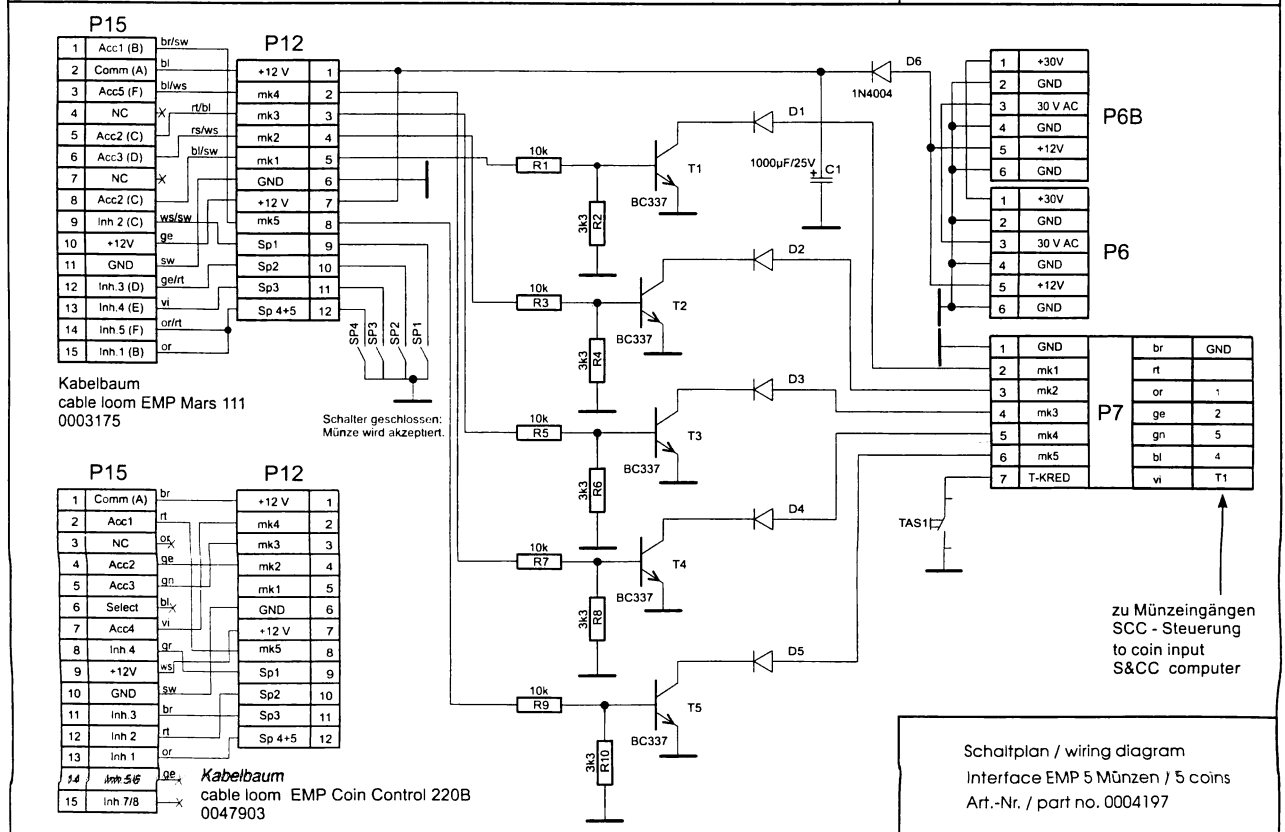


Schaltplan / wiring diagram
Interface EMP 5 Münzen / 5 coins
Art.-Nr. / part no. 0004197

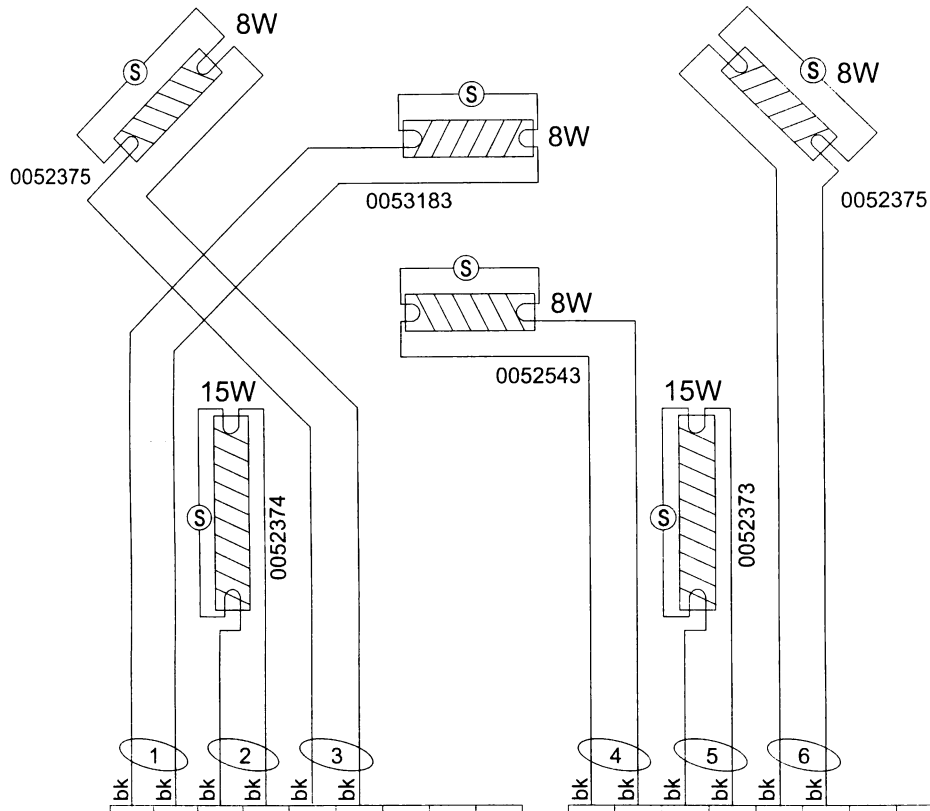

3	2	1
8W	15W	8W
6	5	4
N	N	N
9	8	7

Molex terminal
9 pole
view from back
side
Rückansicht


1	4	2	5	3	6	7	8	9
1	4	2	5	3	6	7	8	9
8	N	15	N	8	N			
W		W		W				

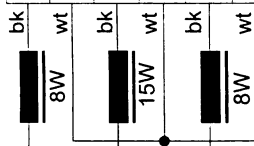

3	2	1
8W	15W	8W
6	5	4
N	N	N
9	8	7


Molex terminal
9 pole
view from back
side
Rückansicht

1	4	2	5	3	6	7	8	9
1	4	2	5	3	6	7	8	9
8	N	15	N	8	N			
W		W		W				

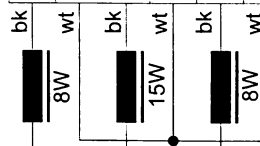


0052165

Final connector
Endverbinder

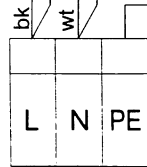


Wago terminal
3 Pins
3 Stifte

0051602

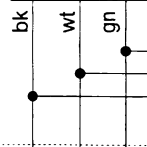


Molex terminal
3 Pins fem.
3er Buchse

 





Molex
3 Pins
3 Stifte

184 / F91 - Amplifier / Verstärker

Wiring diagram
Princess (USA), fluorescent lamps 117V
Verdrahtungsplan
Princess (USA), Leuchtstofflampen 117V

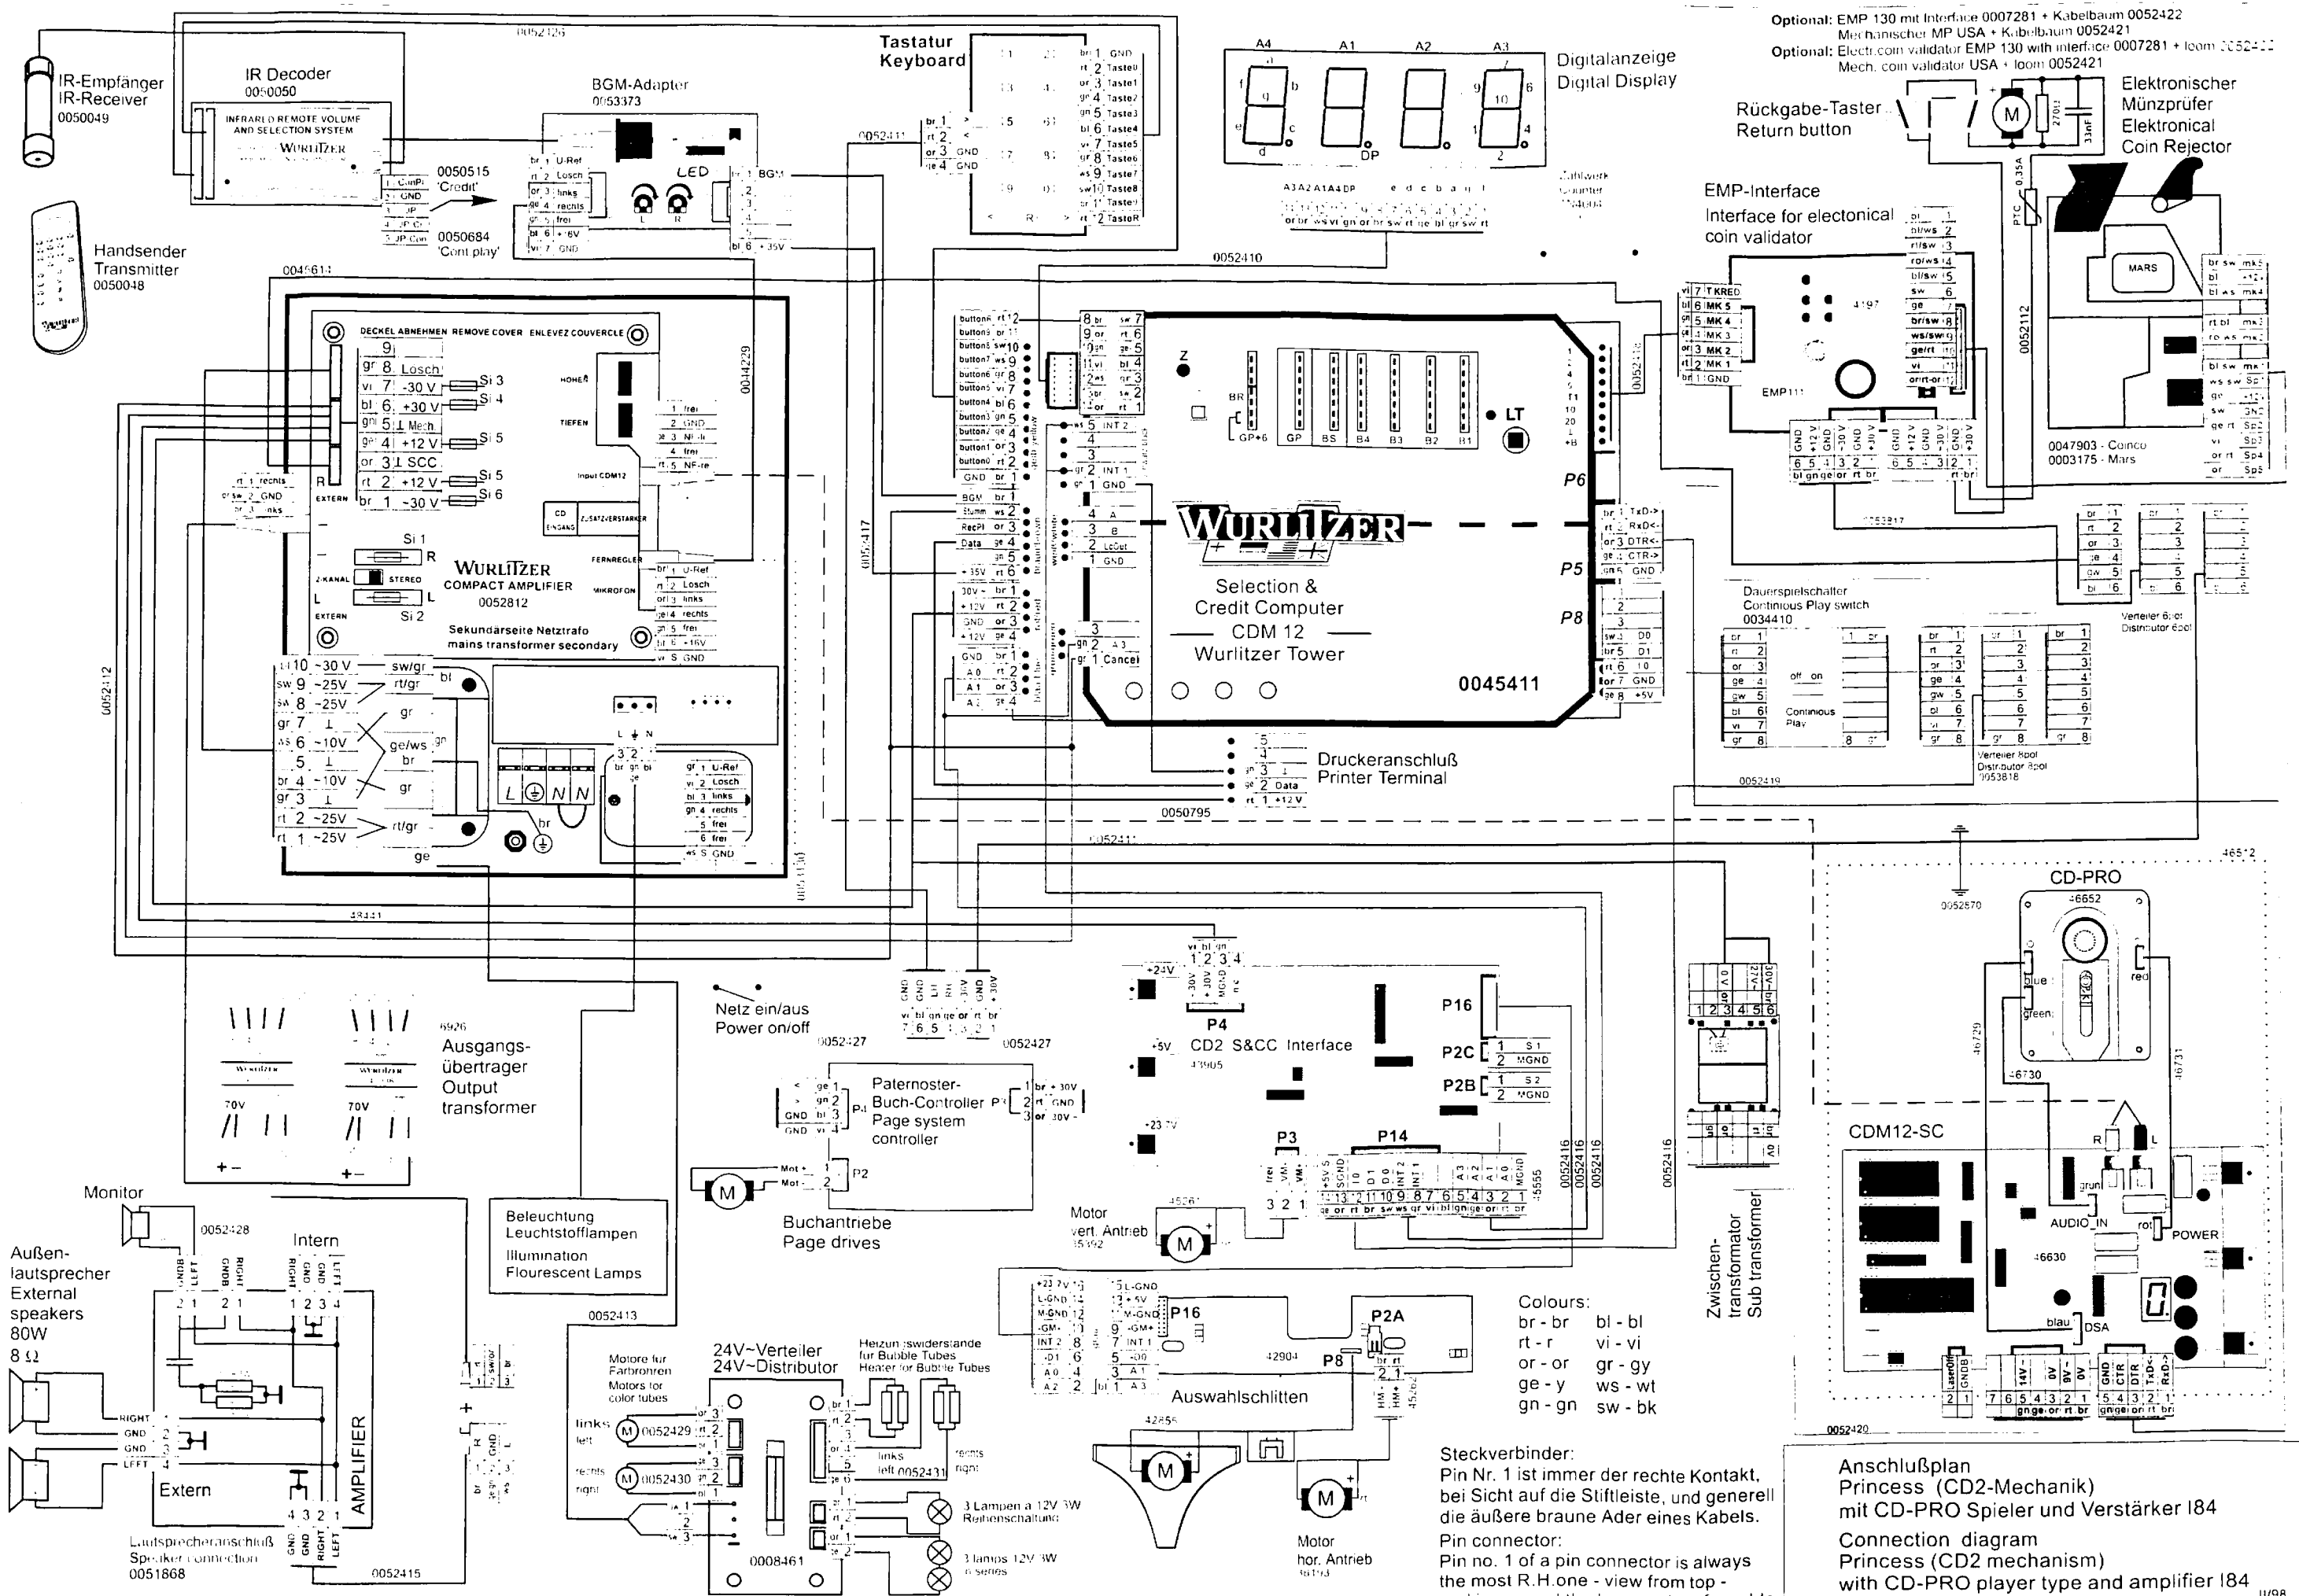












 
Optional: EMP 130 mit Interface 0007281 + Kabelbaum 0052422
 Mechanischer MP USA + Kabelbaum 0052421
 Optional: Electr.com validator EMP 130 with interface 0007281 + loom 0052422
 Mech. coin validator USA + loom 0052421

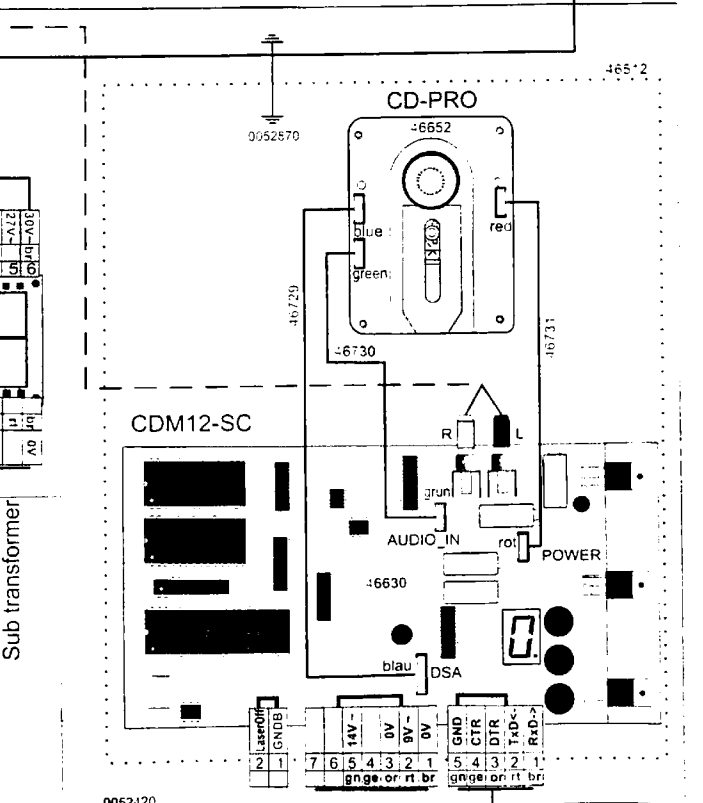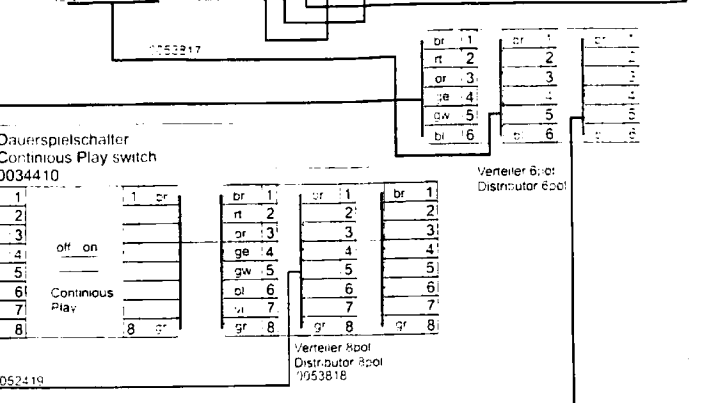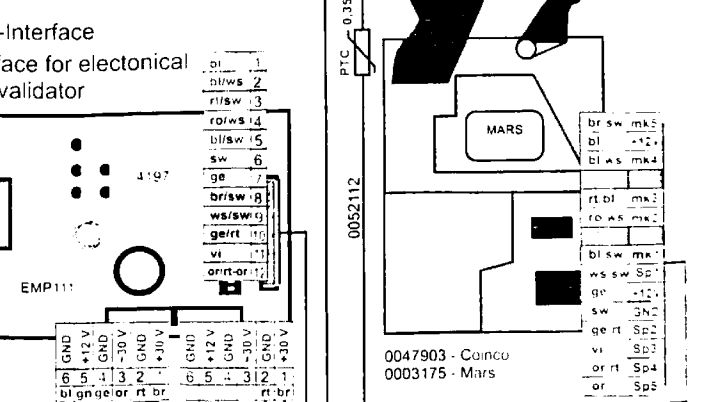


Anschlußplan Princess (CD2-Mechanik) mit CD-PRO Spieler und Verstärker I84
 Connection diagram Princess (CD2 mechanism) with CD-PRO player type and amplifier I84

Colours:
 br - br bl - bl
 rt - r vi - vi
 or - or gr - gy
 ge - y ws - wt
 gn - gn sw - bk

Steckverbinder:
 Pin Nr. 1 ist immer der rechte Kontakt, bei Sicht auf die Stiftleiste, und generell die äußere braune Ader eines Kabels.
 Pin connector:
 Pin no. 1 of a pin connector is always the most R.H. one - view from top - and in general the brown wire of a cable.

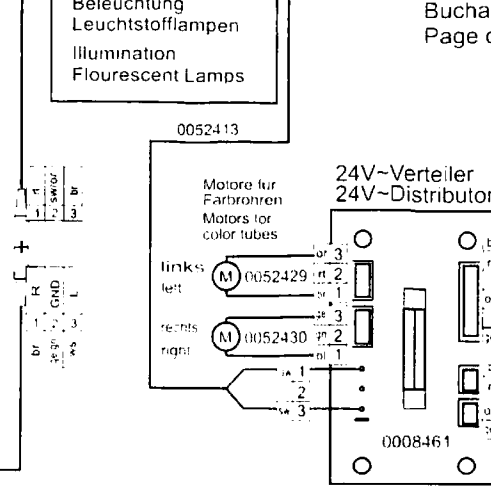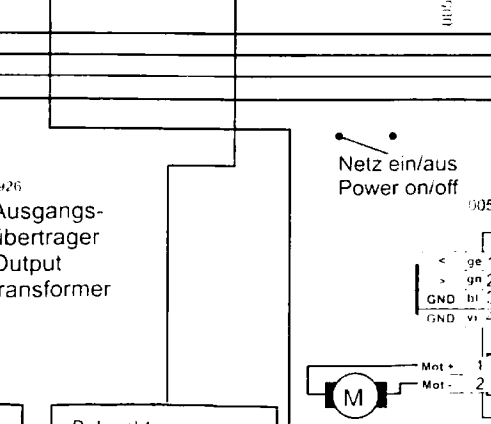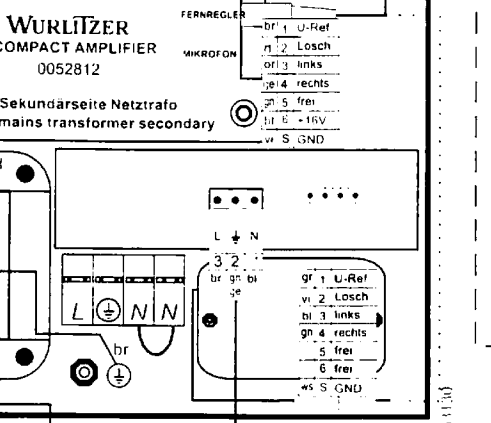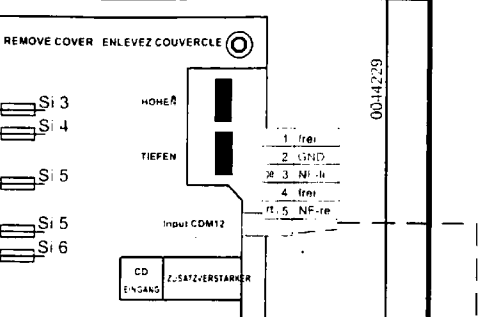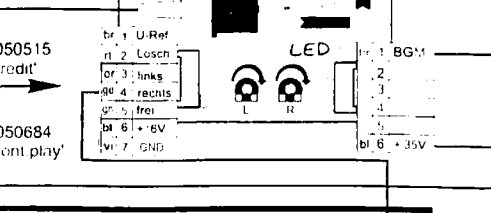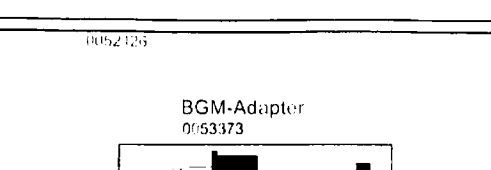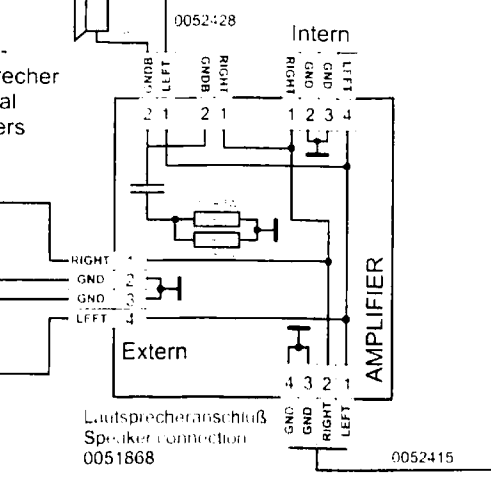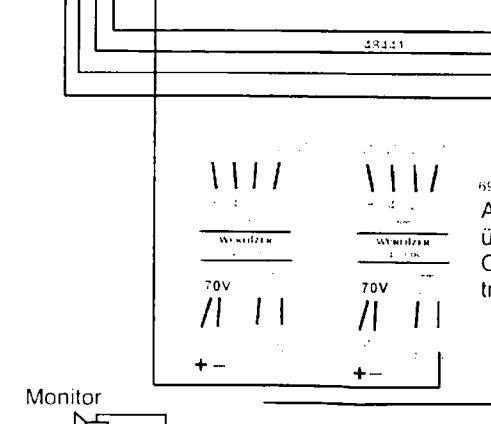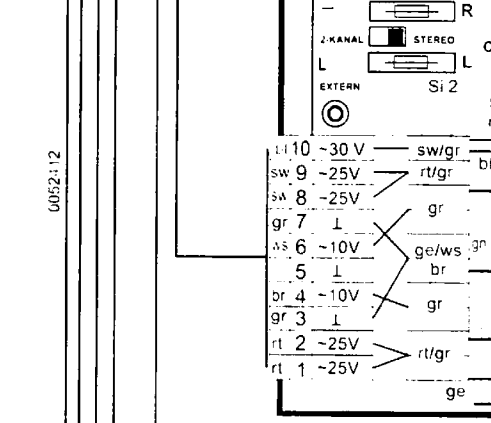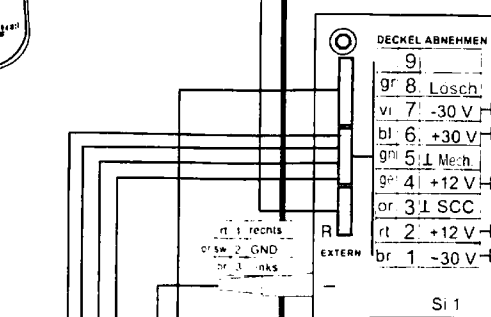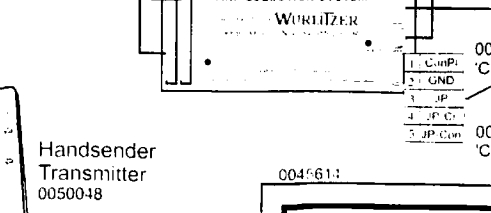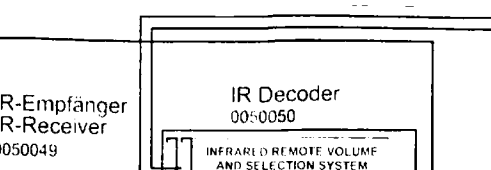

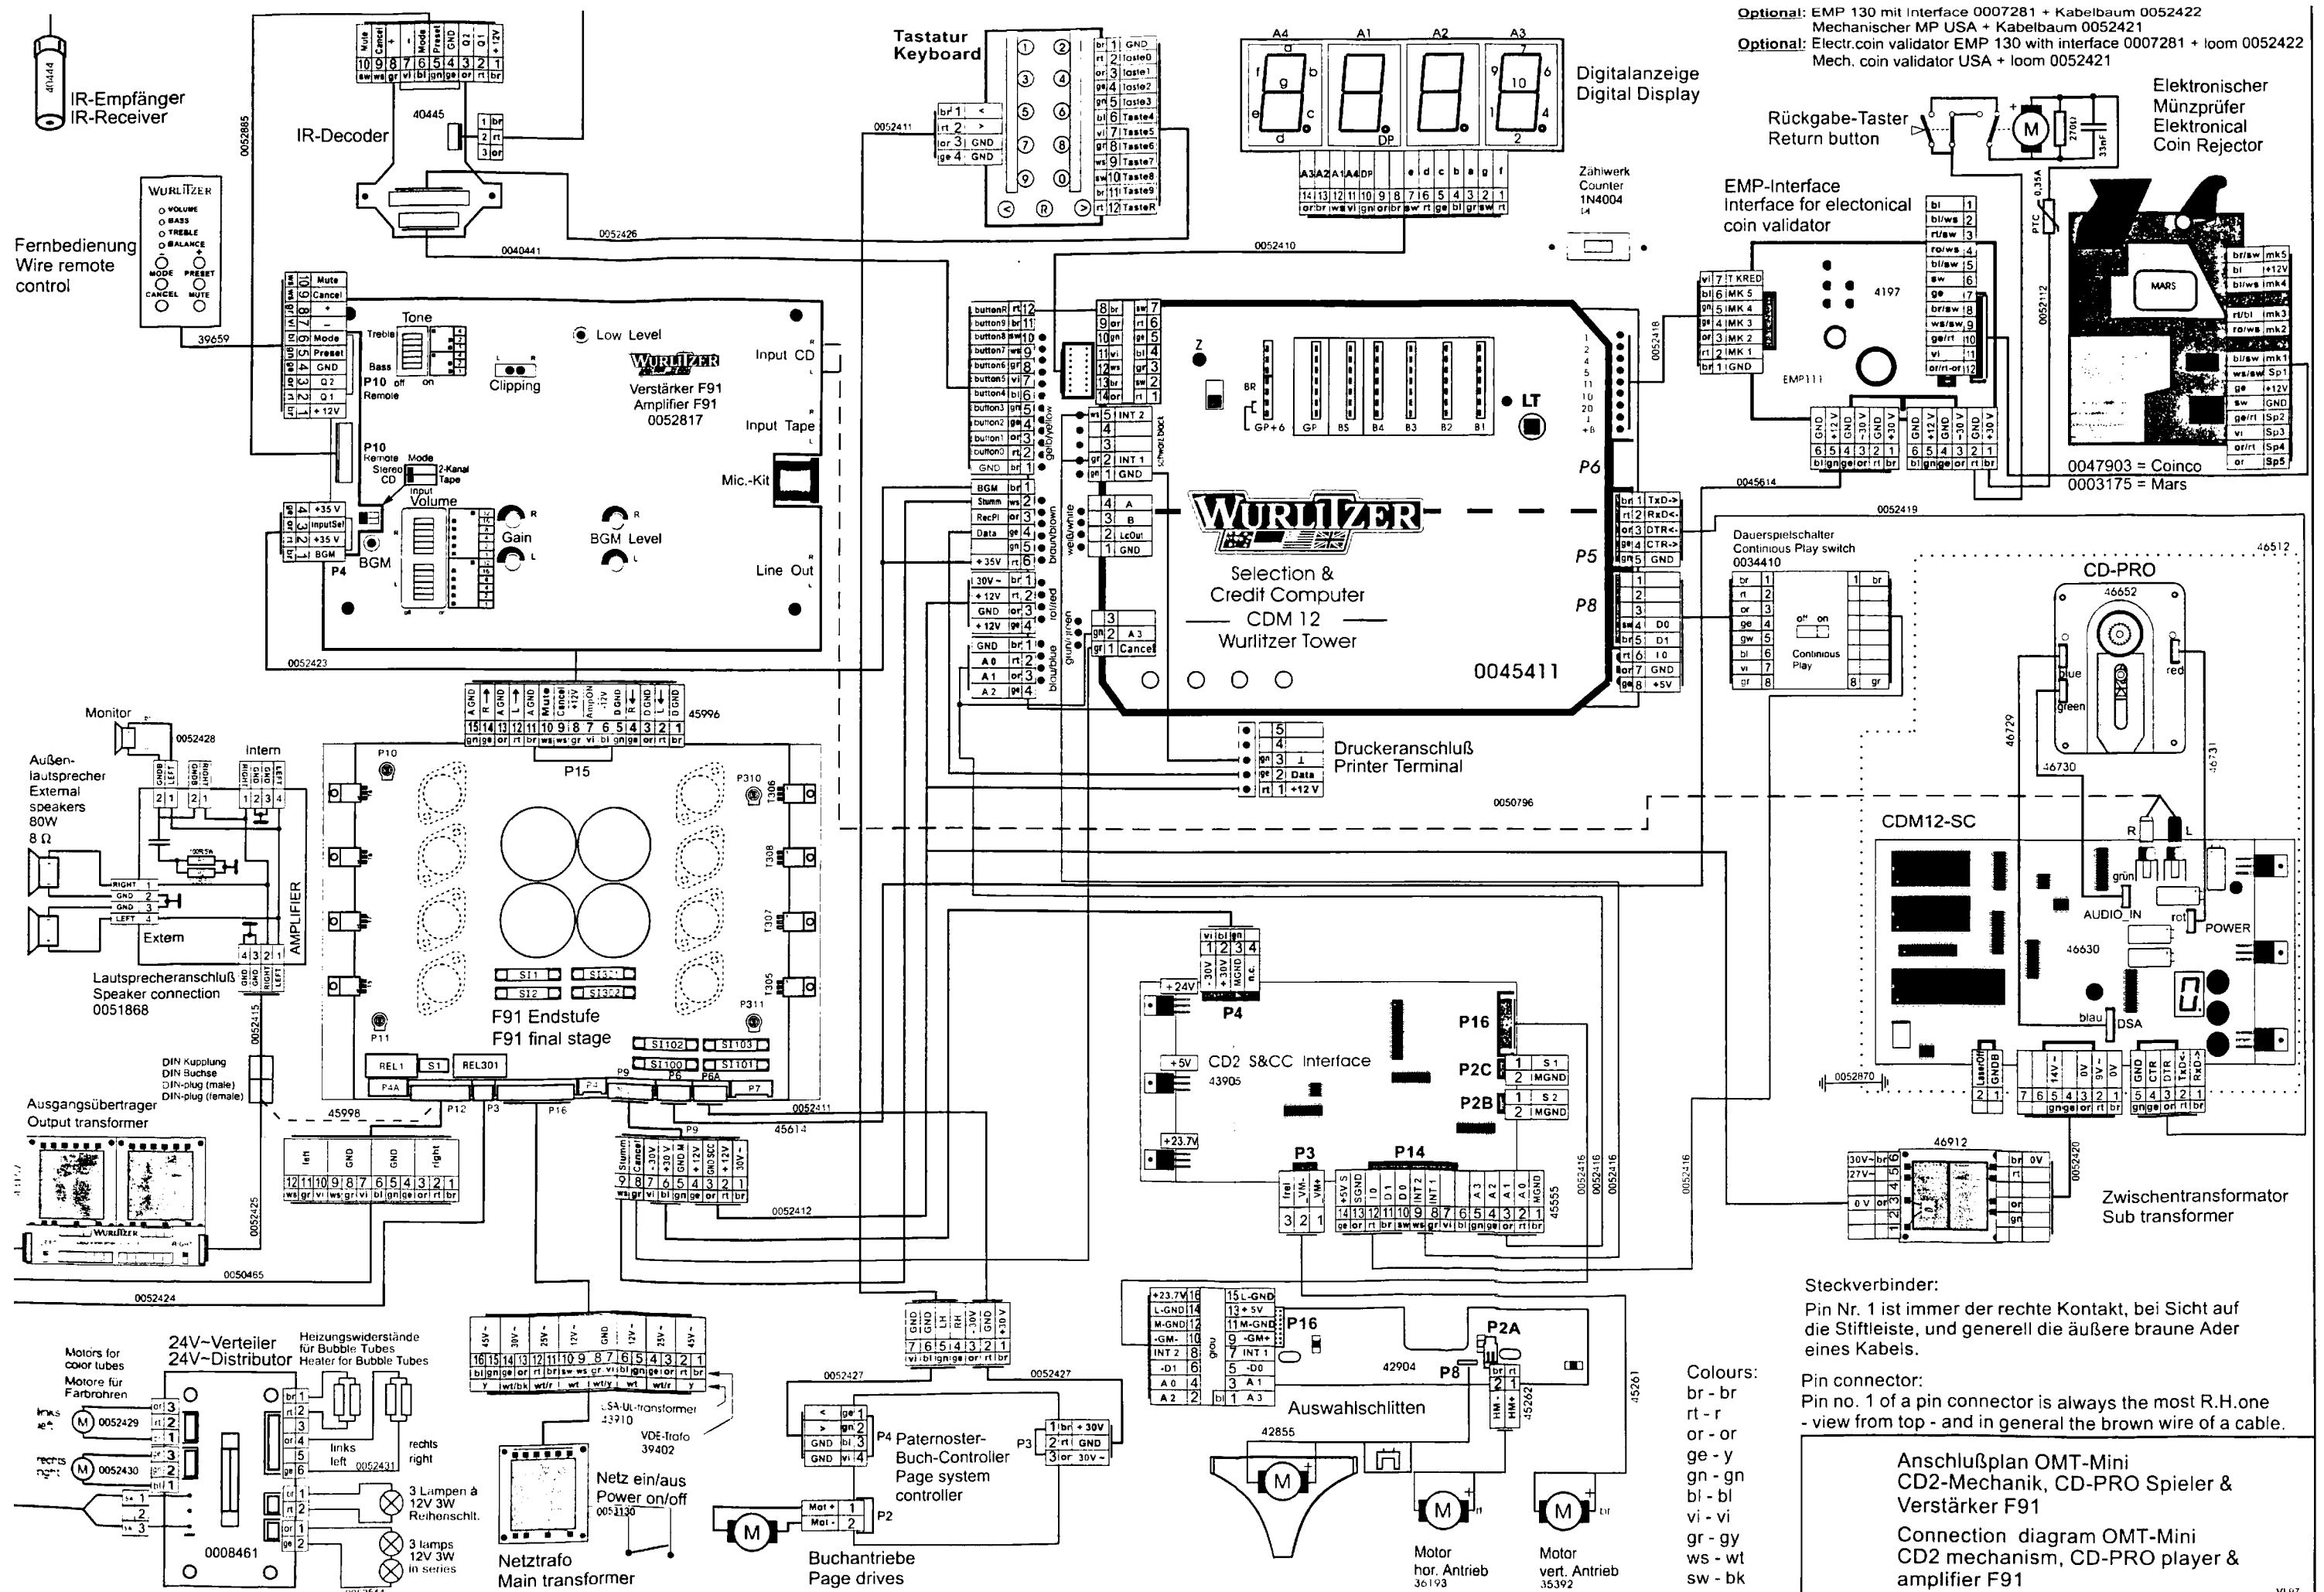



Optional: EMP 130 with interface 0007281 + Kabelbaum 0052422
 Mechanischer MP USA + Kabelbaum 0052421
 Optional: Electr.coins validator EMP 130 with interface 0007281 + loom 0052422
 Mech. coin validator USA + loom 0052421


Steckverbinder:
 Pin Nr. 1 ist immer der rechte Kontakt, bei Sicht auf die Stiftleiste, und generell die äußere braune Ader eines Kabels.

Pin connector:
 Pin no. 1 of a pin connector is always the most R.H. one - view from top - and in general the brown wire of a cable.

Anschlußplan OMT-Mini
 CD2-Mechanik, CD-PRO Spieler &
 Verstärker F91
 Connection diagram OMT-Mini
 CD2 mechanism, CD-PRO player &
 amplifier F91


Colours:
 br - br
 rt - r
 or - or
 ge - y
 gn - gn
 bl - bl
 vi - vi
 gr - gy
 ws - wt
 sw - bk

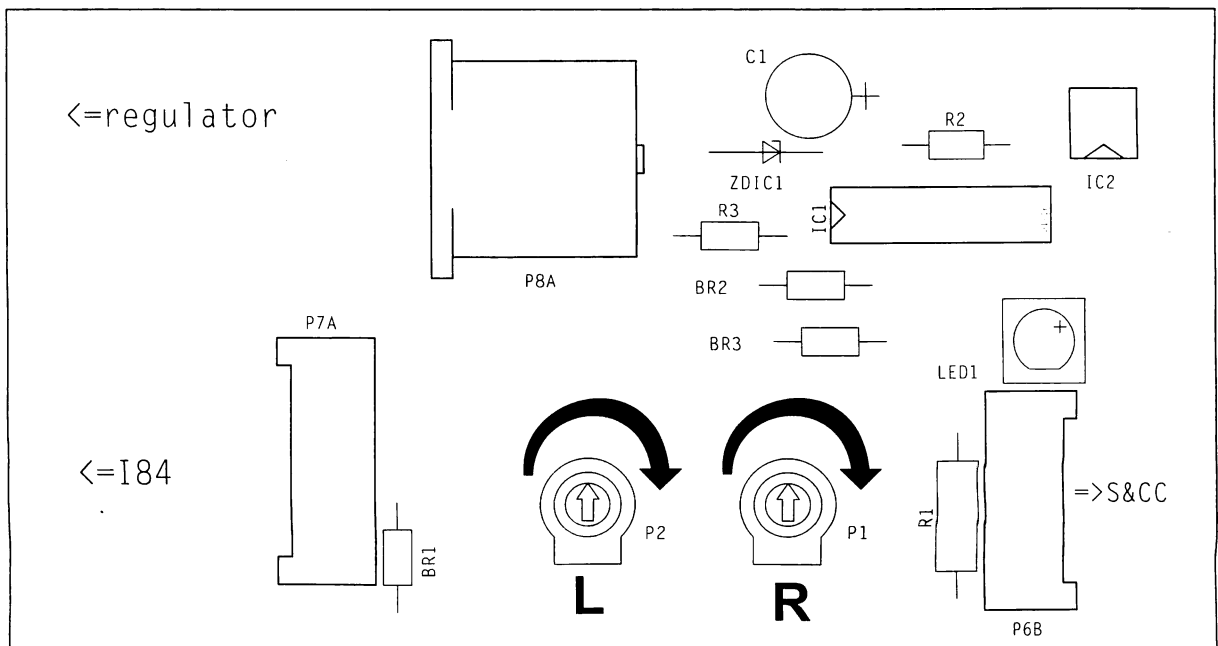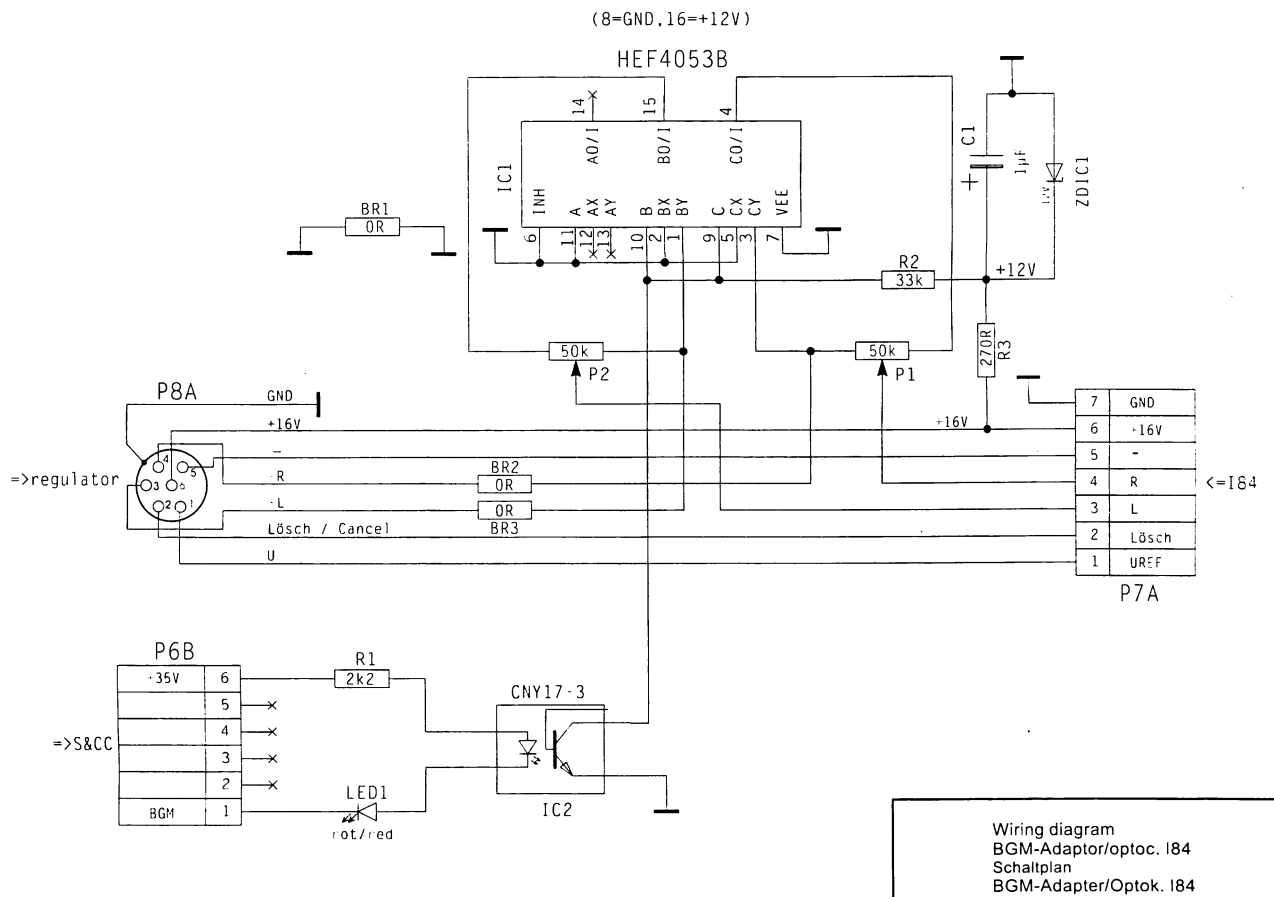

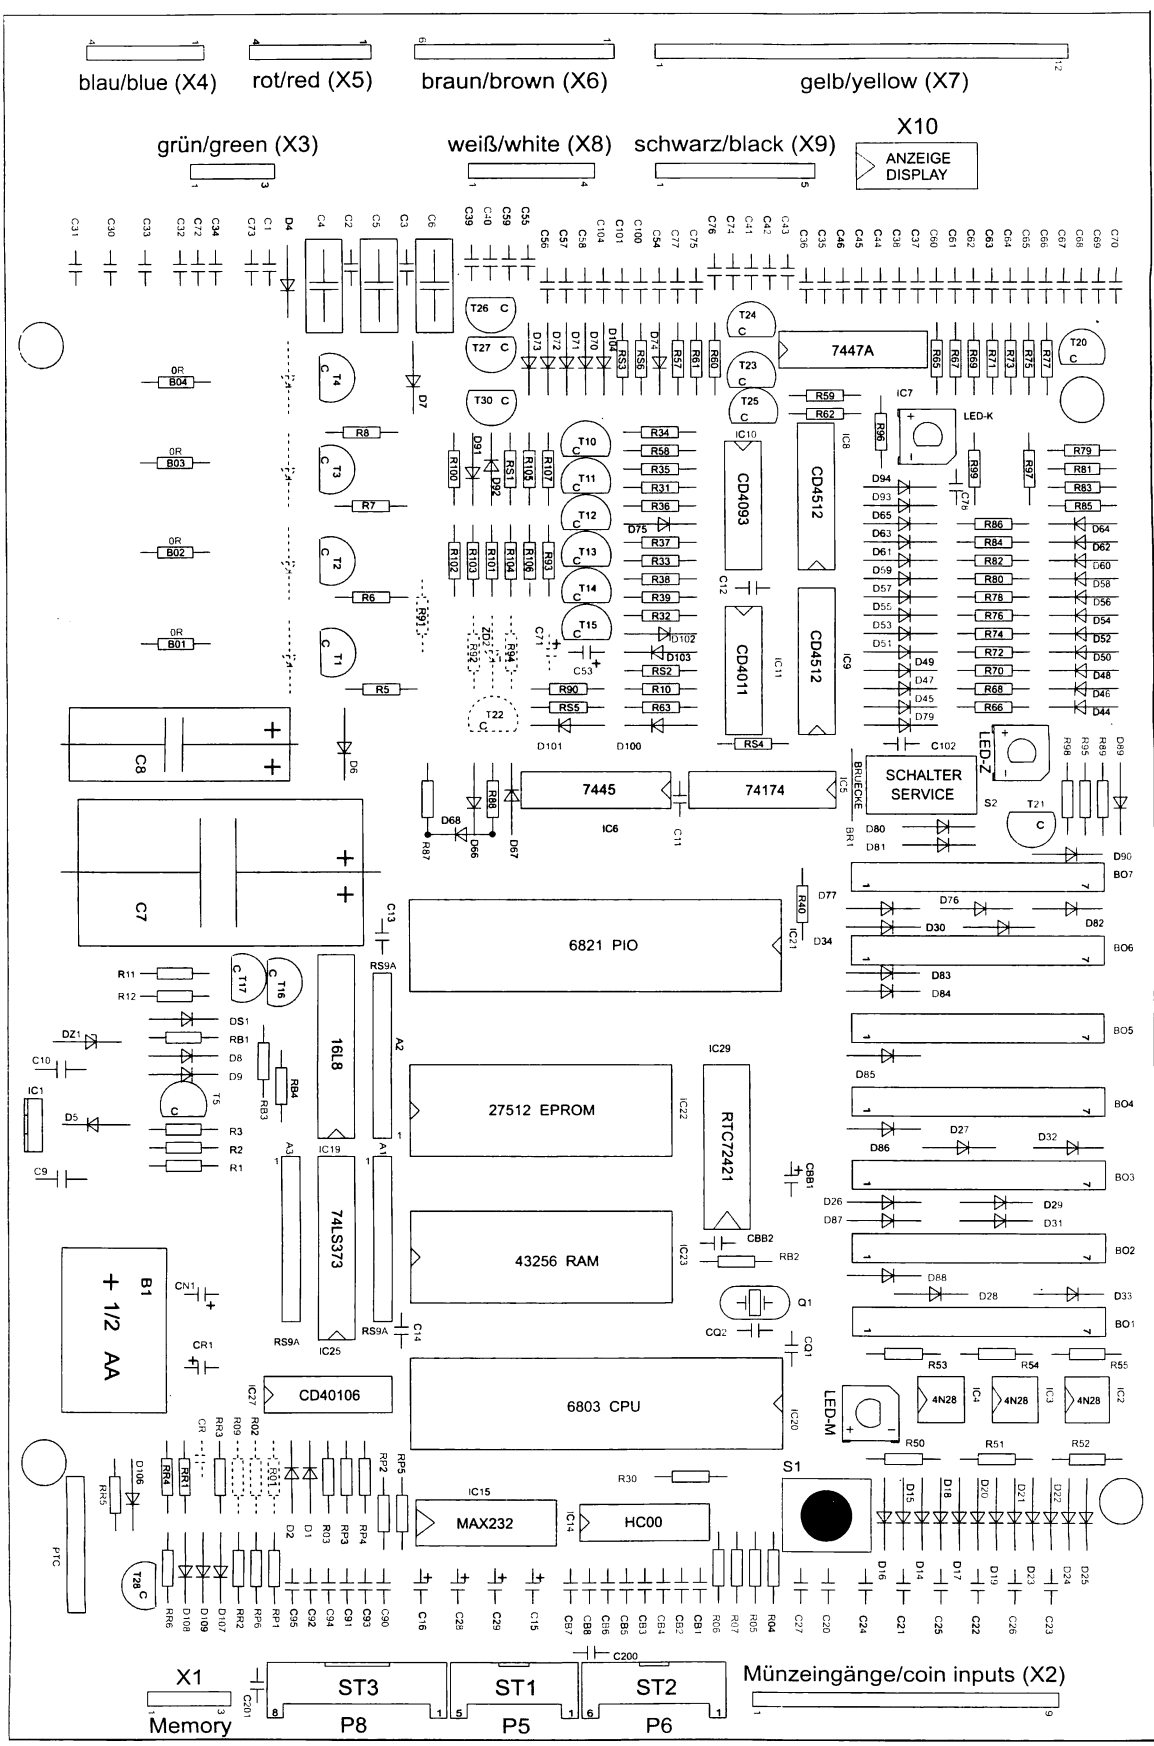


Bestückungsplan
Board layout
Selection & Credit Computer 53408


Stecker schwarz - interrupts Wechselmechanismus P14
 plug black - interrupts changer mechanism P14

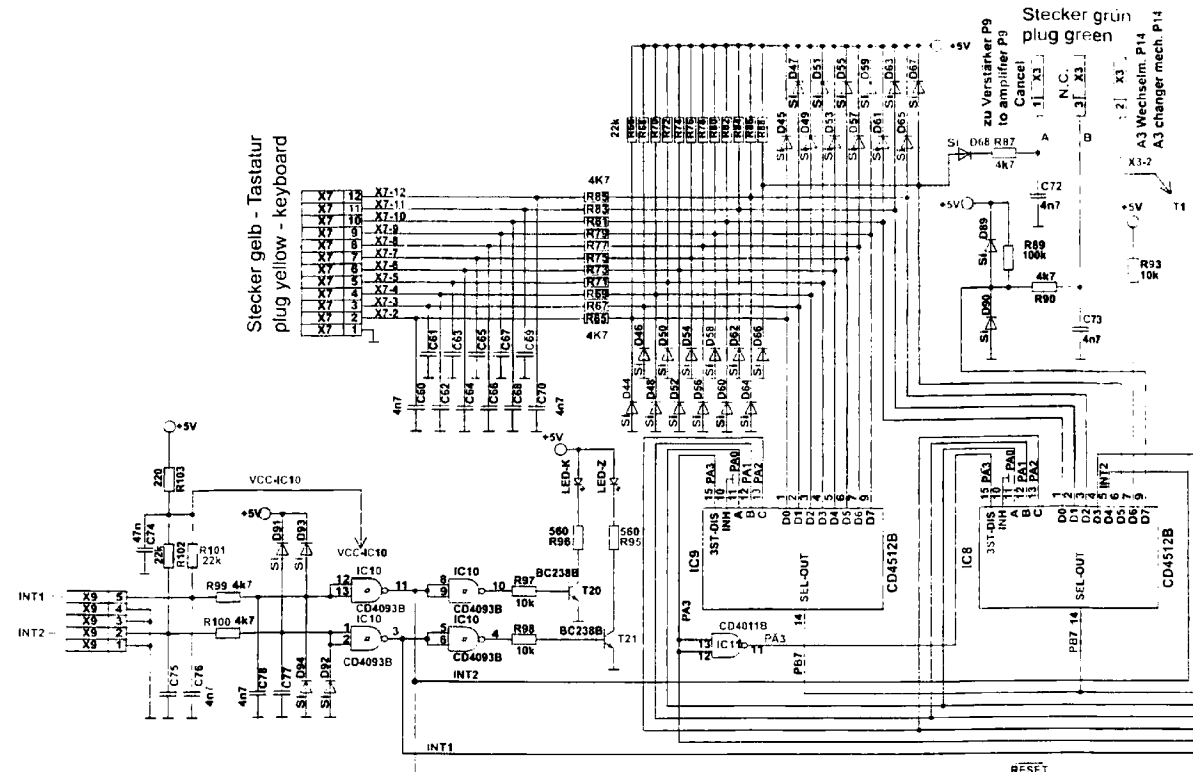


Stecker schwarz - interrupts Wechselmechanismus P14
 plug black - interrupts changer mechanism P14

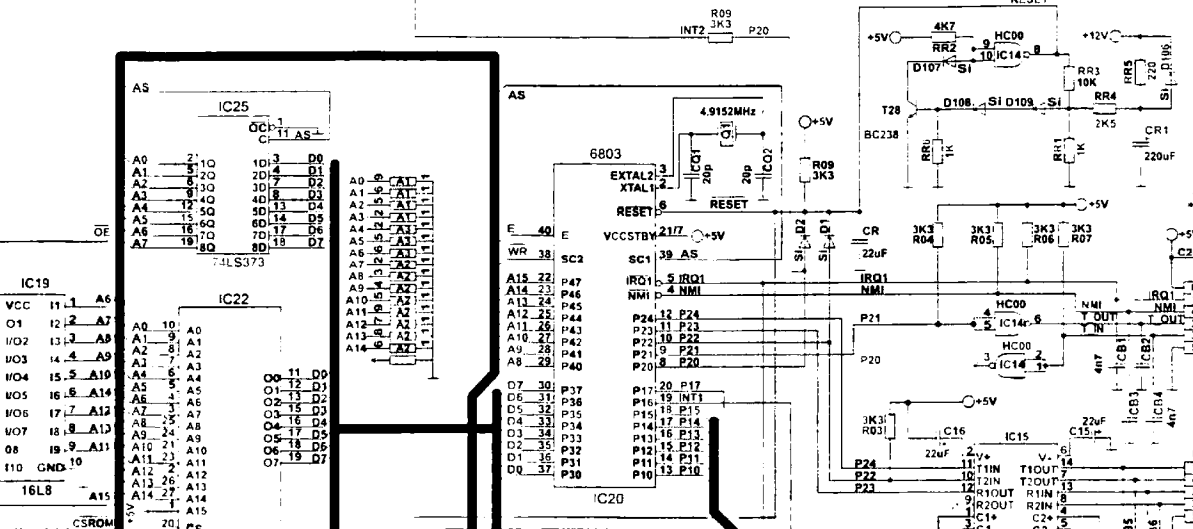


Stecker braun - Ausgänge für...
 plug brown - outputs for...

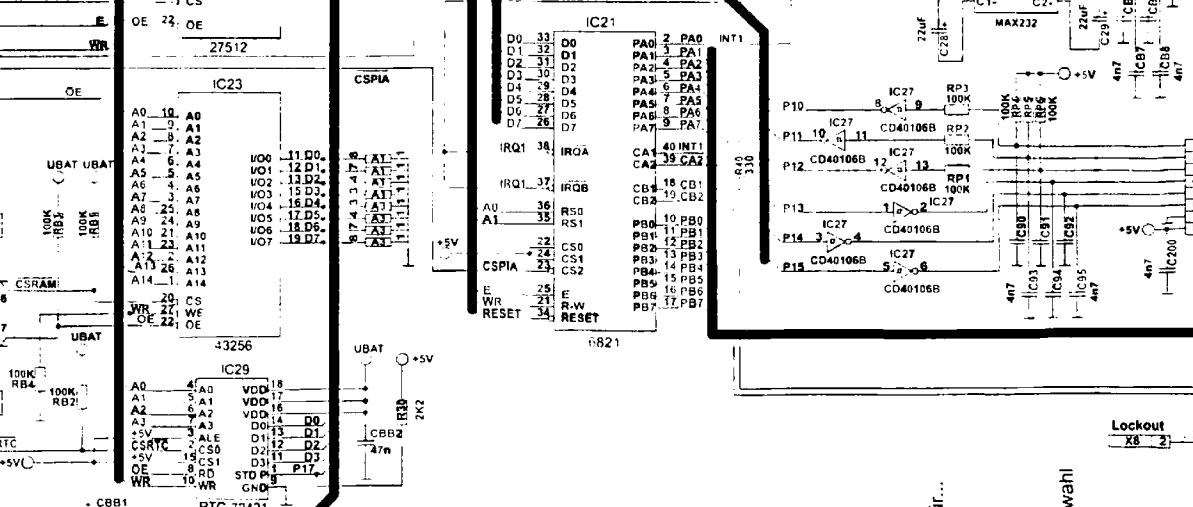


Stecker weiß - Anschluss Fernwahl
 plug white - remote selector

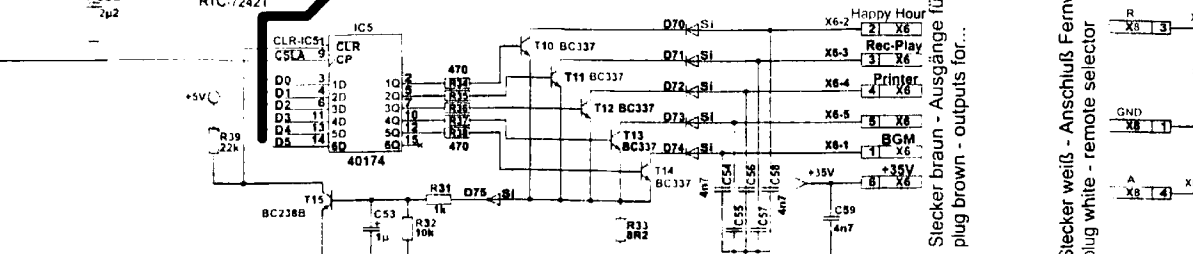


Stecker blau - Adressen CD-Wechsler
 plug blue - address changer mechanism address

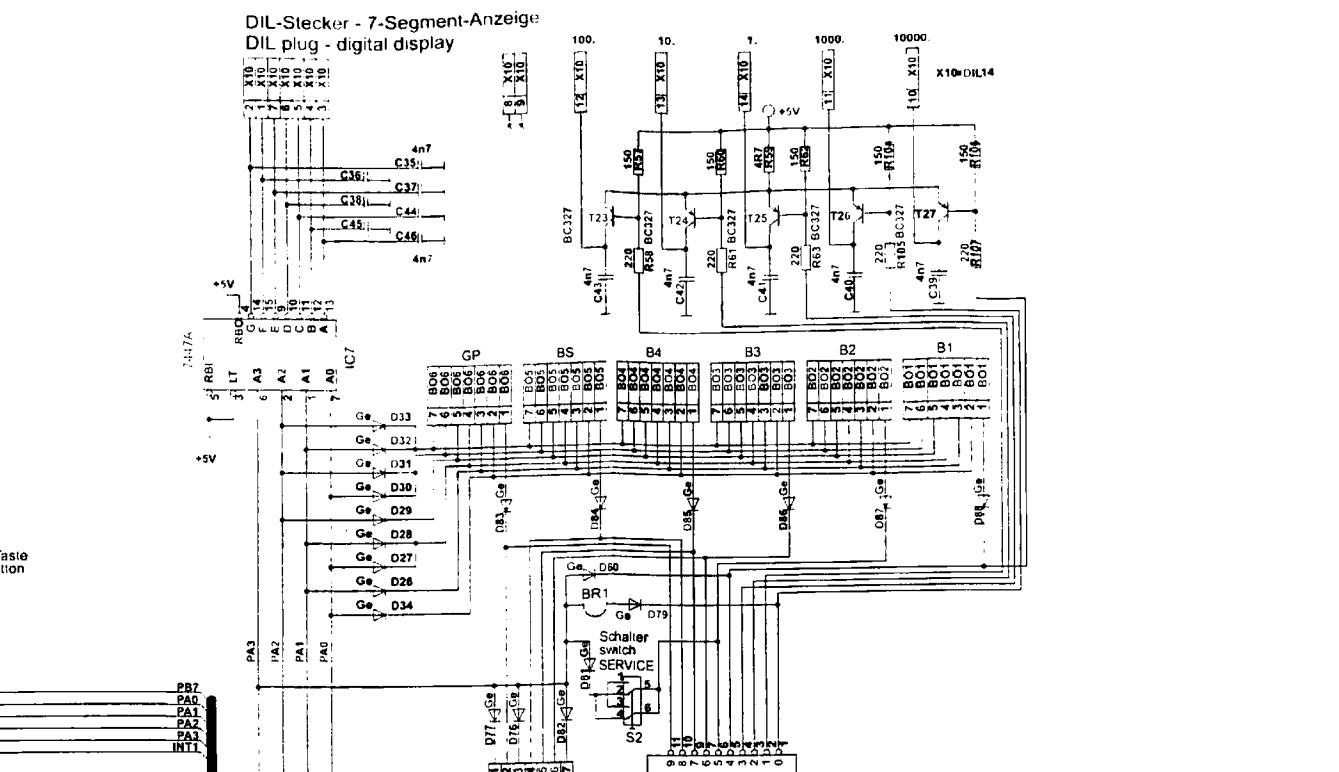


Stecker braun - Ausgänge für...
 plug brown - outputs for...

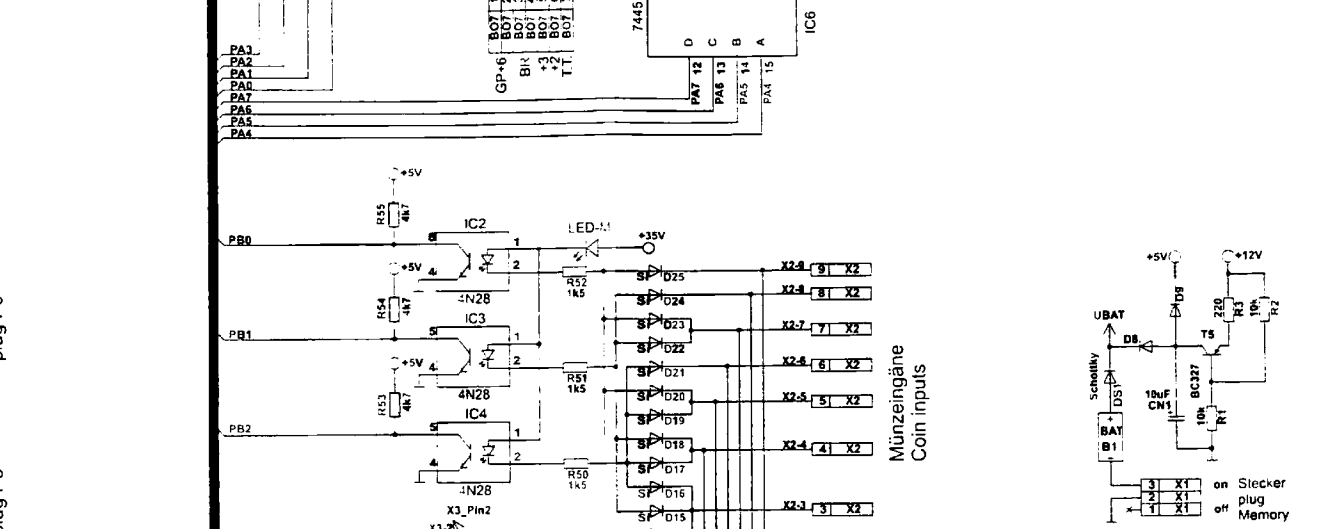


Stecker weiß - Anschluss Fernwahl
 plug white - remote selector

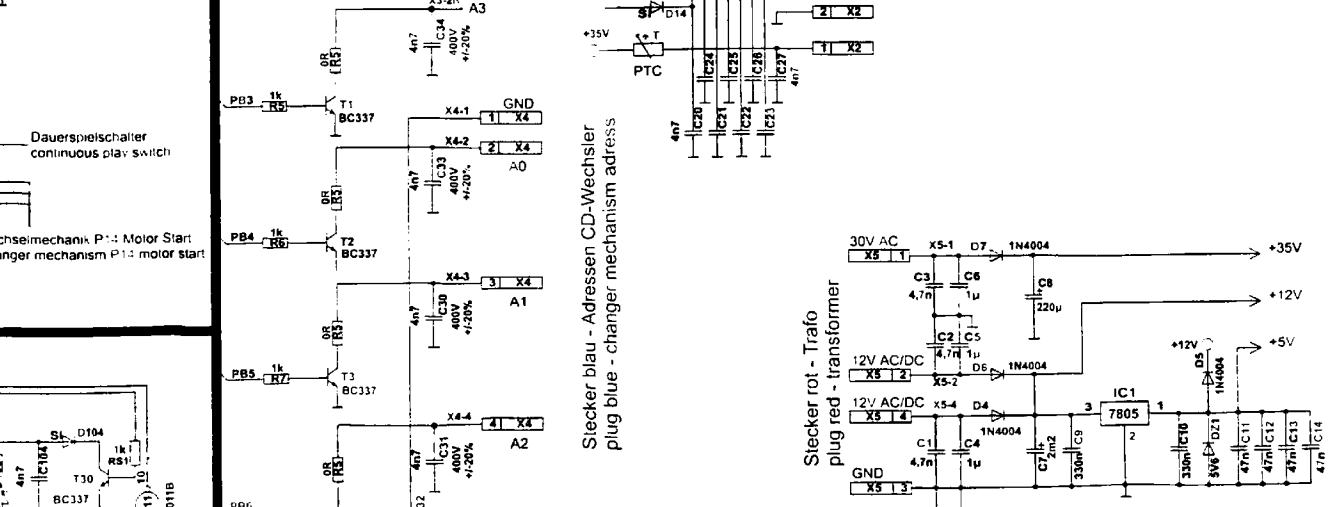


Stecker rot - Trafo
 plug red - transformer

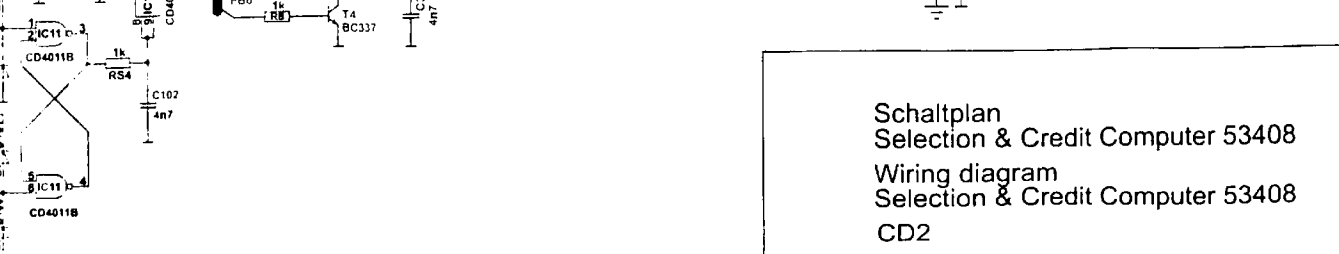


Schaltplan
 Selection & Credit Computer 53408
 Wiring diagram
 Selection & Credit Computer 53408
 CD2

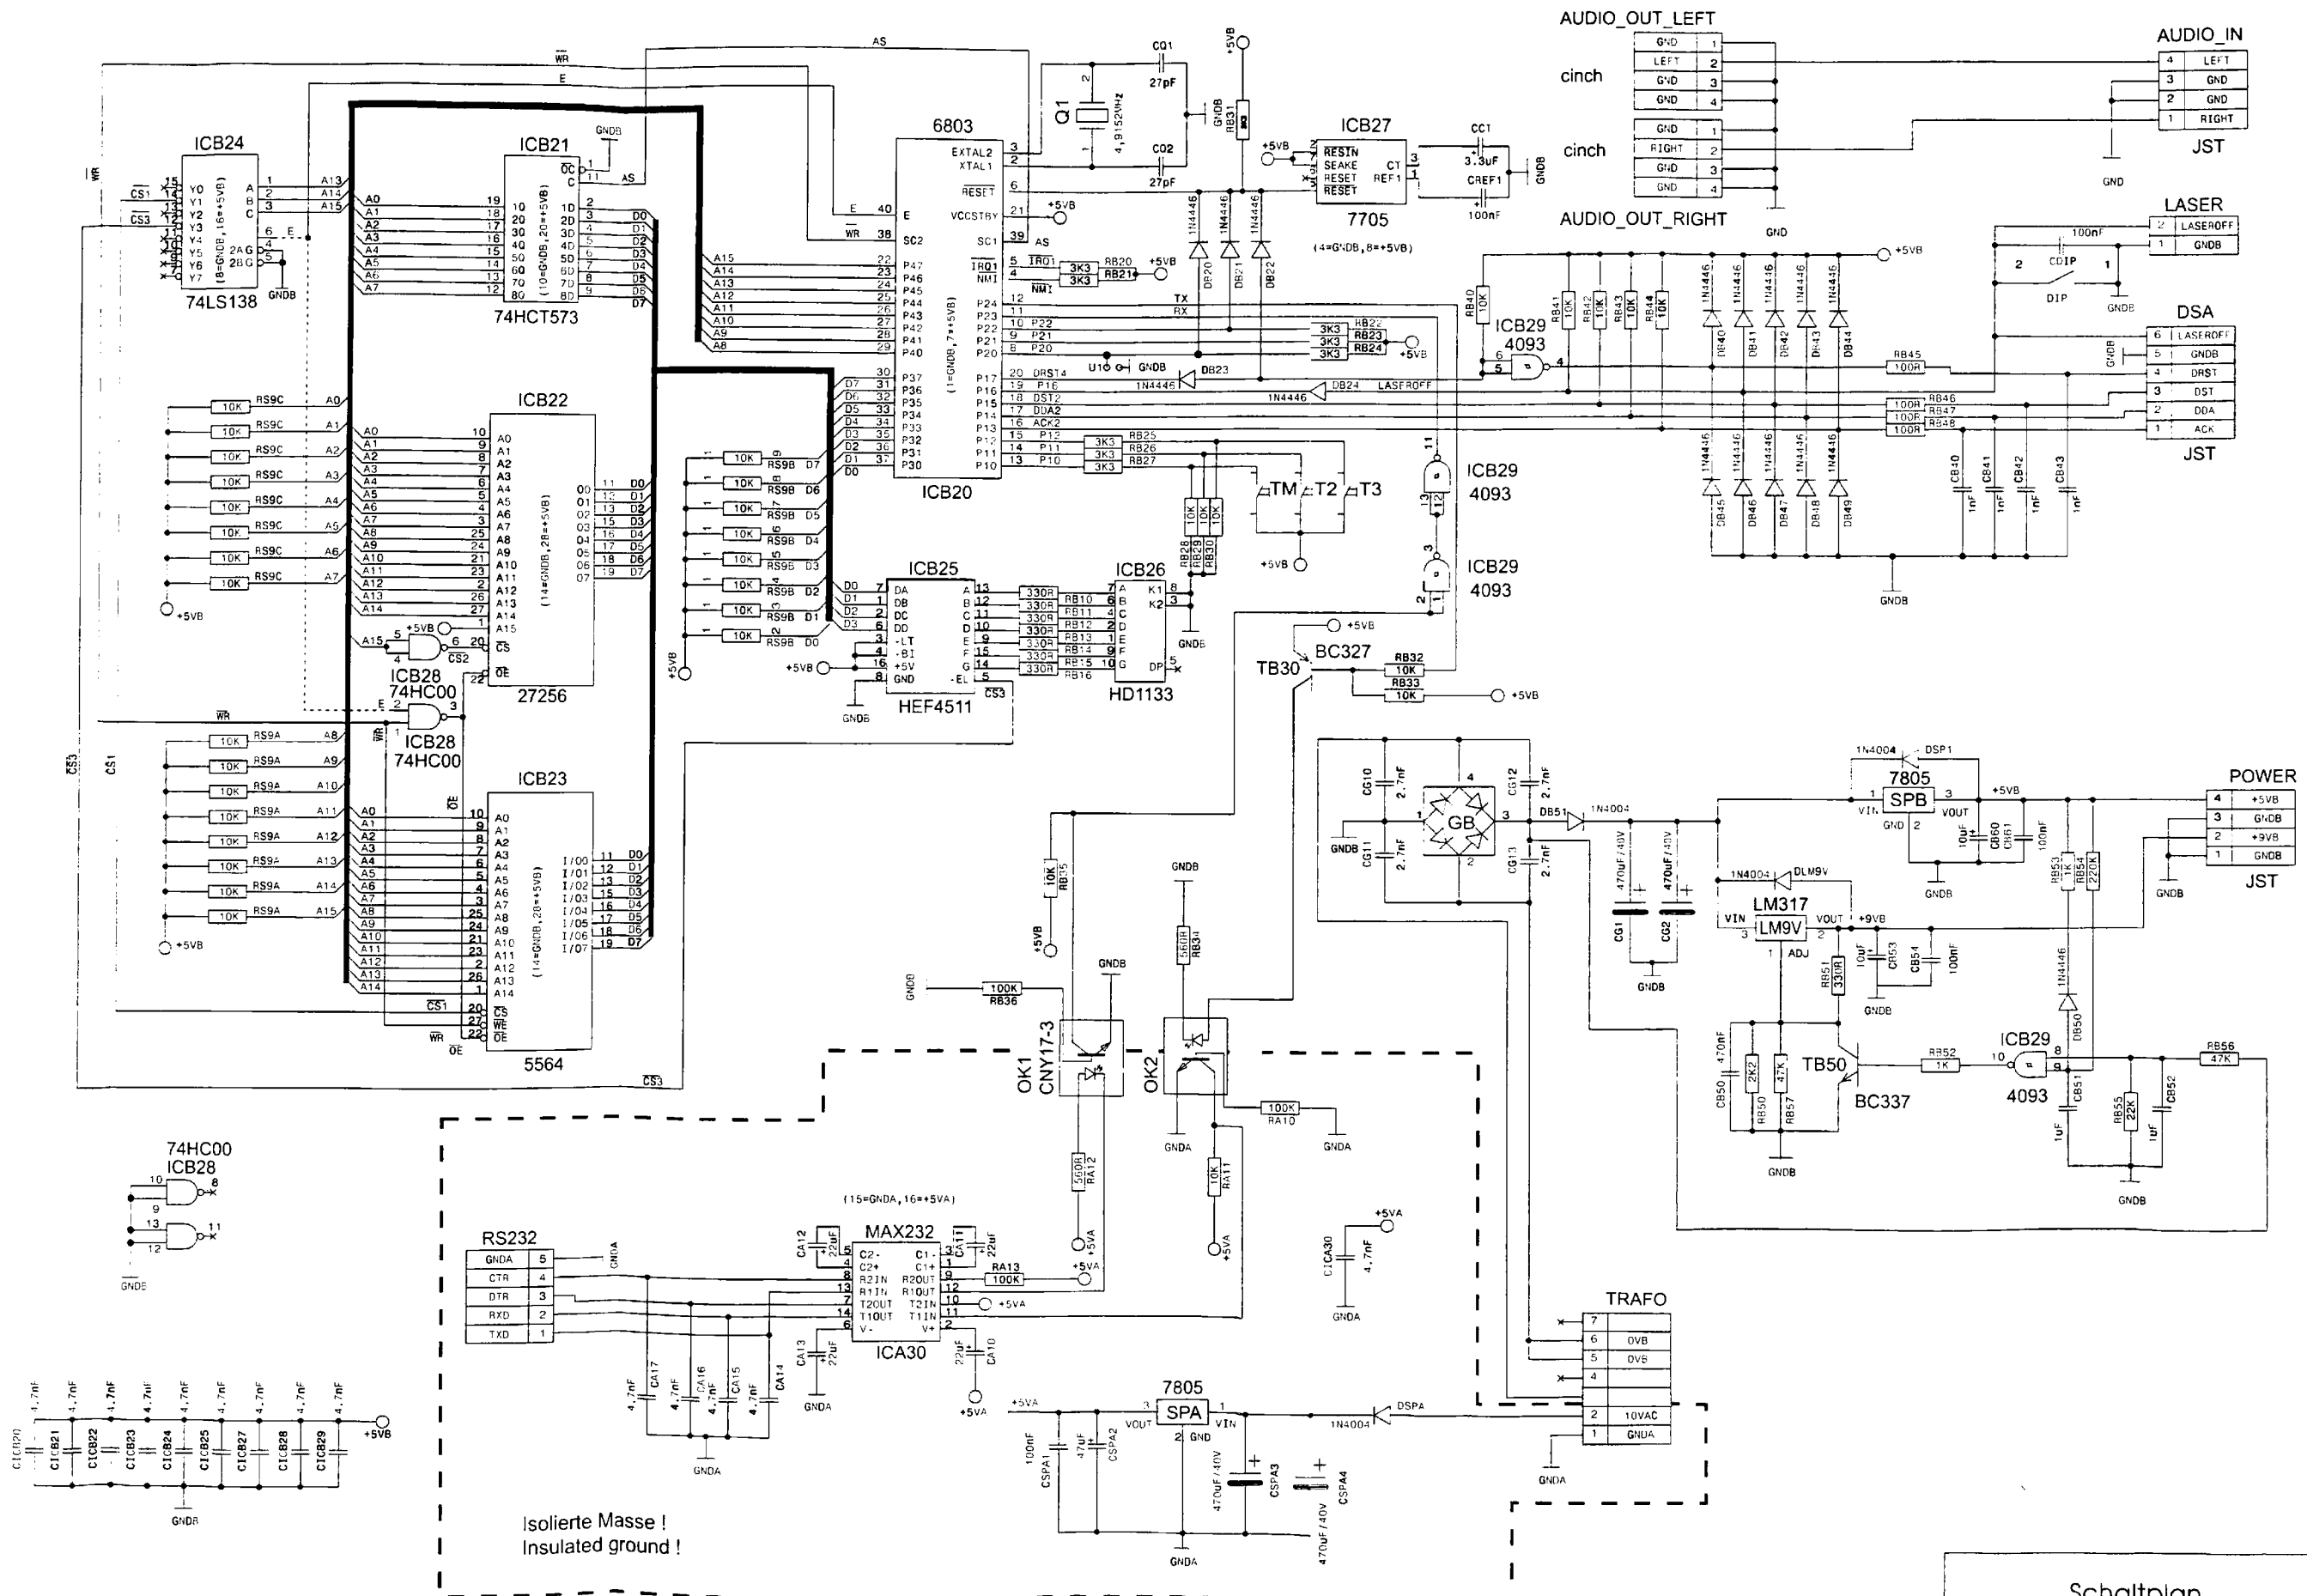


Schaltplan
CDM12 SC-Steuerung
Wiring diagram
CDM12 Serial Controller

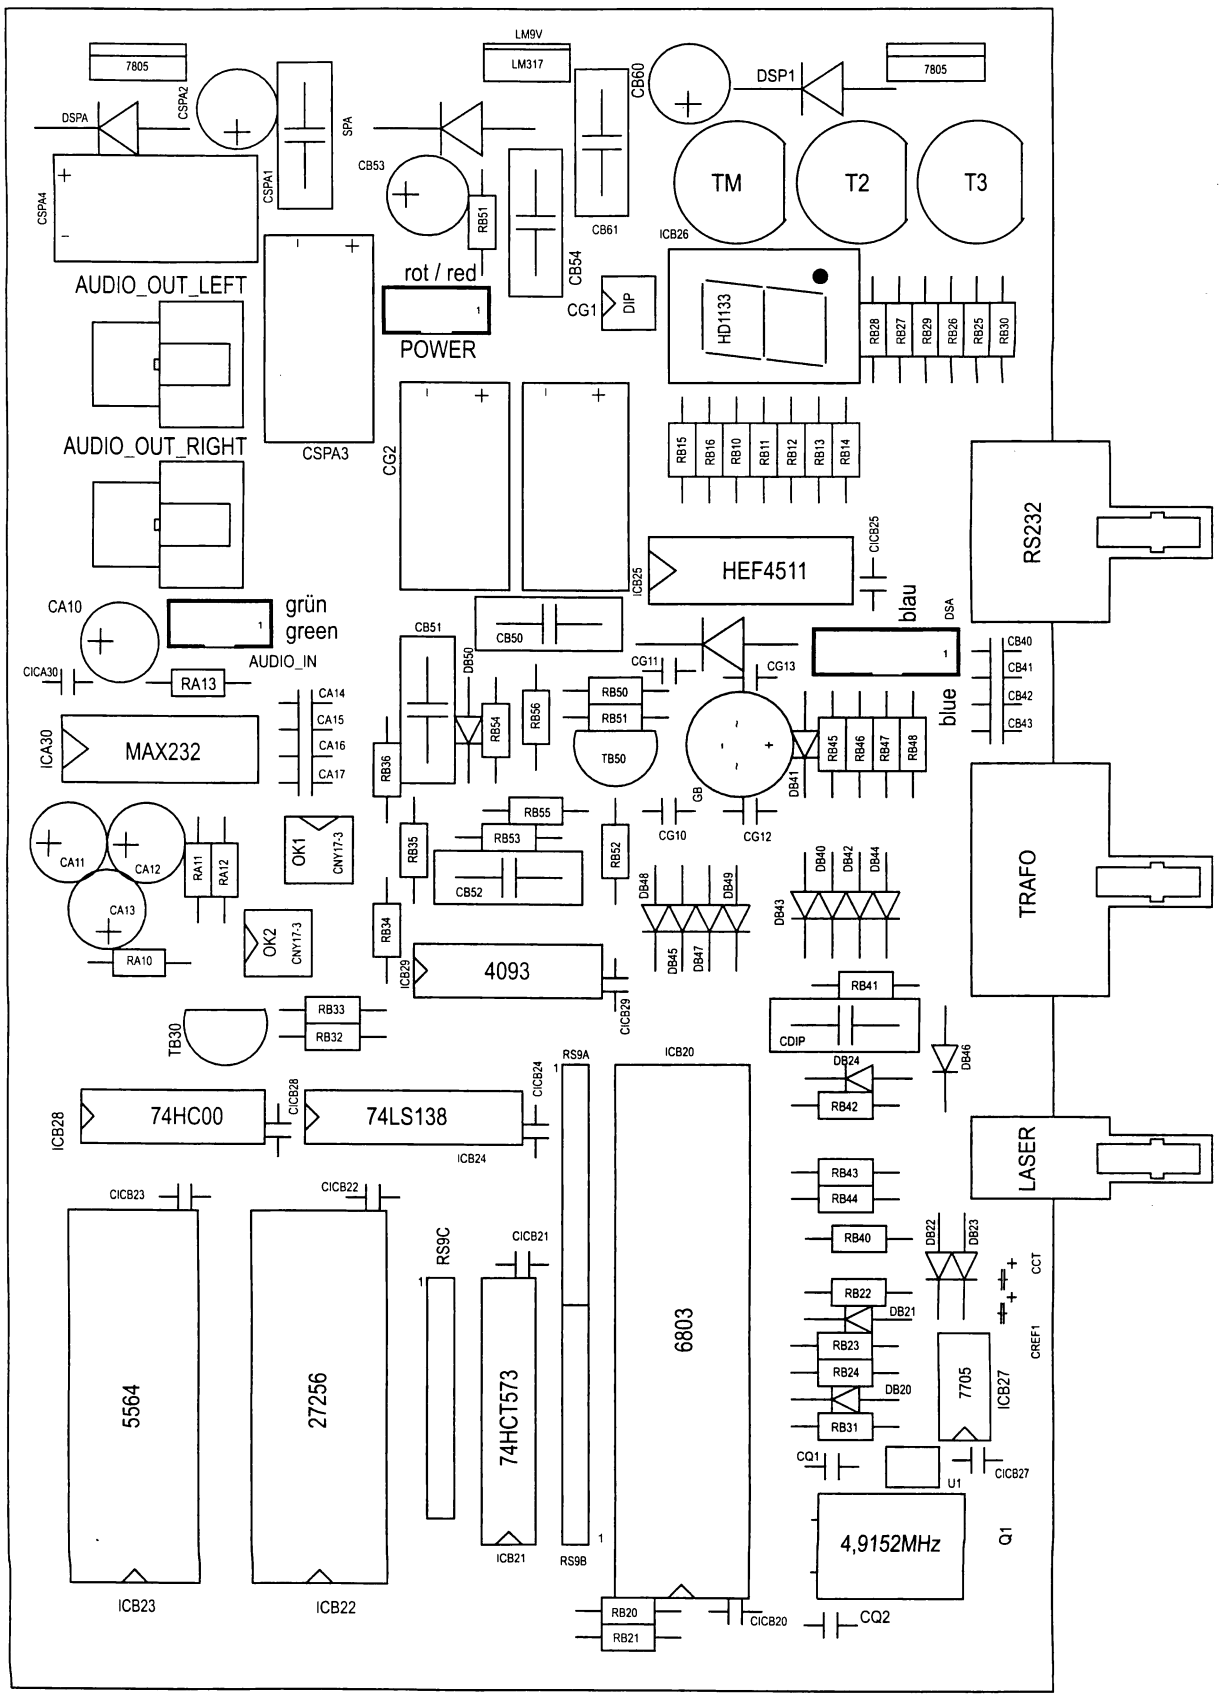

Bestückungsplan
 CDM12 SC-Steuerung
 Board Layout
 CDM12 Serial Controller



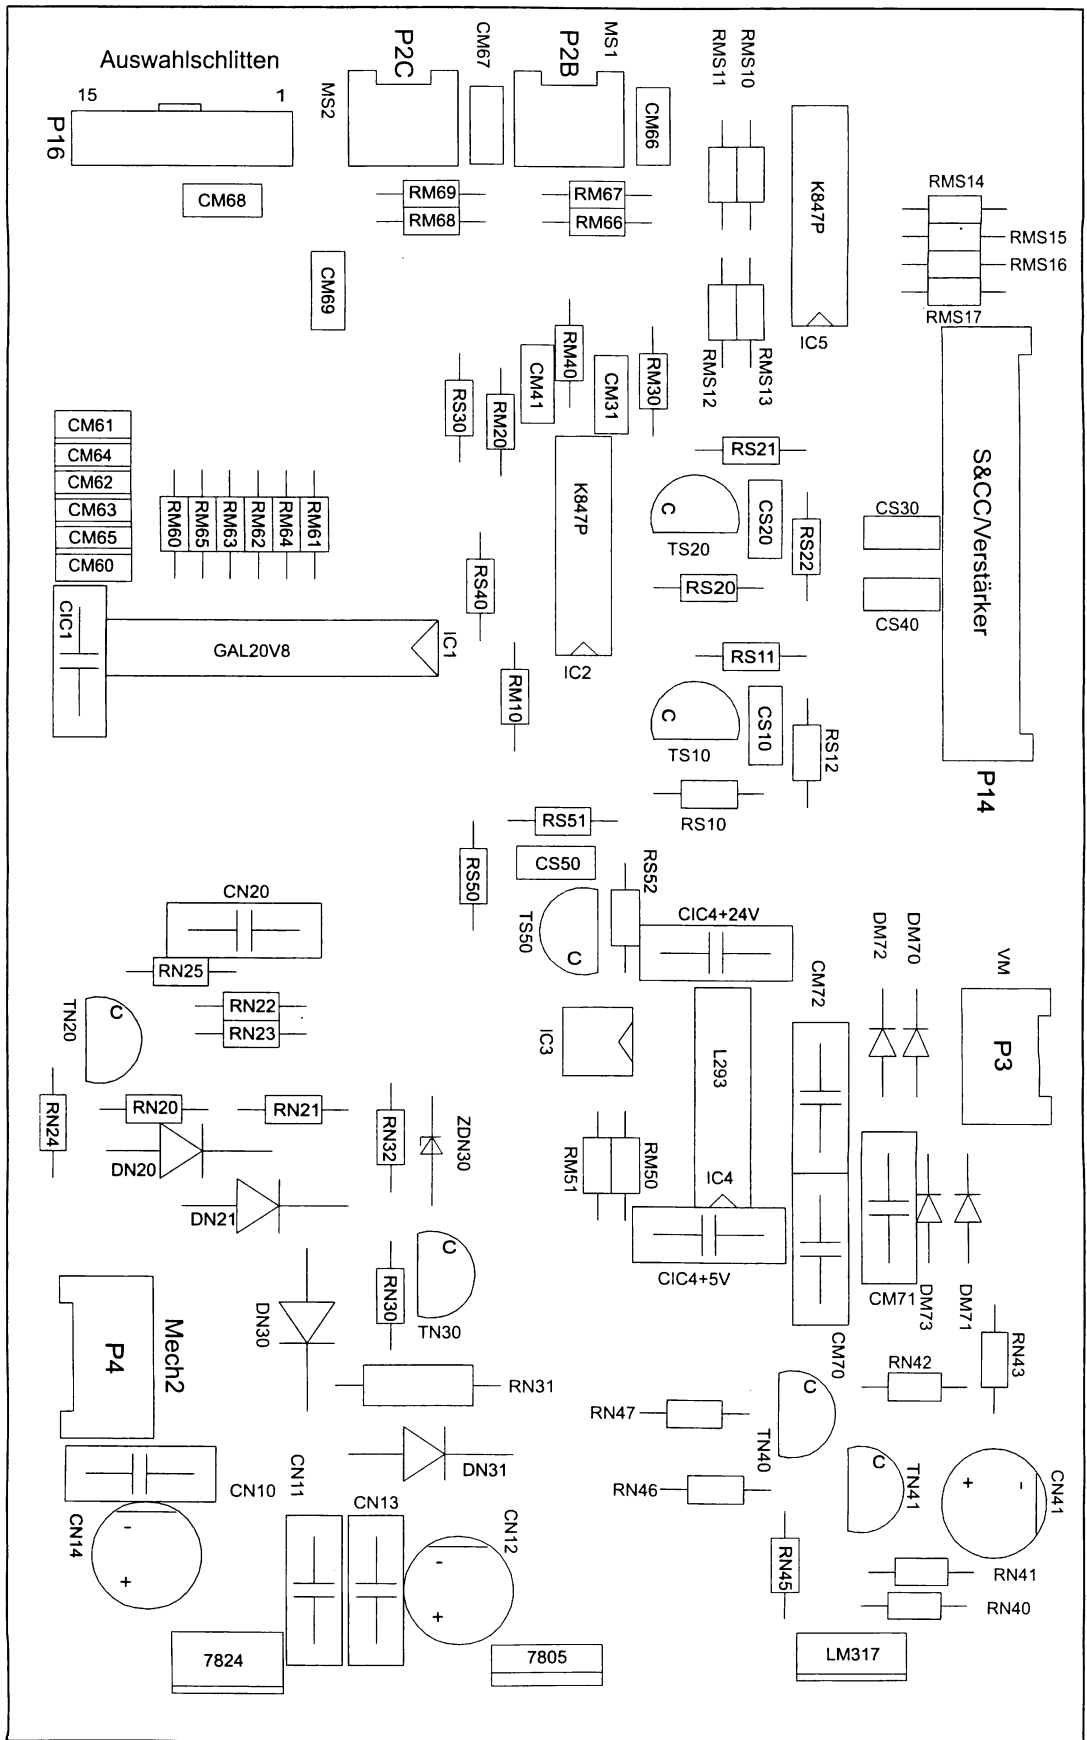



Bestückungsplan / board layout
CD2-SCC Interface

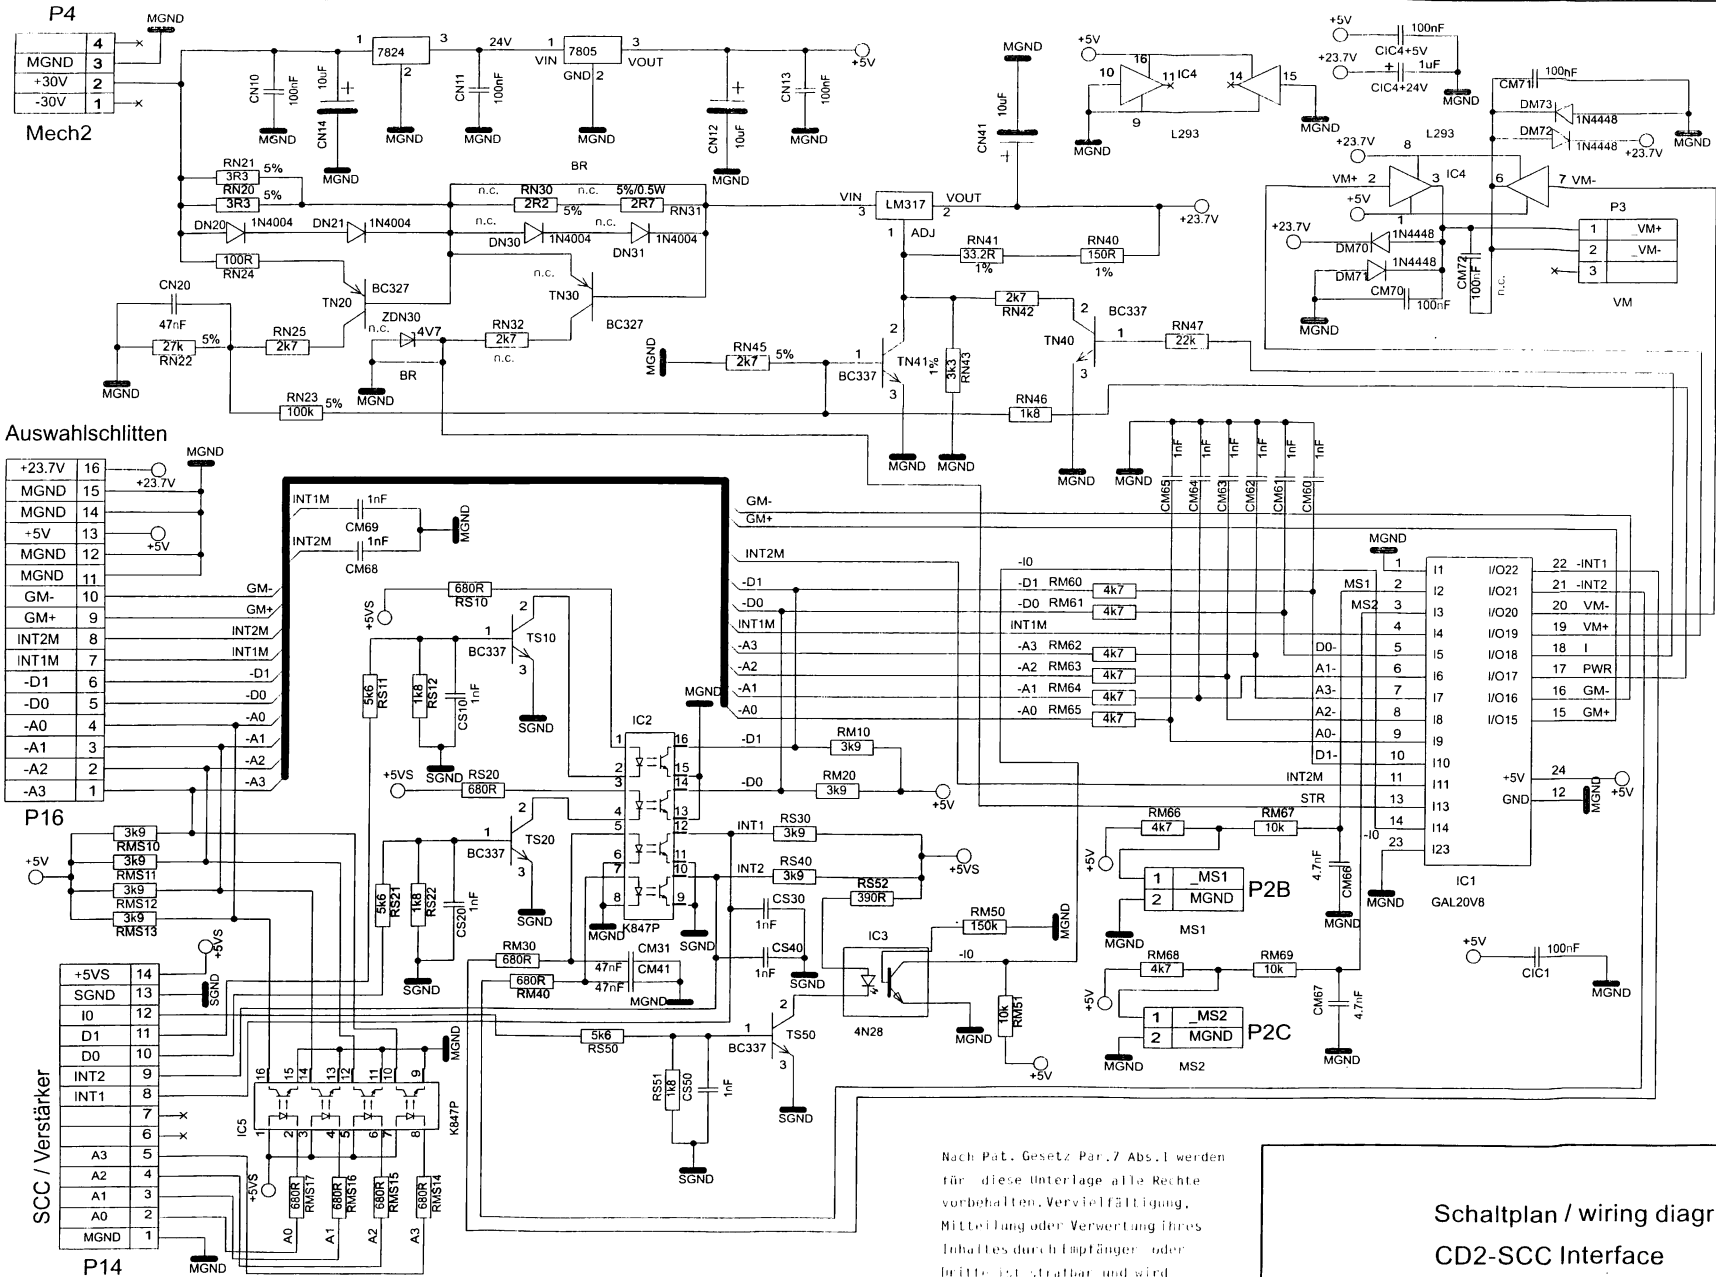


Nach Pat. Gesetz Par. 7 Abs. 1 werden für diese Unterlage alle Rechte vorbehalten. Vervielfältigung, Mitteilung oder Verwertung ihres Inhaltes durch Empfänger oder Dritte ist strafbar und wird gerichtlich verfolgt.

Schaltplan / wiring diagram
CD2-SCC Interface

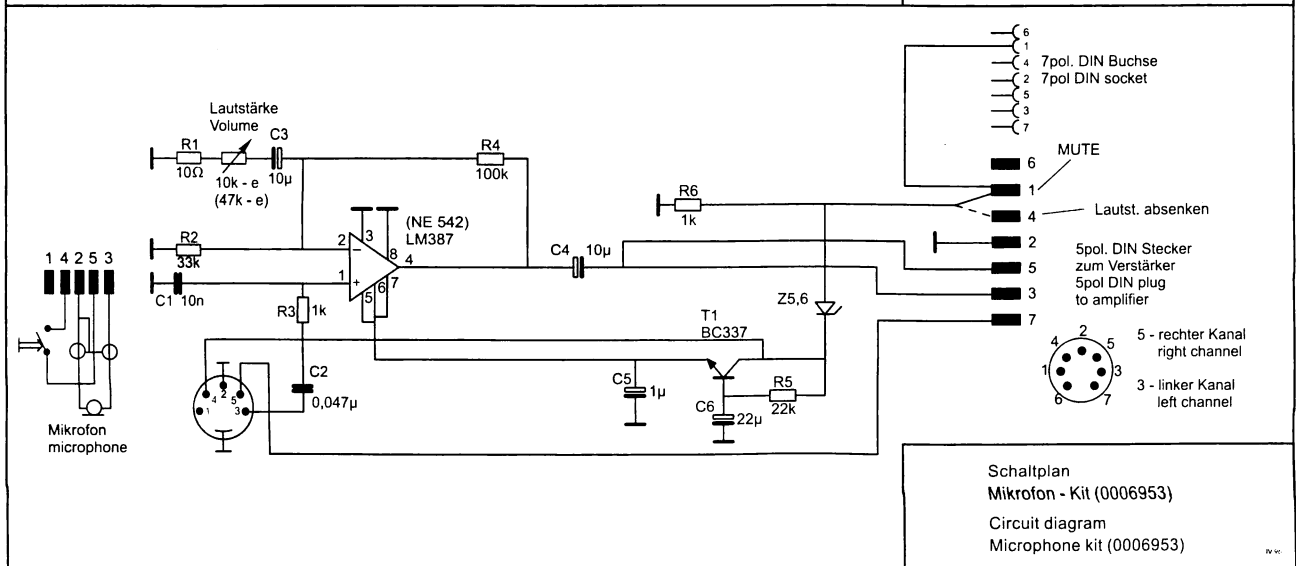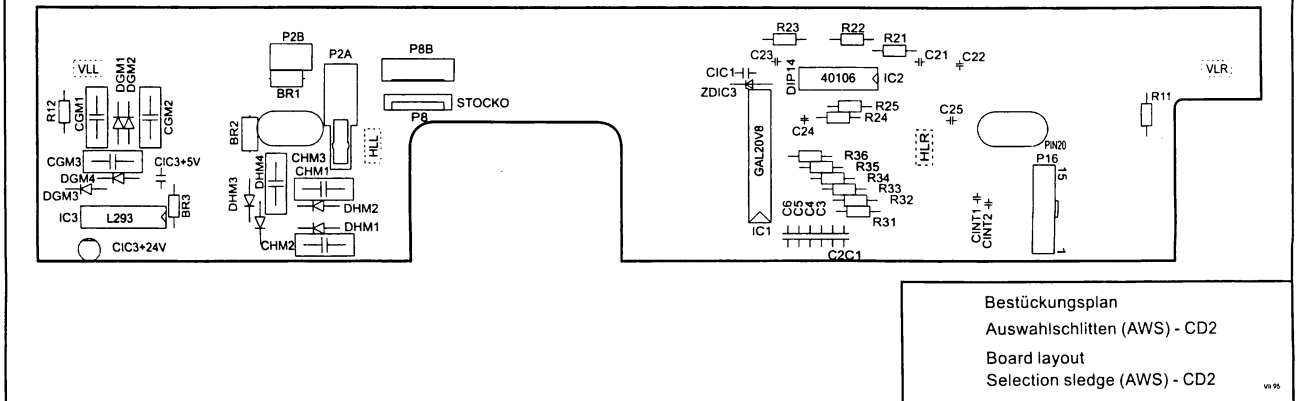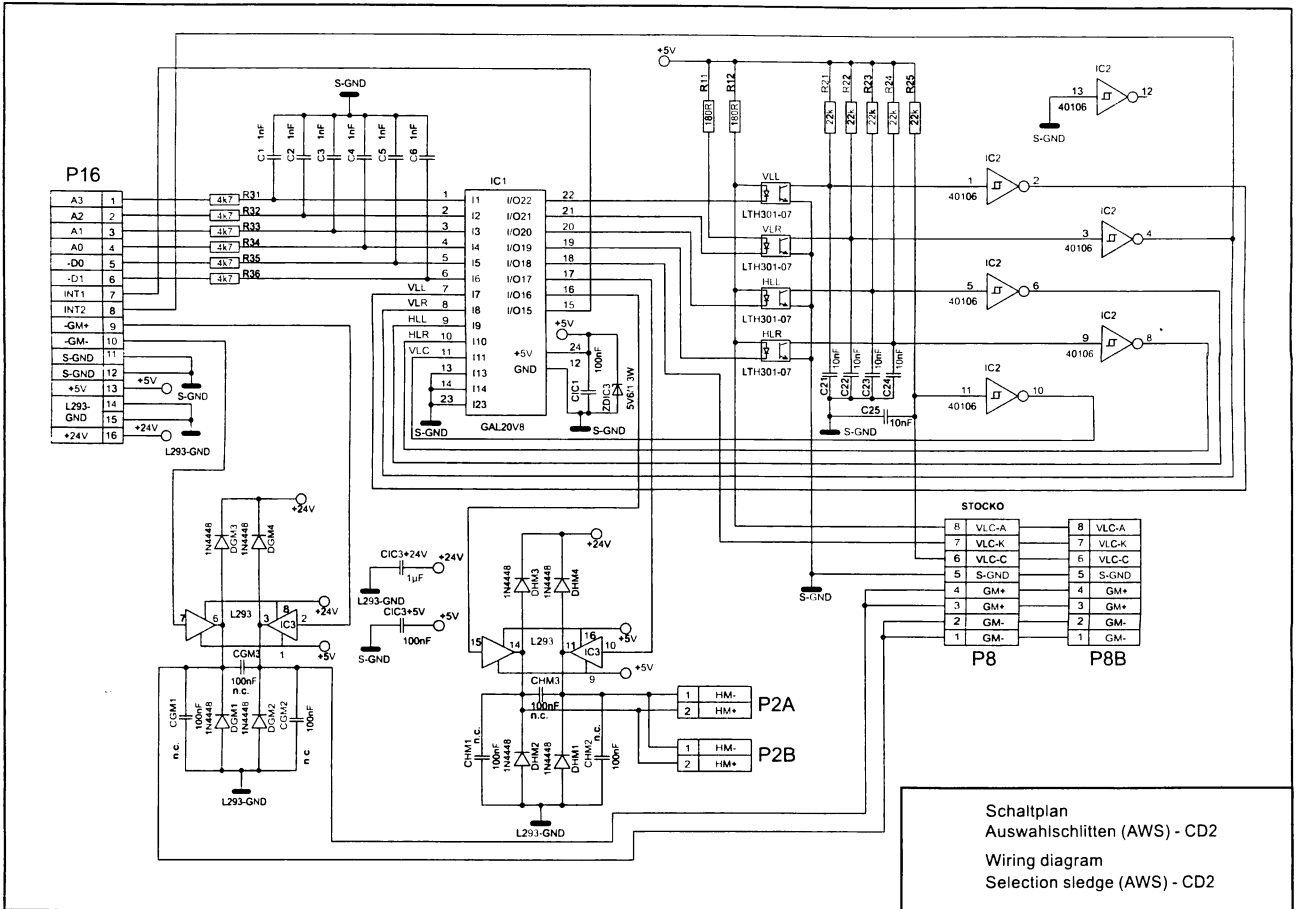


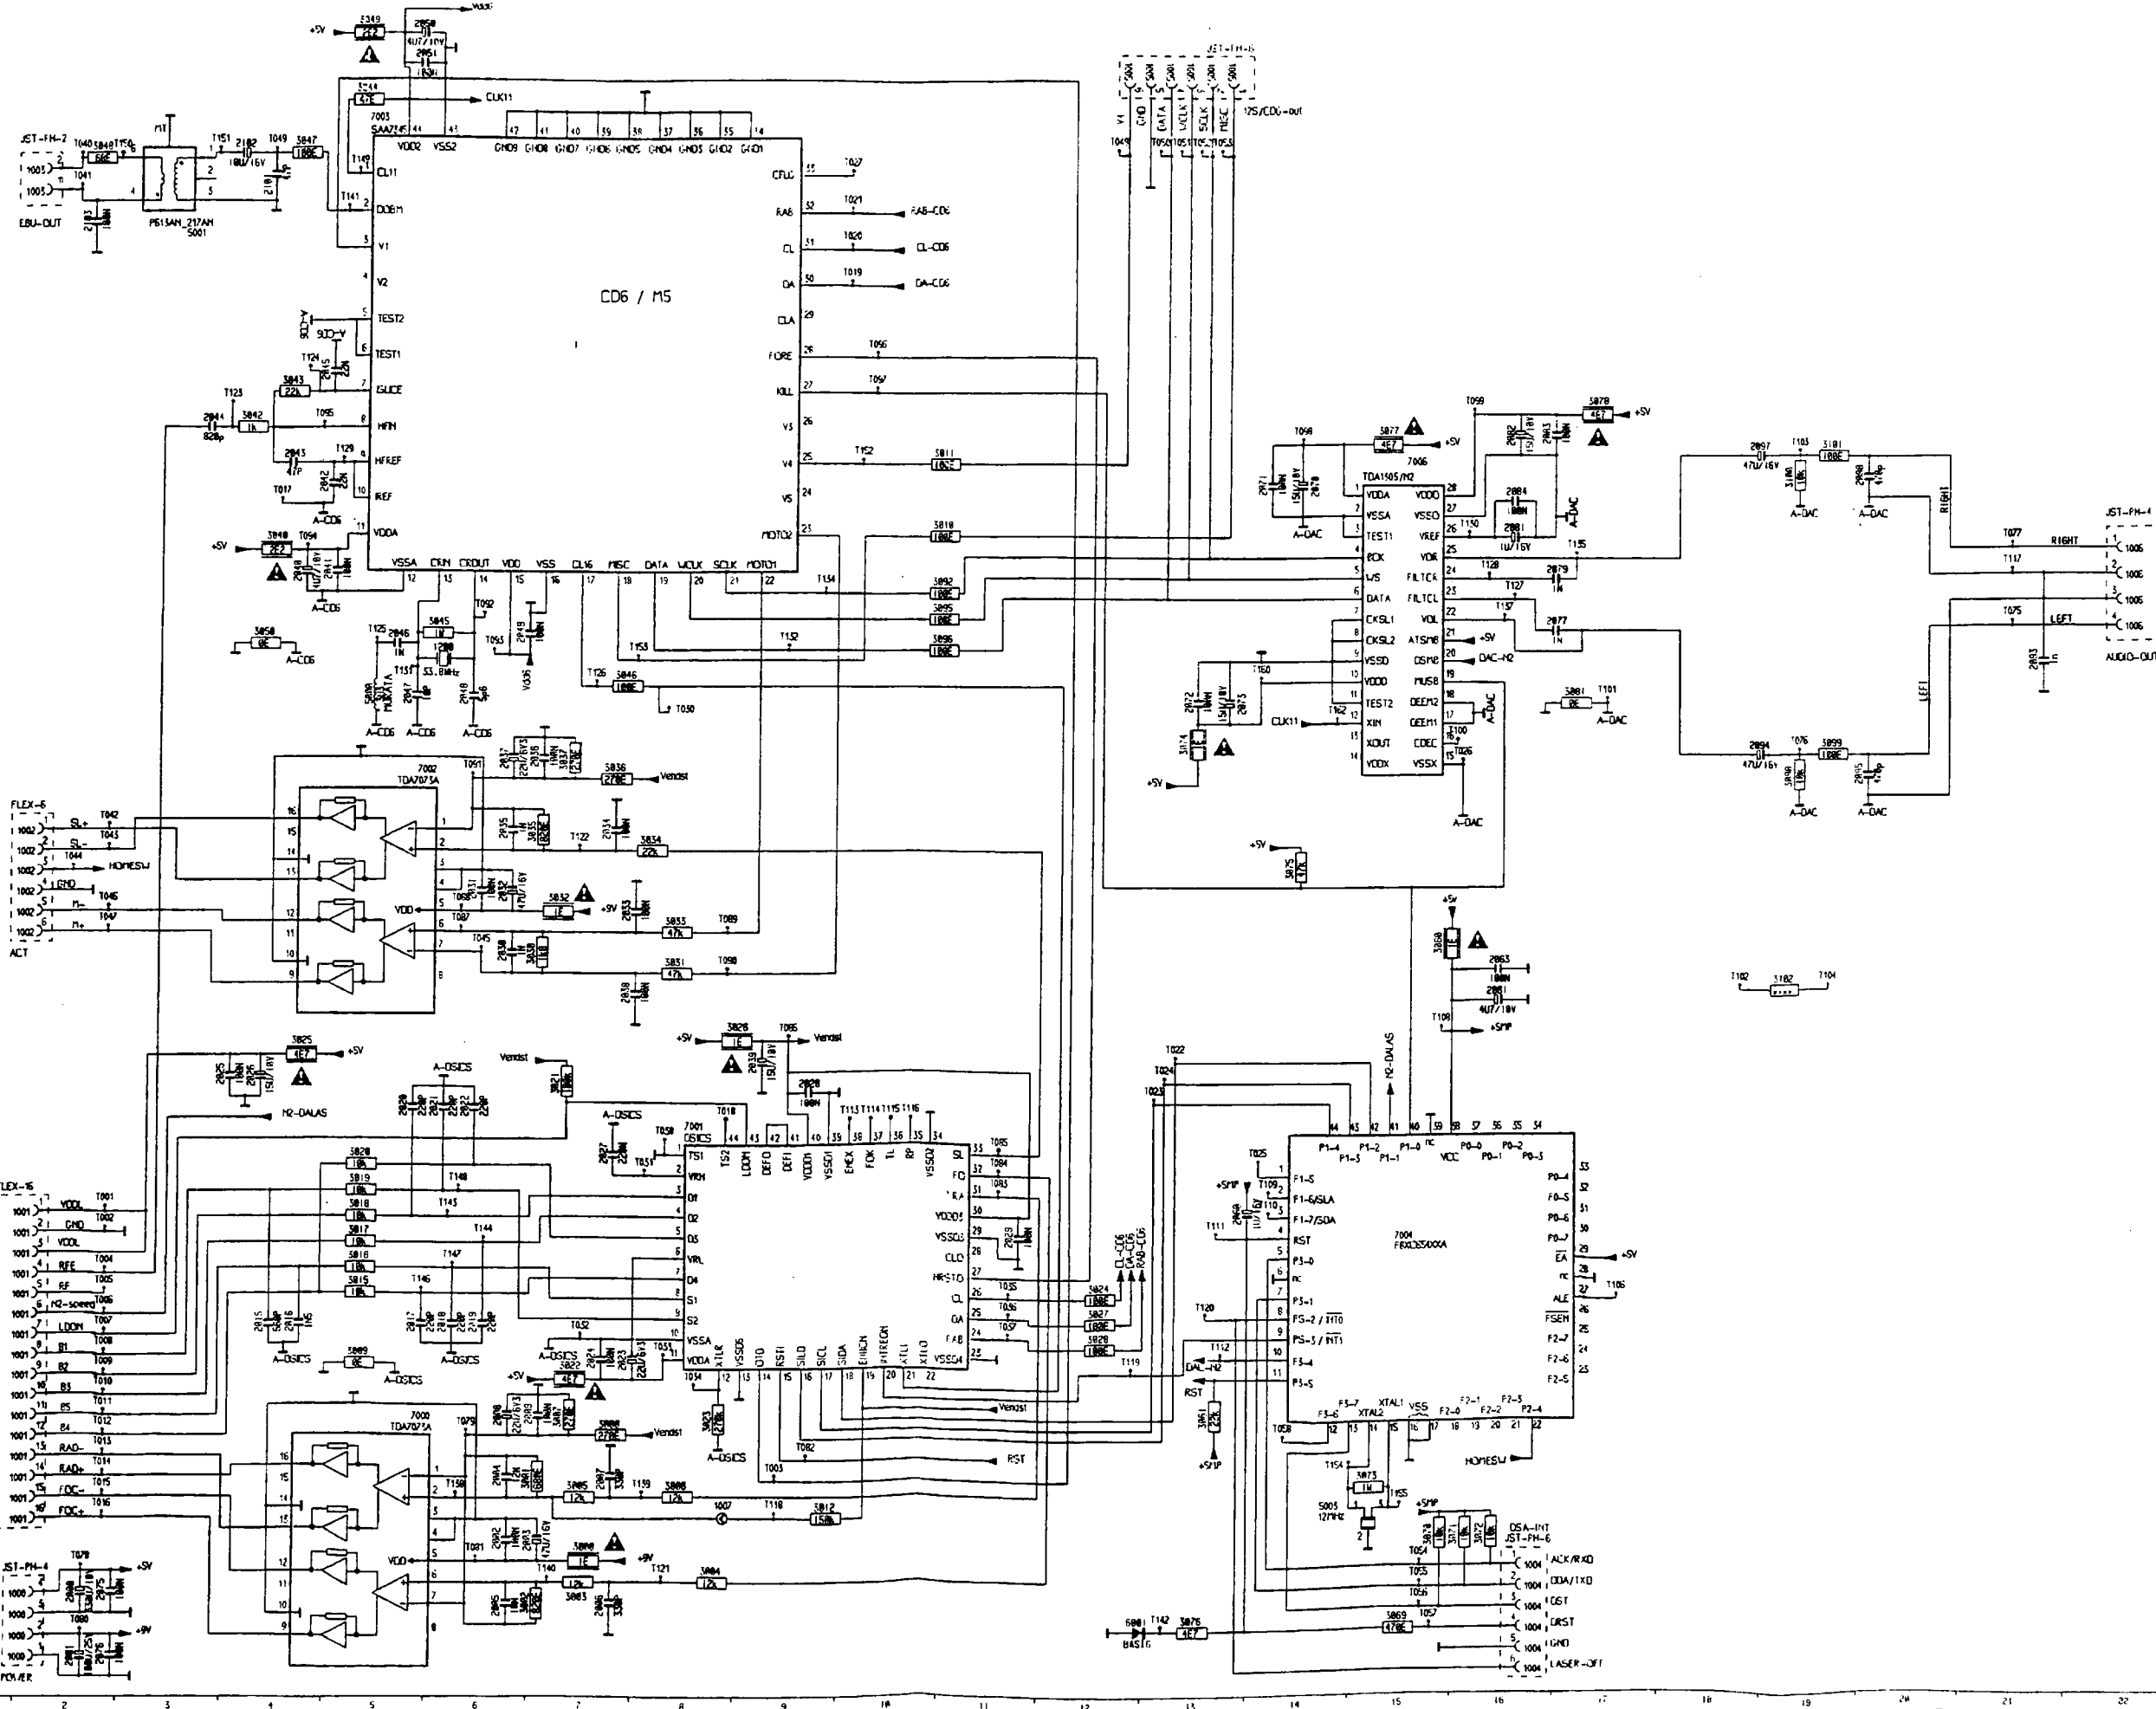

1000	P1	1005	G18
1001	P1	1010	H18
1002	P1	1015	I18
1003	L1	1020	J18
1004	L1	1025	K18
1005	L1	1030	L18
1006	M1	1035	M18
1007	M1	1040	N18
1008	M1	1045	O18
1009	M1	1050	P18
1010	M1	1055	Q18
1011	M1	1060	R18
1012	M1	1065	S18
1013	M1	1070	T18
1014	M1	1075	U18
1015	M1	1080	V18
1016	M1	1085	W18
1017	M1	1090	X18
1018	M1	1095	Y18
1019	M1	1100	Z18
1020	M1	1105	AA18
1021	M1	1110	AB18
1022	M1	1115	AC18
1023	M1	1120	AD18
1024	M1	1125	AE18
1025	M1	1130	AF18
1026	M1	1135	AG18
1027	M1	1140	AH18
1028	M1	1145	AI18
1029	M1	1150	AJ18
1030	M1	1155	AK18
1031	M1	1160	AL18
1032	M1	1165	AM18
1033	M1	1170	AN18
1034	M1	1175	AO18
1035	M1	1180	AP18
1036	M1	1185	AQ18
1037	M1	1190	AR18
1038	M1	1195	AS18
1039	M1	1200	AT18
1040	M1	1205	AU18
1041	M1	1210	AV18
1042	M1	1215	AW18
1043	M1	1220	AX18
1044	M1	1225	AY18
1045	M1	1230	AZ18
1046	M1	1235	BA18
1047	M1	1240	BB18
1048	M1	1245	BC18
1049	M1	1250	BD18
1050	M1	1255	BE18
1051	M1	1260	BF18
1052	M1	1265	BG18
1053	M1	1270	BH18
1054	M1	1275	BI18
1055	M1	1280	BJ18
1056	M1	1285	BK18
1057	M1	1290	BL18
1058	M1	1295	BM18
1059	M1	1300	BN18
1060	M1	1305	BO18
1061	M1	1310	BP18
1062	M1	1315	BQ18
1063	M1	1320	BR18
1064	M1	1325	BS18
1065	M1	1330	BT18
1066	M1	1335	BU18
1067	M1	1340	BV18
1068	M1	1345	BW18
1069	M1	1350	BX18
1070	M1	1355	BY18
1071	M1	1360	BZ18
1072	M1	1365	CA18
1073	M1	1370	CB18
1074	M1	1375	CC18
1075	M1	1380	CD18
1076	M1	1385	CE18
1077	M1	1390	CF18
1078	M1	1395	CG18
1079	M1	1400	CH18
1080	M1	1405	CI18
1081	M1	1410	CJ18
1082	M1	1415	CK18
1083	M1	1420	CL18
1084	M1	1425	CM18
1085	M1	1430	CN18
1086	M1	1435	CO18
1087	M1	1440	CP18
1088	M1	1445	CQ18
1089	M1	1450	CR18
1090	M1	1455	CS18
1091	M1	1460	CT18
1092	M1	1465	CU18
1093	M1	1470	CV18
1094	M1	1475	CW18
1095	M1	1480	CX18
1096	M1	1485	CY18
1097	M1	1490	CZ18
1098	M1	1495	DA18
1099	M1	1500	DB18
1100	M1	1505	DC18
1101	M1	1510	DD18
1102	M1	1515	DE18
1103	M1	1520	DF18
1104	M1	1525	DG18
1105	M1	1530	DH18
1106	M1	1535	DI18
1107	M1	1540	DJ18
1108	M1	1545	DK18
1109	M1	1550	DL18
1110	M1	1555	DM18
1111	M1	1560	DN18
1112	M1	1565	DO18
1113	M1	1570	DP18
1114	M1	1575	DQ18
1115	M1	1580	DR18
1116	M1	1585	DS18
1117	M1	1590	DT18
1118	M1	1595	DU18
1119	M1	1600	DV18
1120	M1	1605	DW18
1121	M1	1610	DX18
1122	M1	1615	DY18
1123	M1	1620	DZ18
1124	M1	1625	EA18
1125	M1	1630	EB18
1126	M1	1635	EC18
1127	M1	1640	ED18
1128	M1	1645	EE18
1129	M1	1650	EF18
1130	M1	1655	EG18
1131	M1	1660	EH18
1132	M1	1665	EI18
1133	M1	1670	EJ18
1134	M1	1675	EK18
1135	M1	1680	EL18
1136	M1	1685	EM18
1137	M1	1690	EN18
1138	M1	1695	EO18
1139	M1	1700	EP18
1140	M1	1705	EQ18
1141	M1	1710	ER18
1142	M1	1715	ES18
1143	M1	1720	ET18
1144	M1	1725	EU18
1145	M1	1730	EV18
1146	M1	1735	EW18
1147	M1	1740	EX18
1148	M1	1745	EY18
1149	M1	1750	EZ18
1150	M1	1755	FA18
1151	M1	1760	FB18
1152	M1	1765	FC18
1153	M1	1770	FD18
1154	M1	1775	FE18
1155	M1	1780	FF18
1156	M1	1785	FG18
1157	M1	1790	FH18
1158	M1	1795	FI18
1159	M1	1800	FJ18
1160	M1	1805	FK18
1161	M1	1810	FL18
1162	M1	1815	FM18
1163	M1	1820	FN18
1164	M1	1825	FO18
1165	M1	1830	FP18
1166	M1	1835	FQ18
1167	M1	1840	FR18
1168	M1	1845	FS18
1169	M1	1850	FT18
1170	M1	1855	FU18
1171	M1	1860	FV18
1172	M1	1865	FW18
1173	M1	1870	FX18
1174	M1	1875	FY18
1175	M1	1880	FZ18
1176	M1	1885	GA18
1177	M1	1890	GB18
1178	M1	1895	GC18
1179	M1	1900	GD18
1180	M1	1905	GE18
1181	M1	1910	GF18
1182	M1	1915	GH18
1183	M1	1920	GI18
1184	M1	1925	GO18
1185	M1	1930	GP18
1186	M1	1935	GQ18
1187	M1	1940	GR18
1188	M1	1945	GS18
1189	M1	1950	GT18
1190	M1	1955	GU18
1191	M1	1960	GV18
1192	M1	1965	GW18
1193	M1	1970	GX18
1194	M1	1975	GY18
1195	M1	1980	GZ18
1196	M1	1985	HA18
1197	M1	1990	HB18
1198	M1	1995	HC18
1199	M1	2000	HD18

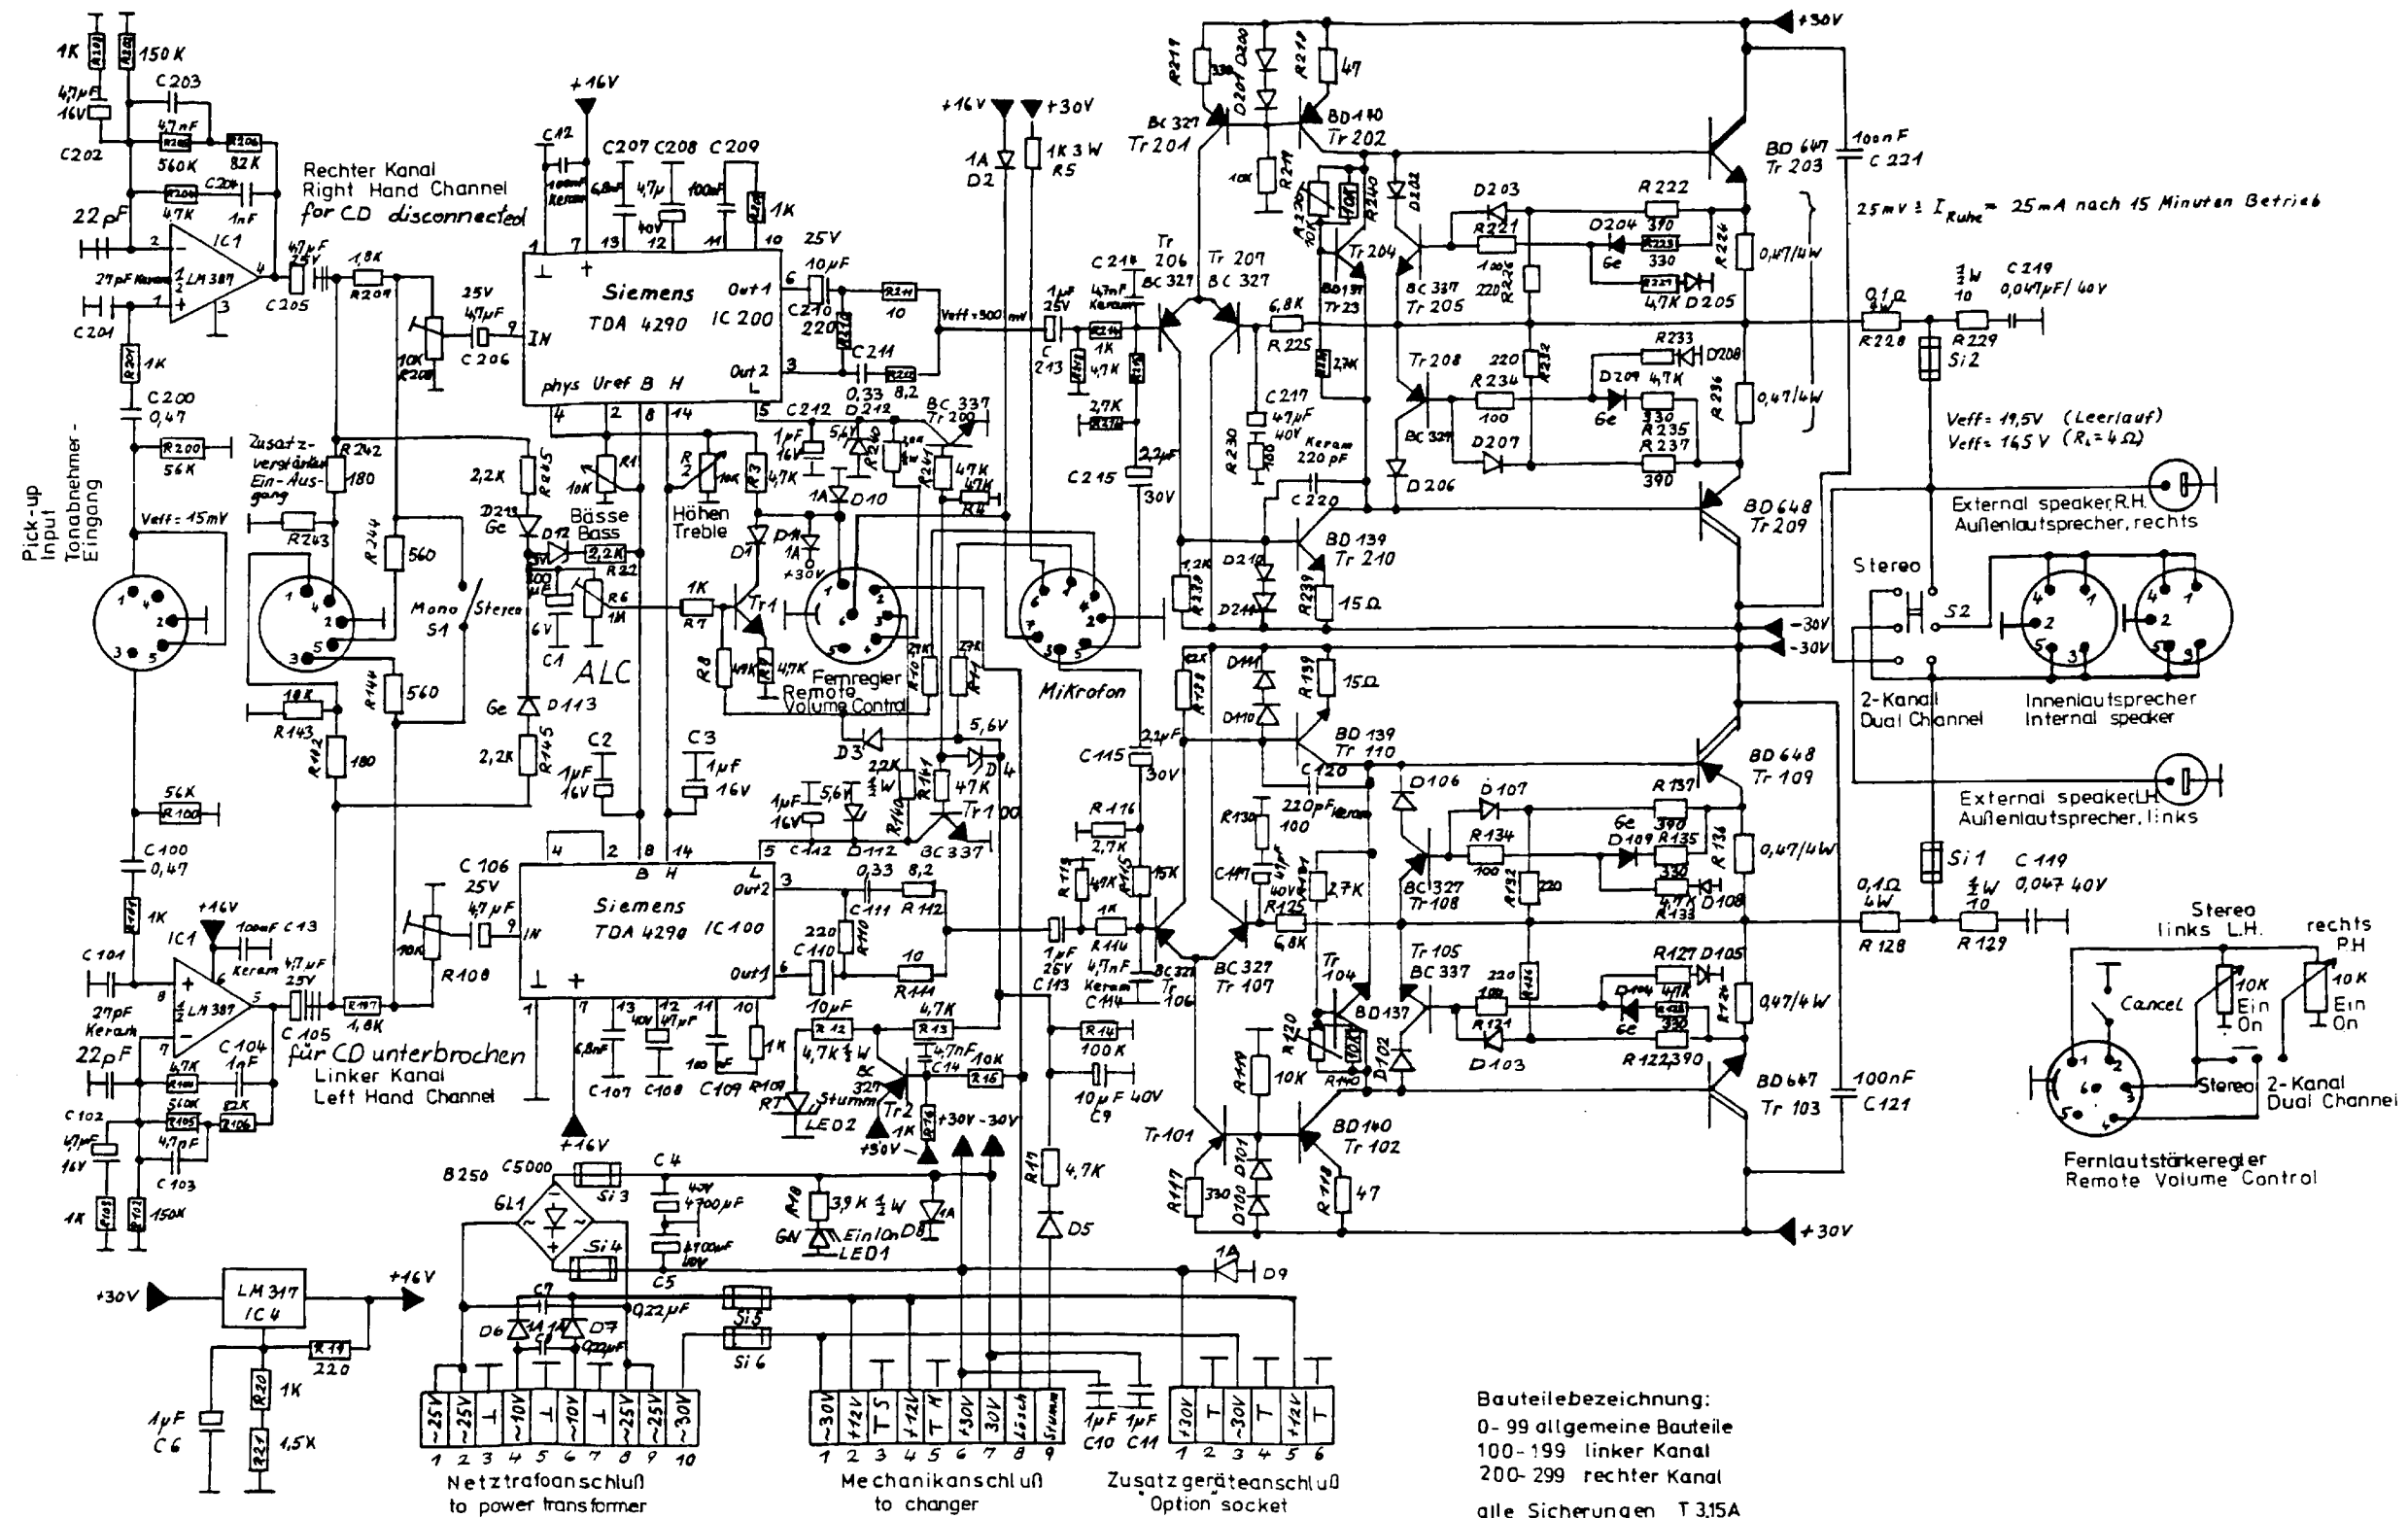

Schaltplan
Verstärker 184
Wiring diagram
Amplifier 184


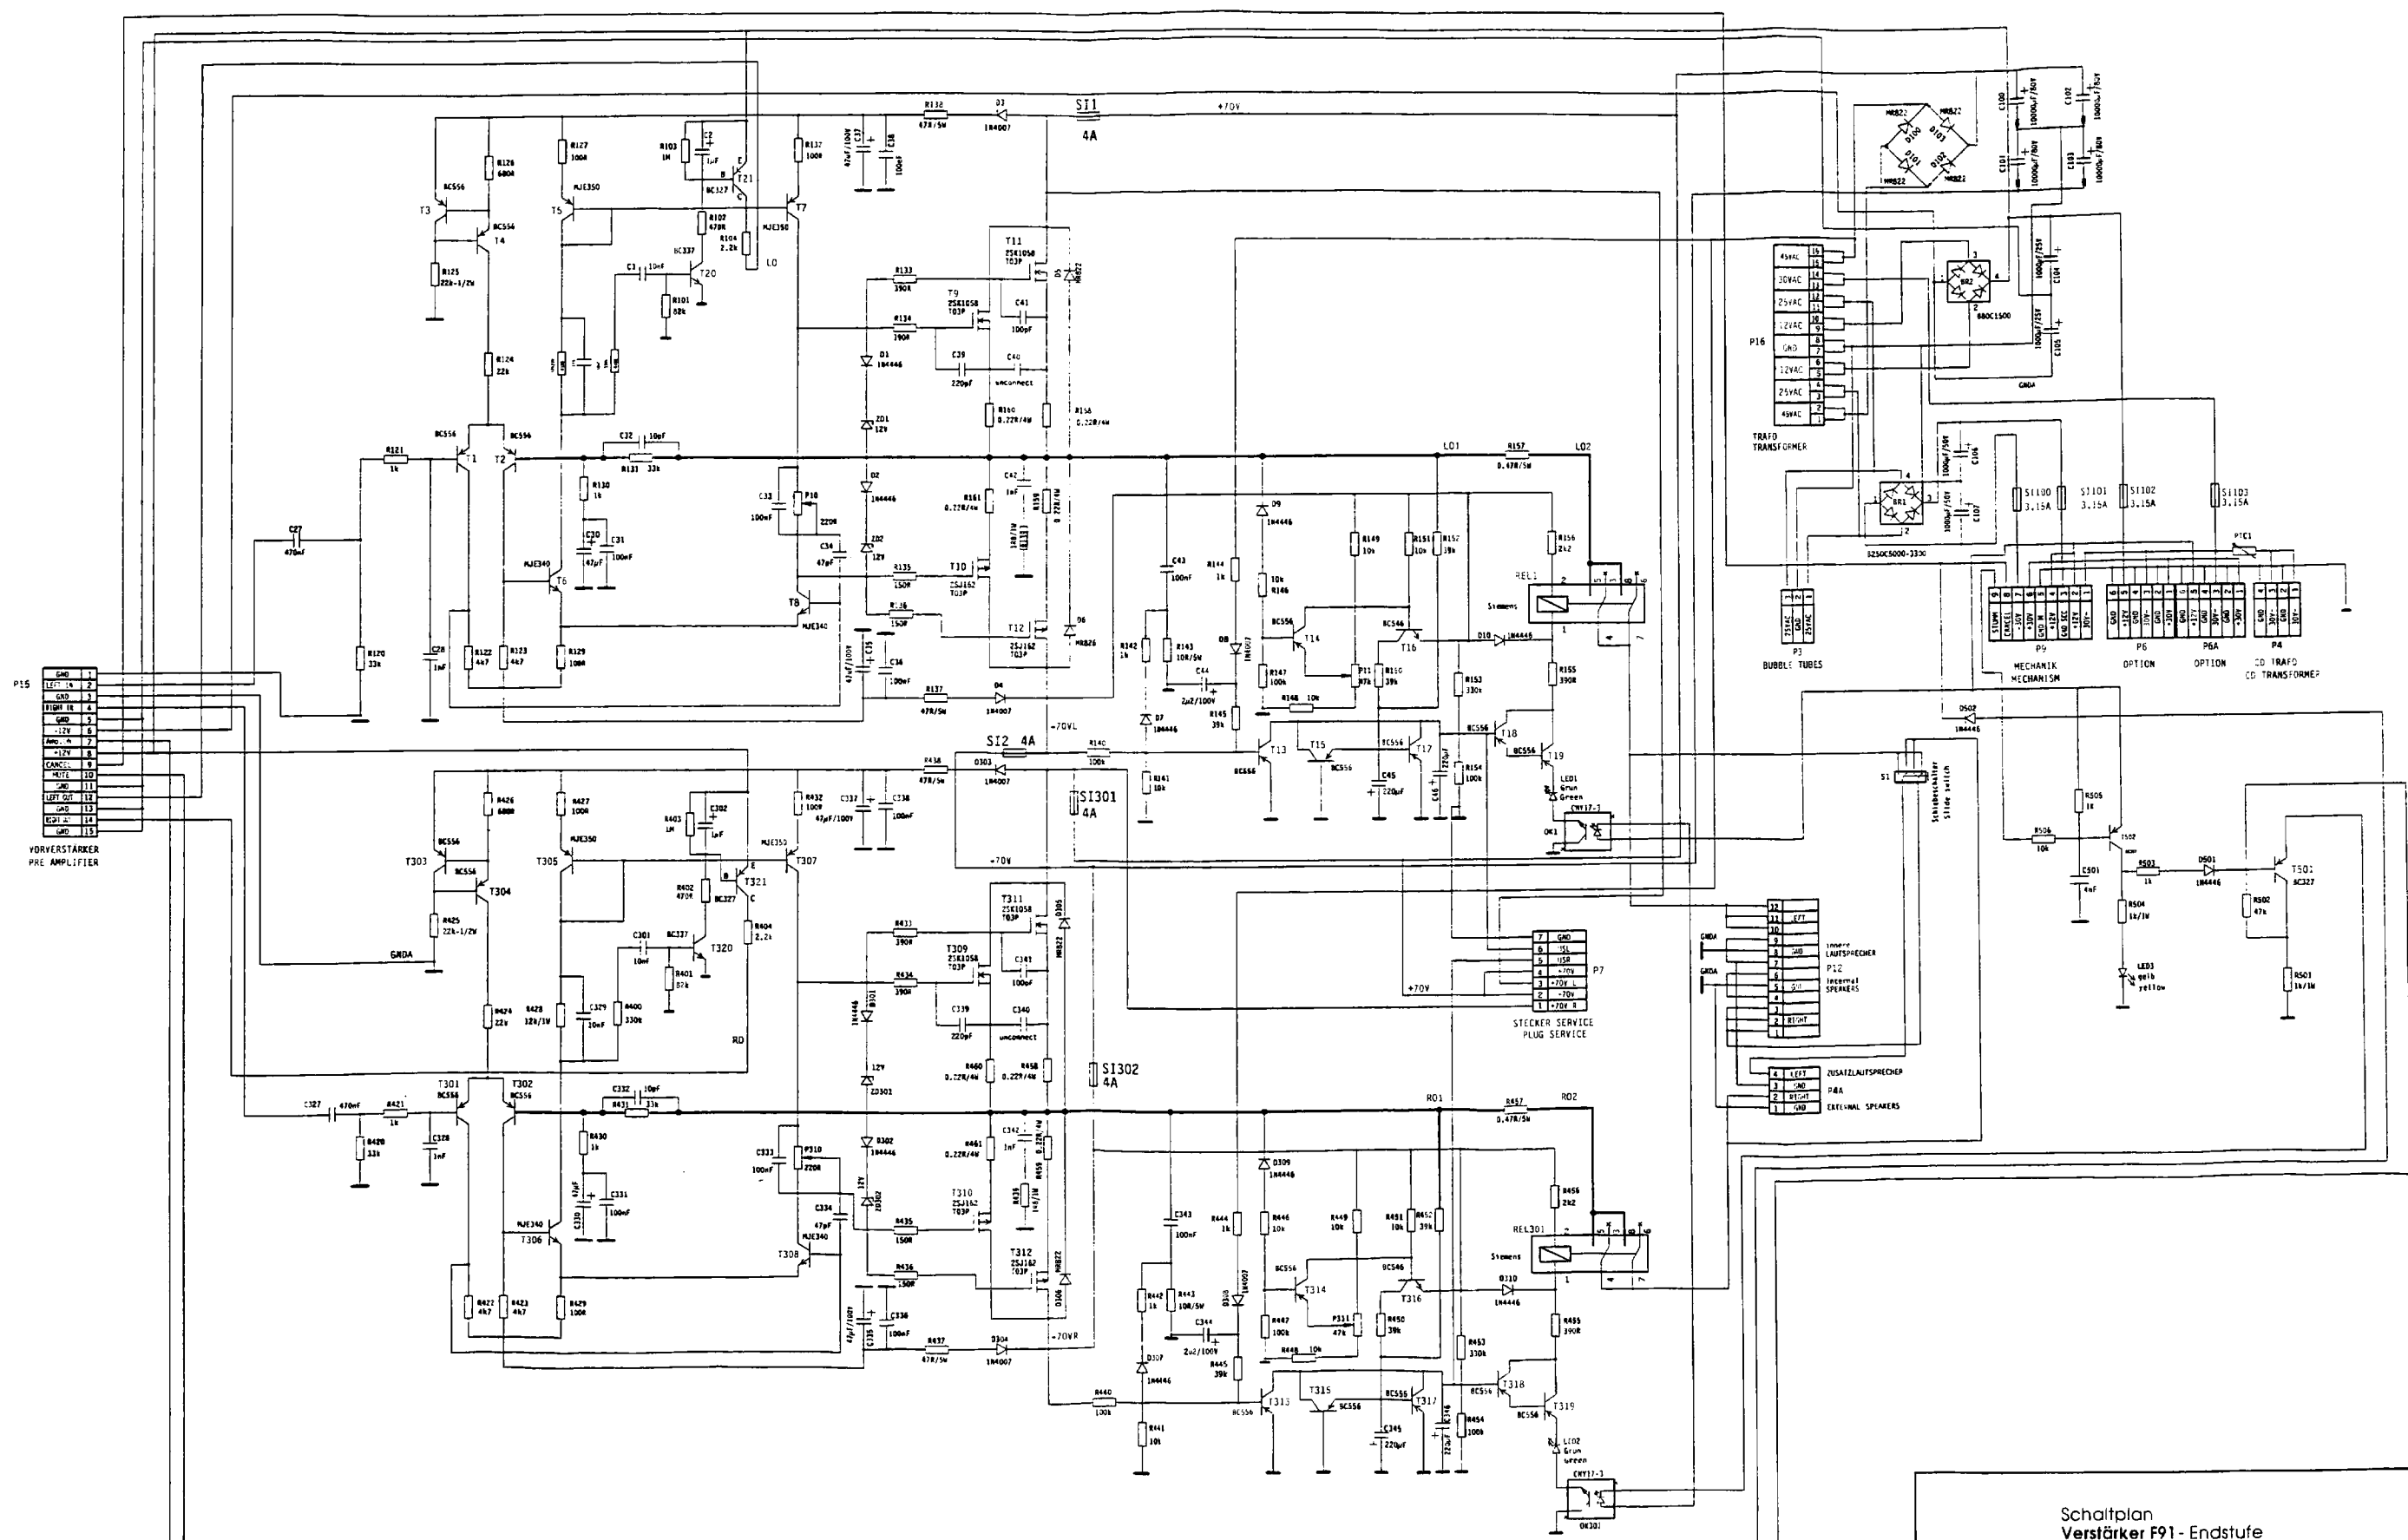


P15


GND	1
LEFT IN	2
GND	3
RIGHT IN	4
GND	5
+12V	6
-12V	7
NC	8
NOTE	9
GND	10
LEFT OUT	11
GND	12
RIGHT OUT	13
GND	14
GND	15

VORVERSTÄRKER
PRE AMPLIFIER


Schaltplan
Verstärker F91 - Endstufe
Wiring diagram
Amplifier F91 - Power amp.

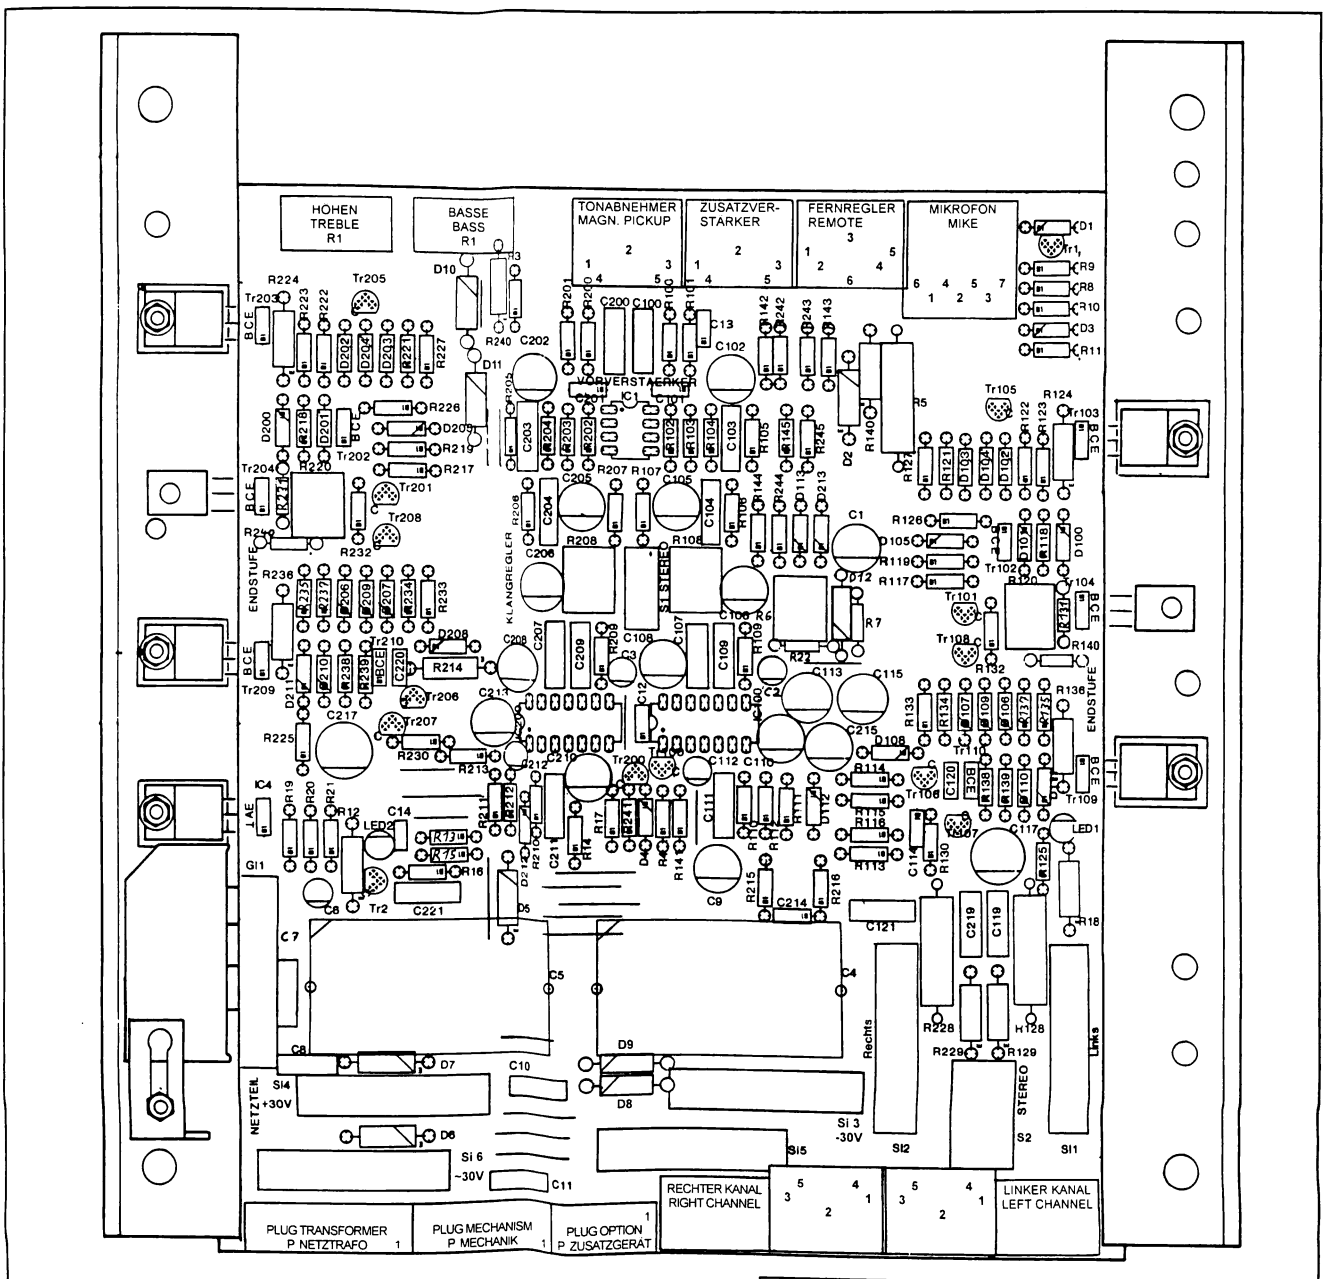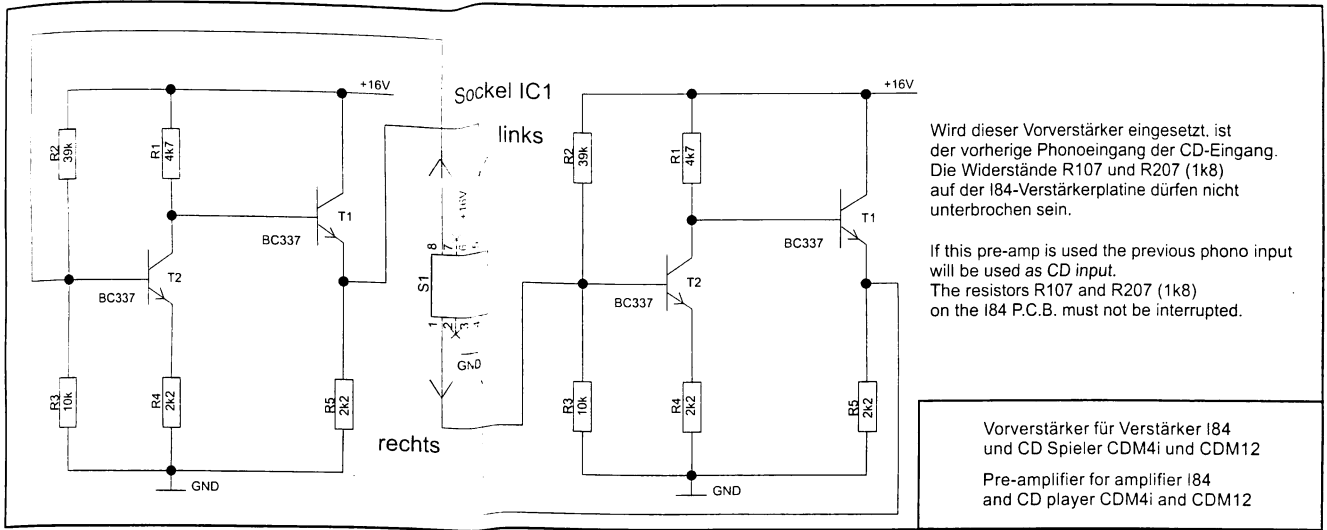


Bestückungsplan Verstärker I84
Board layout amplifier I84

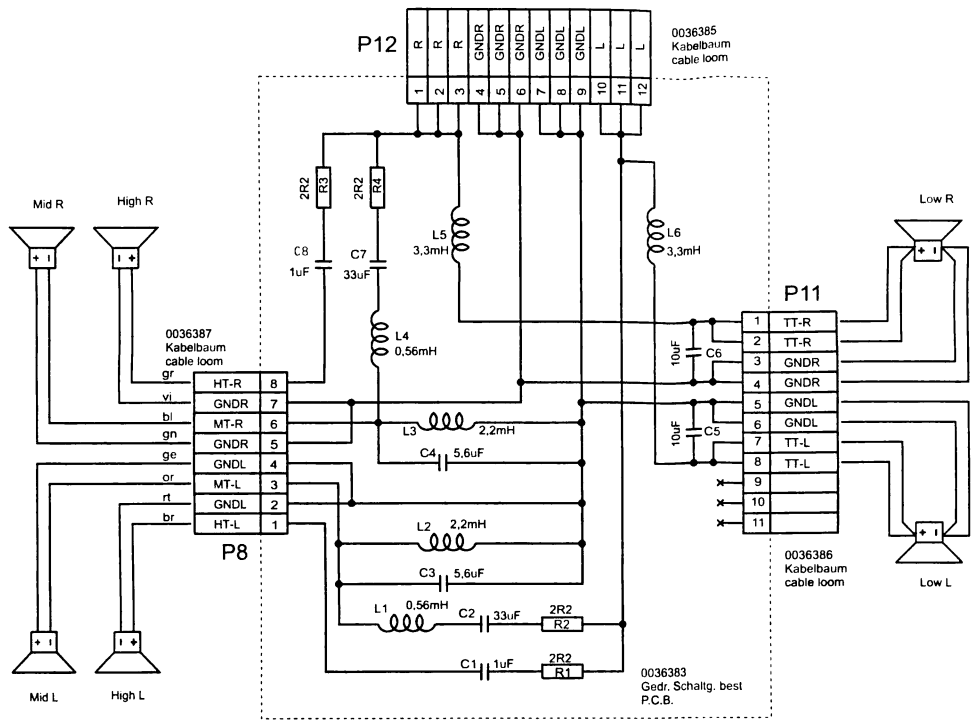

Schaltplan
Frequenzweiche für F91
Wiring diagram
Cross over network for F91

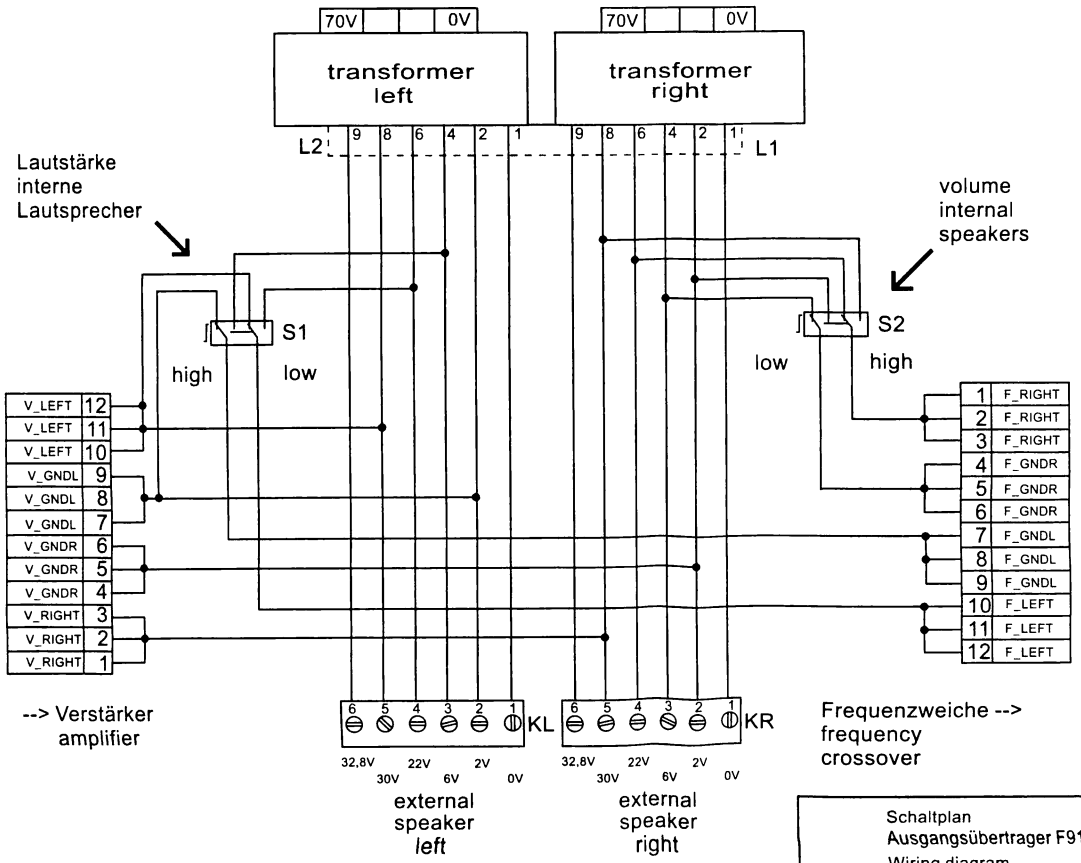


Schaltplan
Ausgangsübertrager F91
Wiring diagram
output transformer F91
00 43 157

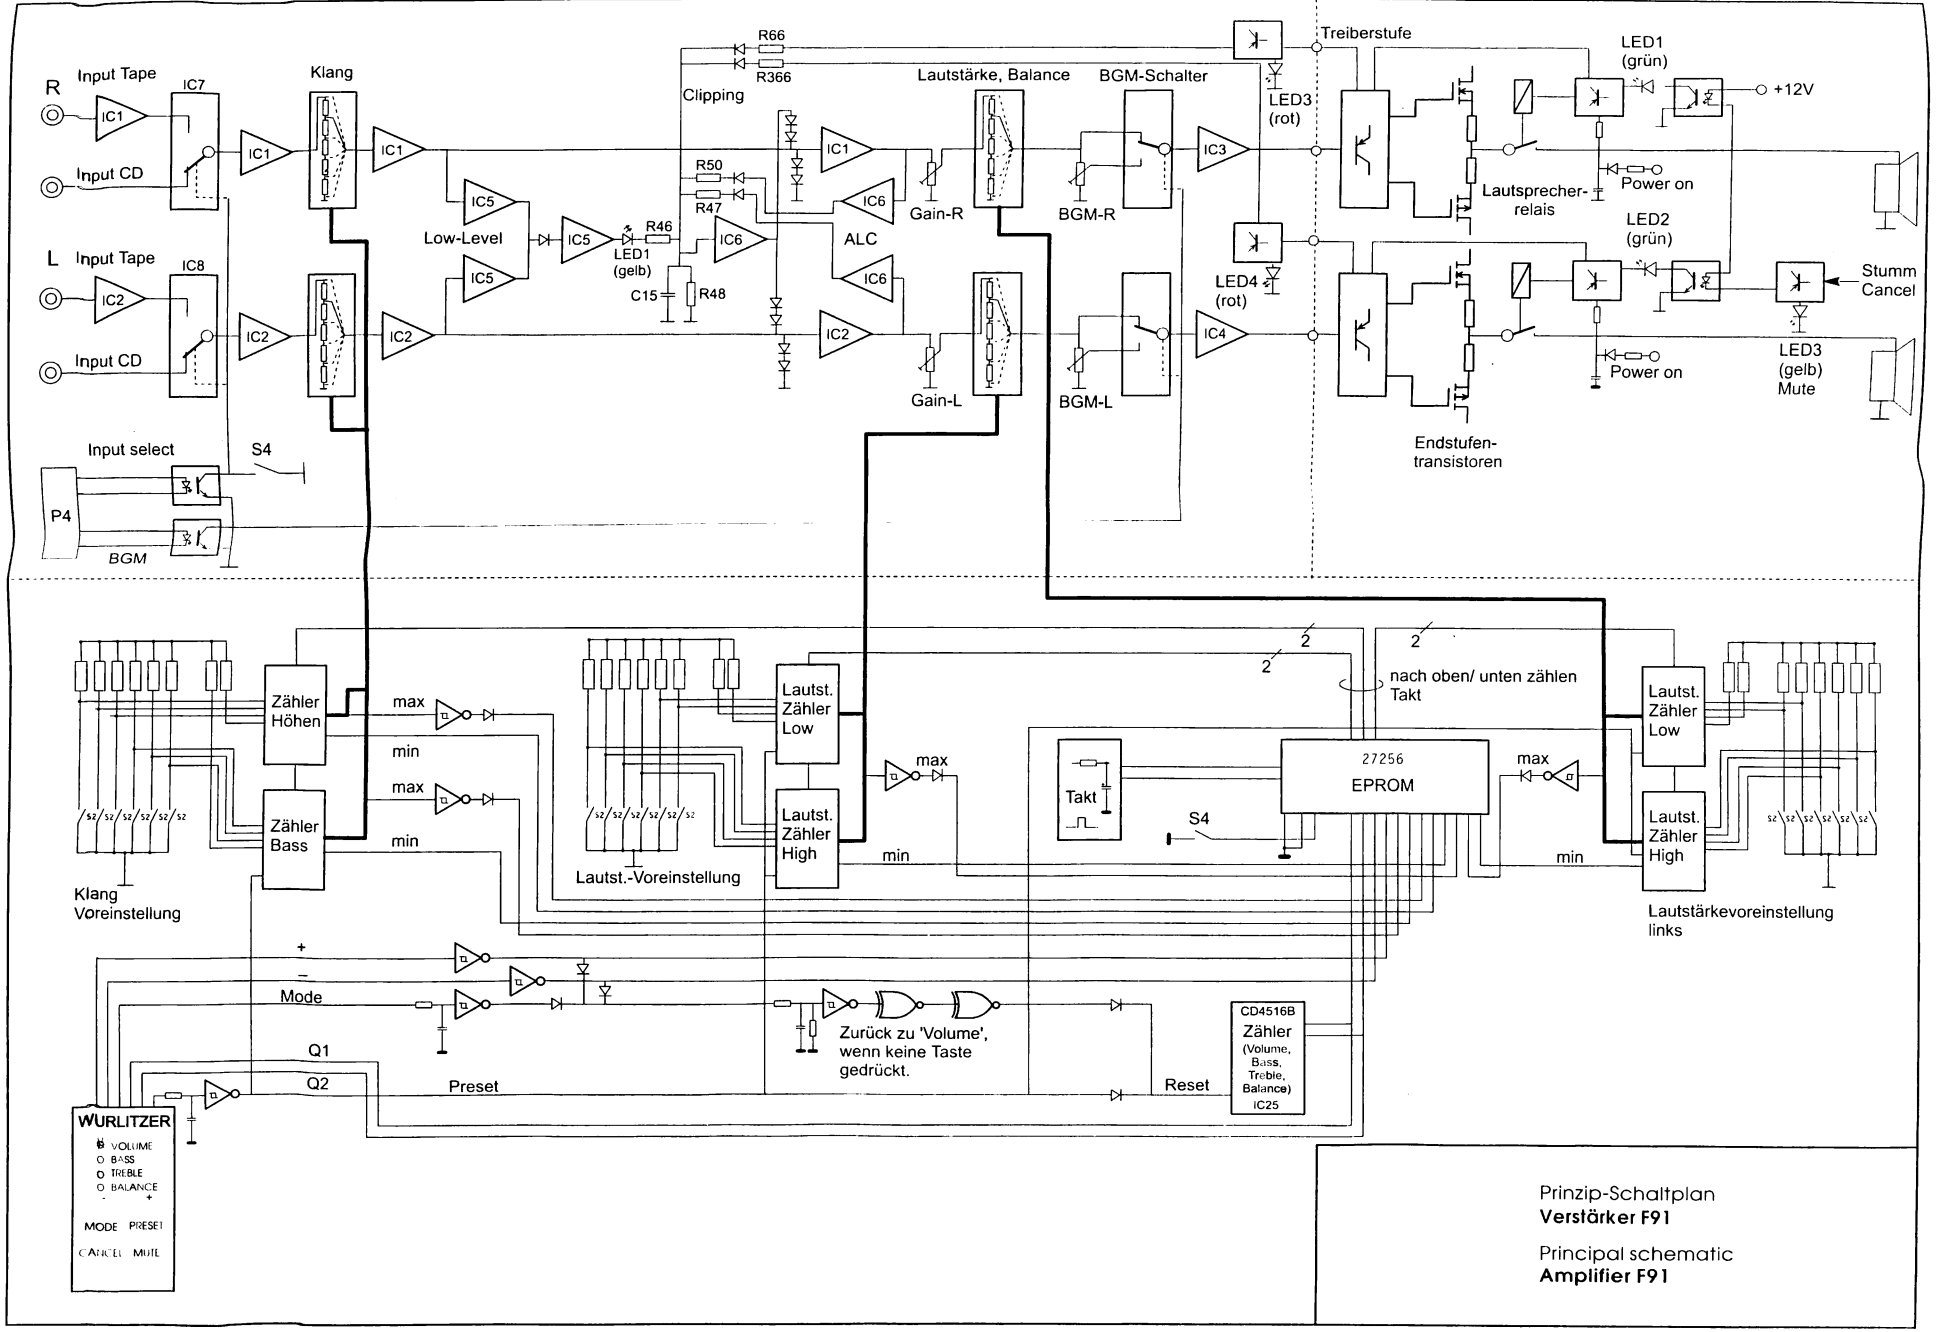


- WURLITZER**
- ⊞ VOLUME
 - BASS
 - TREBLE
 - BALANCE
 - +
- MODE PRESET
CANCEL MUTE

Prinzip-Schaltplan
Verstärker F91
Principal schematic
Amplifier F91

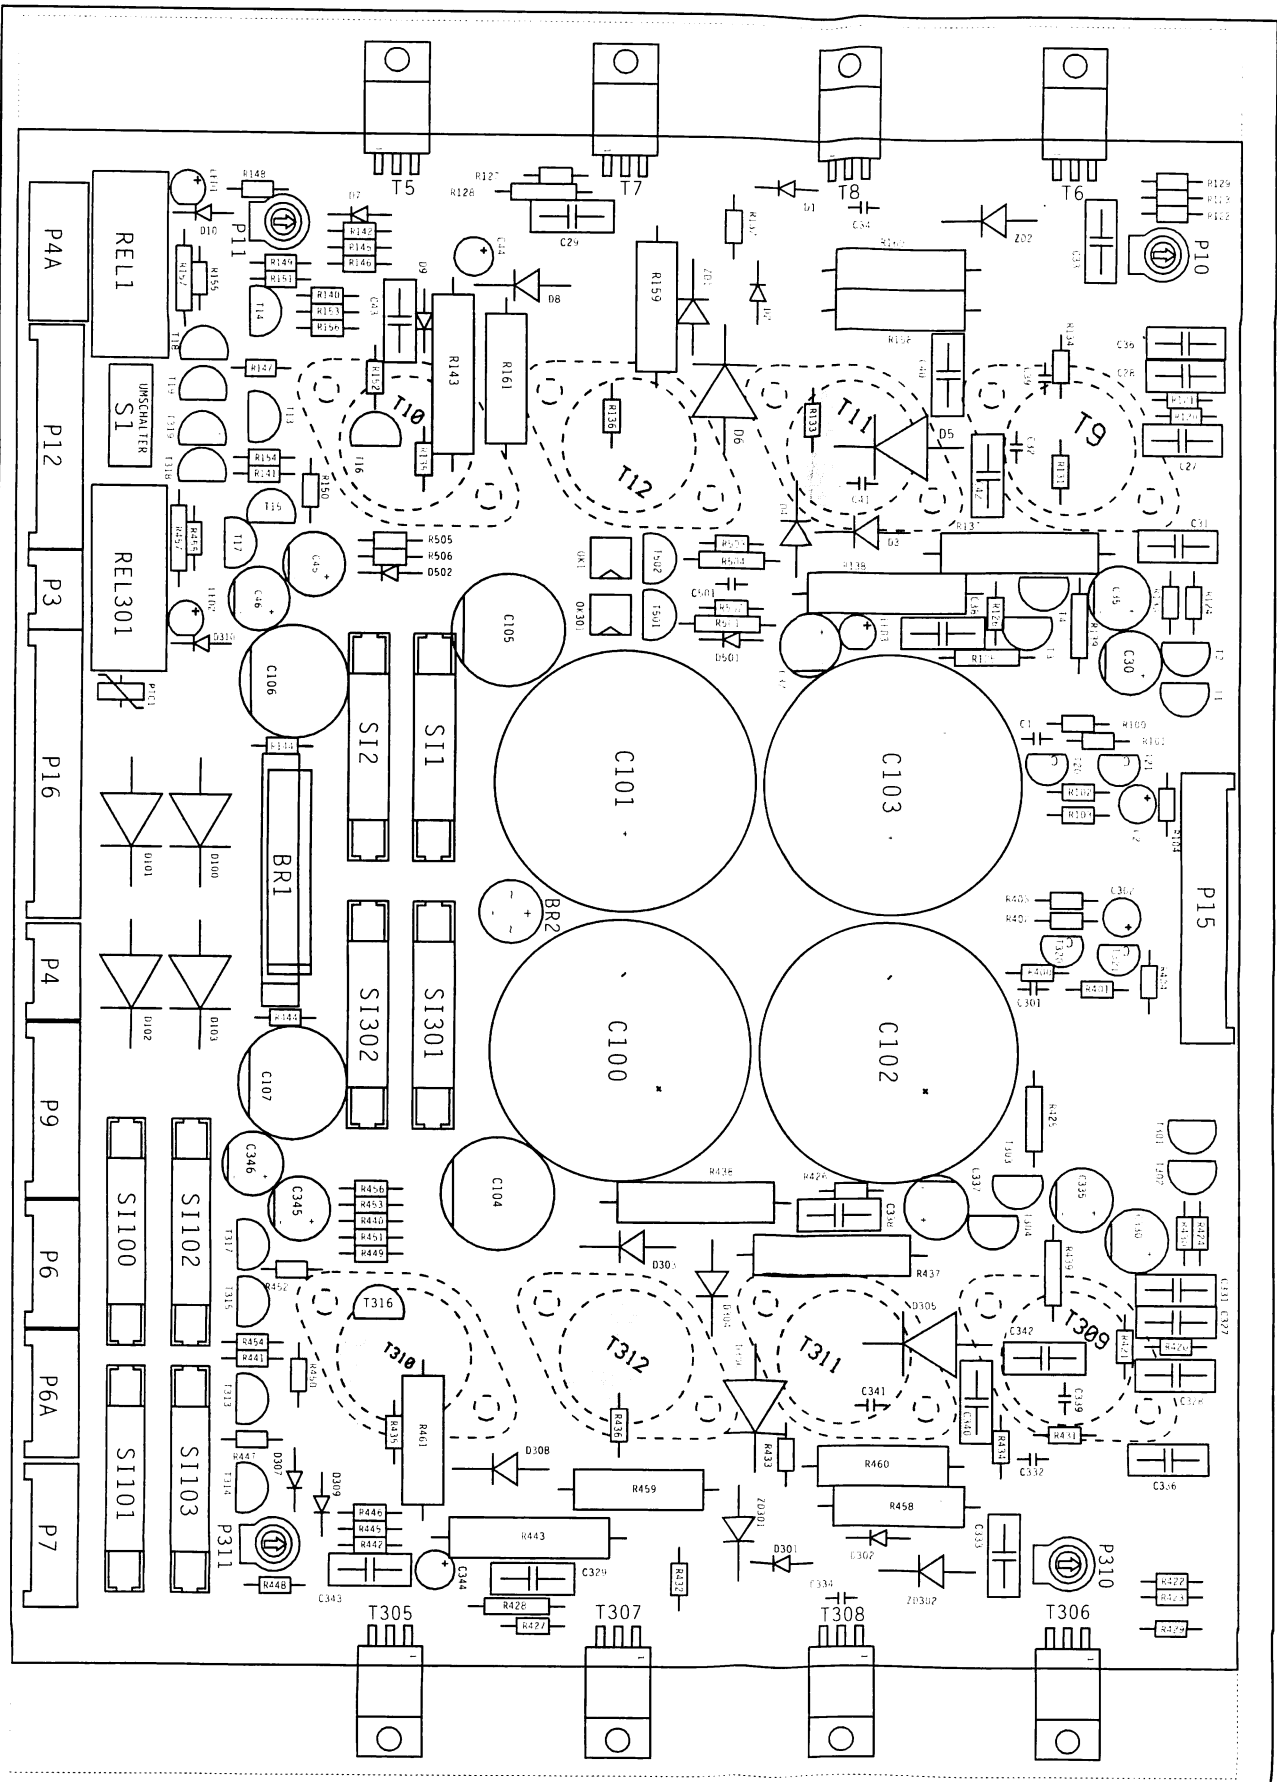


Bestückungsplan
Endstufe Verstärker F91
Board layout
Power amplifier F91

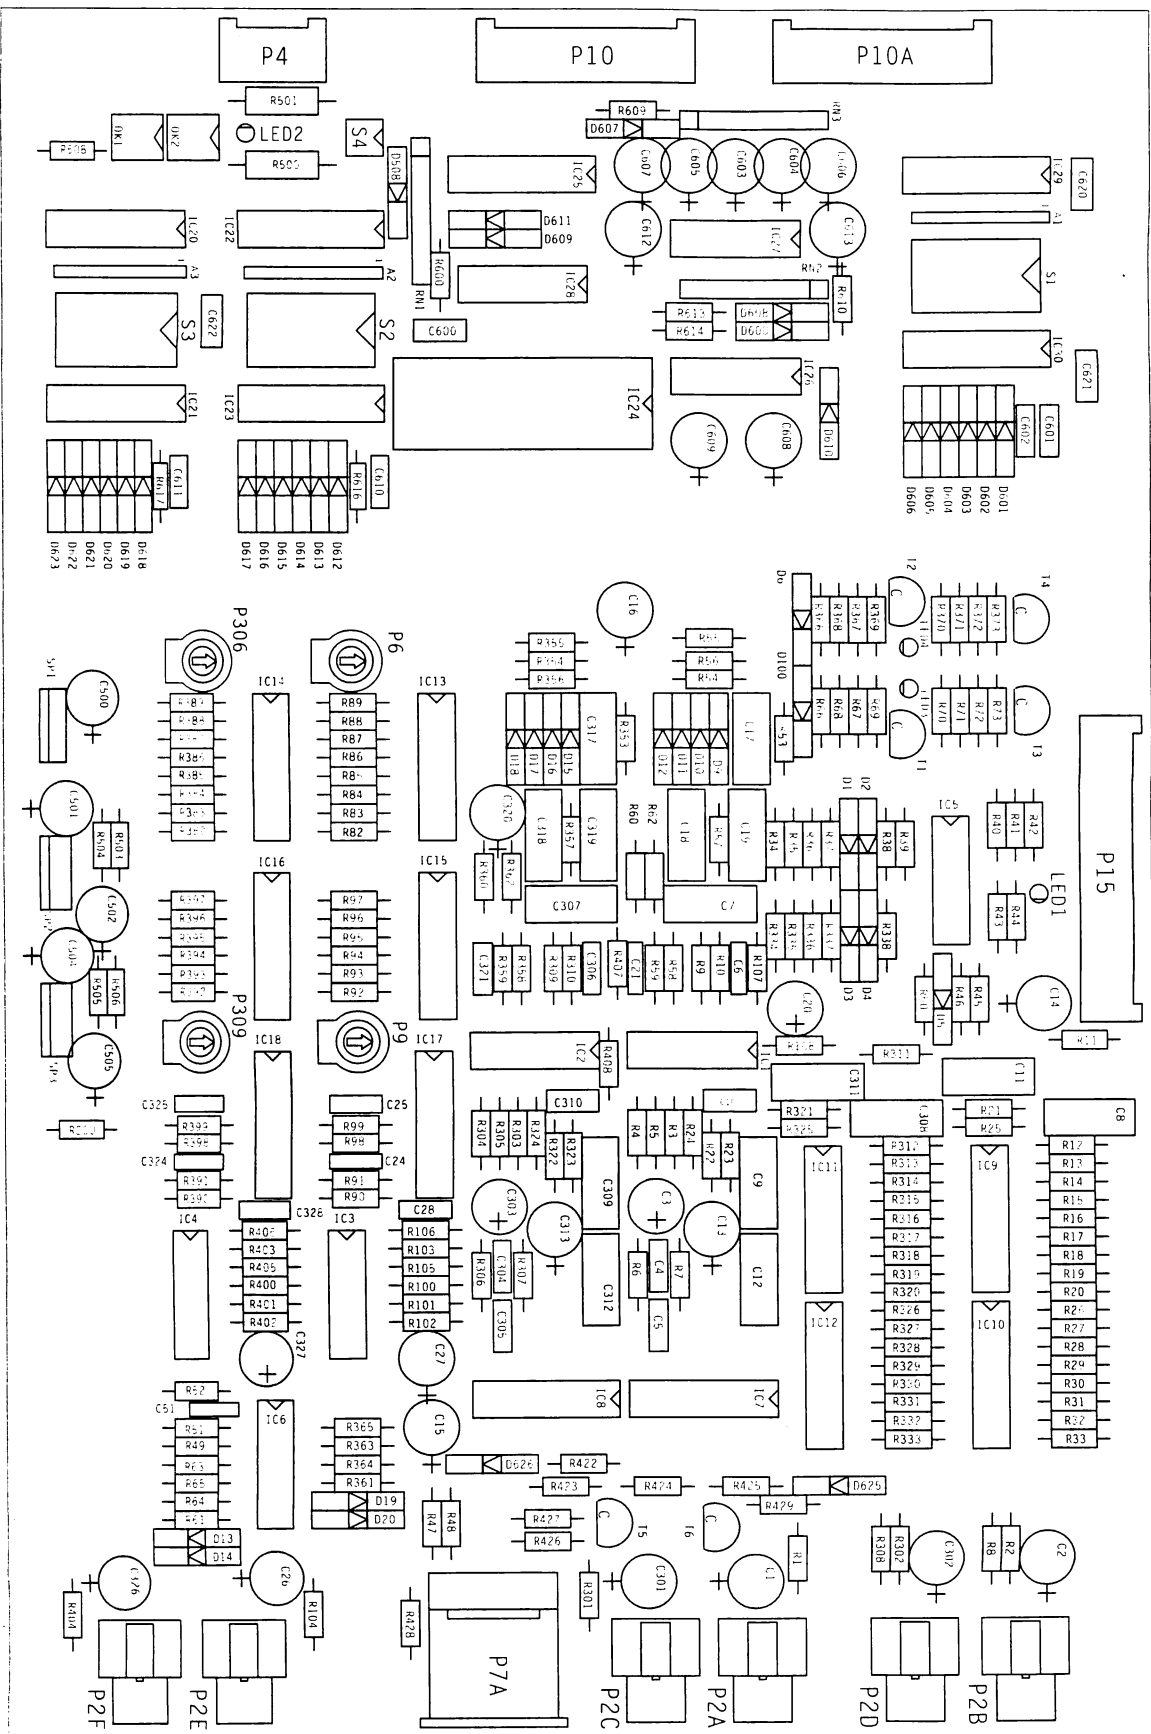


Bestückungsplan
 Vorstufe Verstärker F91
Board layout
 Pre-stage amplifier F91


Schaltplan 1 Vorverstärker
Wiring diagram 1 Pre amplifier

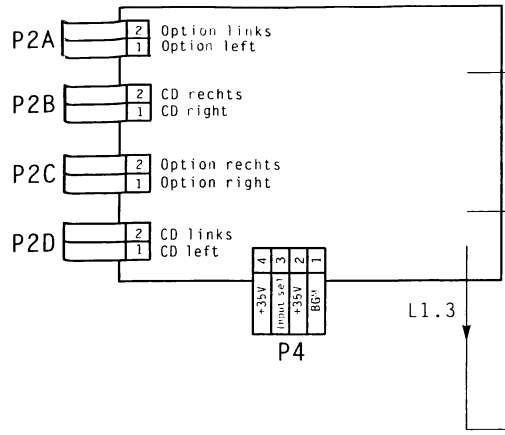



Schaltplan 2: Klangreglung
Diagram 2: Sound controller

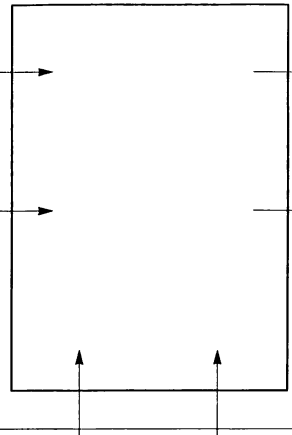


Schaltplan 3: Pegelkontrolle (AVC)
Wiring diagram 3: A. Volume Controller

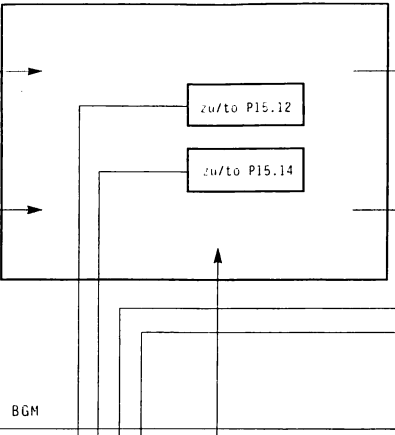


Schaltplan 4: Balance, Lautstärke, BGM
Diagram 4: Balance, Volume, BGM

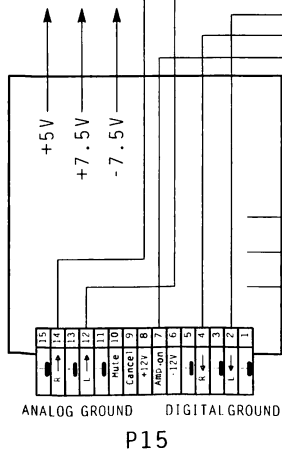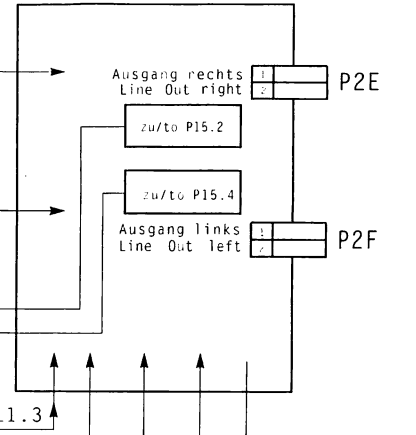


Schaltplan 7: Spannungsversorgung
Diagram 7: Power supply

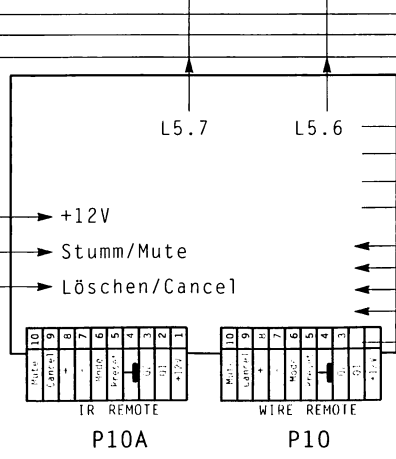

Schaltplan 5: Digitalteil Klang
Diagram 5: Digital stage sound

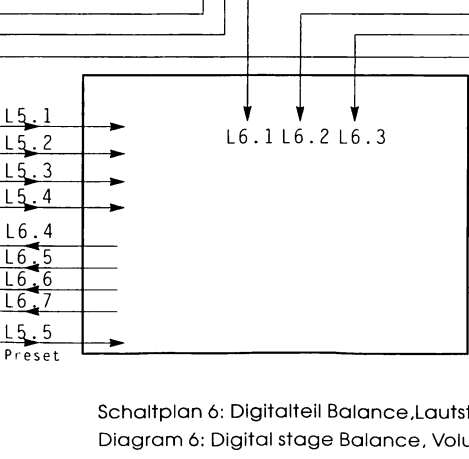


Schaltplan 6: Digitalteil Balance, Lautstärke
Diagram 6: Digital stage Balance, Volume

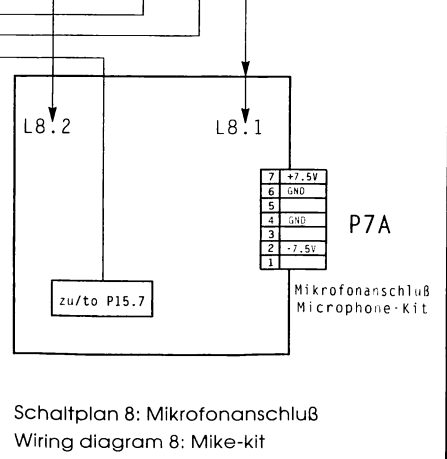

Schaltplan 8: Mikrofonanschluß
Wiring diagram 8: Mike-kit


Schaltplanübersicht
Verstärker F91 - Vorstufe
 Diagram overview
Amplifier F91 - Prestage

Zusatzgeräteeingang rechts (RIAA)
Tape right / Option RIAA

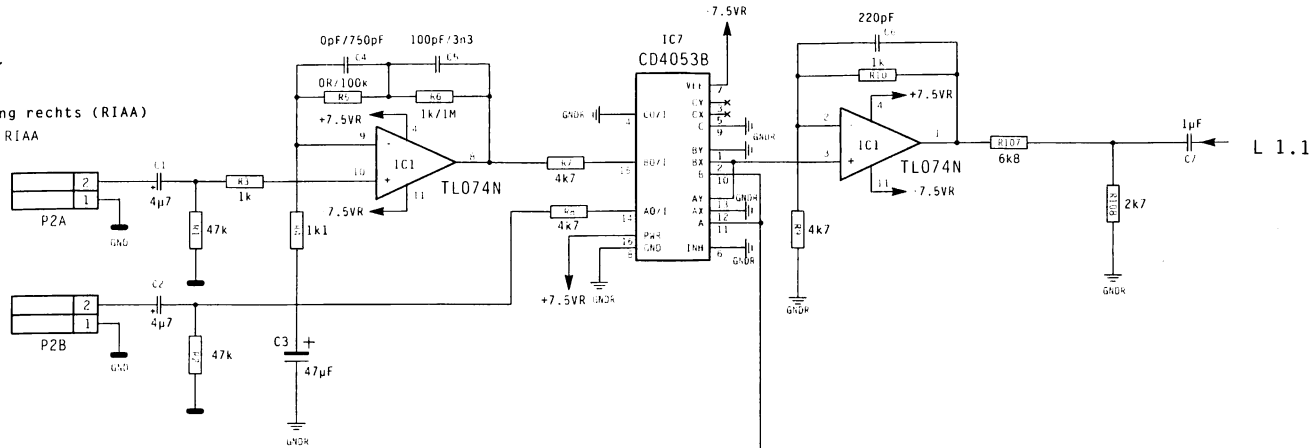


CD rechts
CD right


Zusatzgeräteeingang links (RIAA)
Tape left / Option RIAA

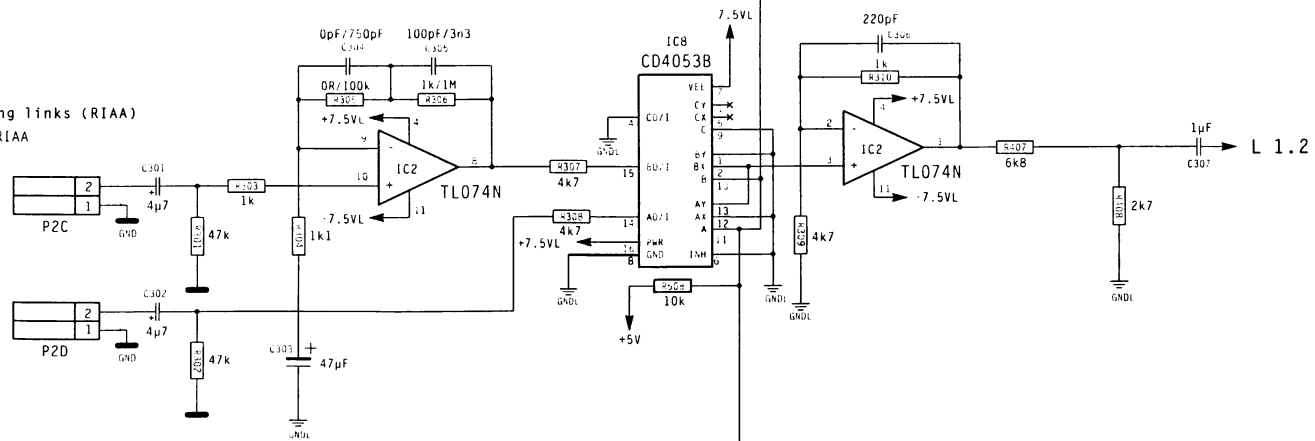


CD links
CD left

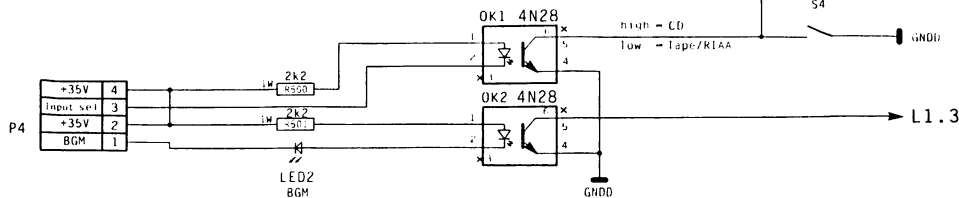


Schaltplan
Verstärker F91 - Vorverstärker
Wiring diagram
Amplifier F91 - Pre amplifier

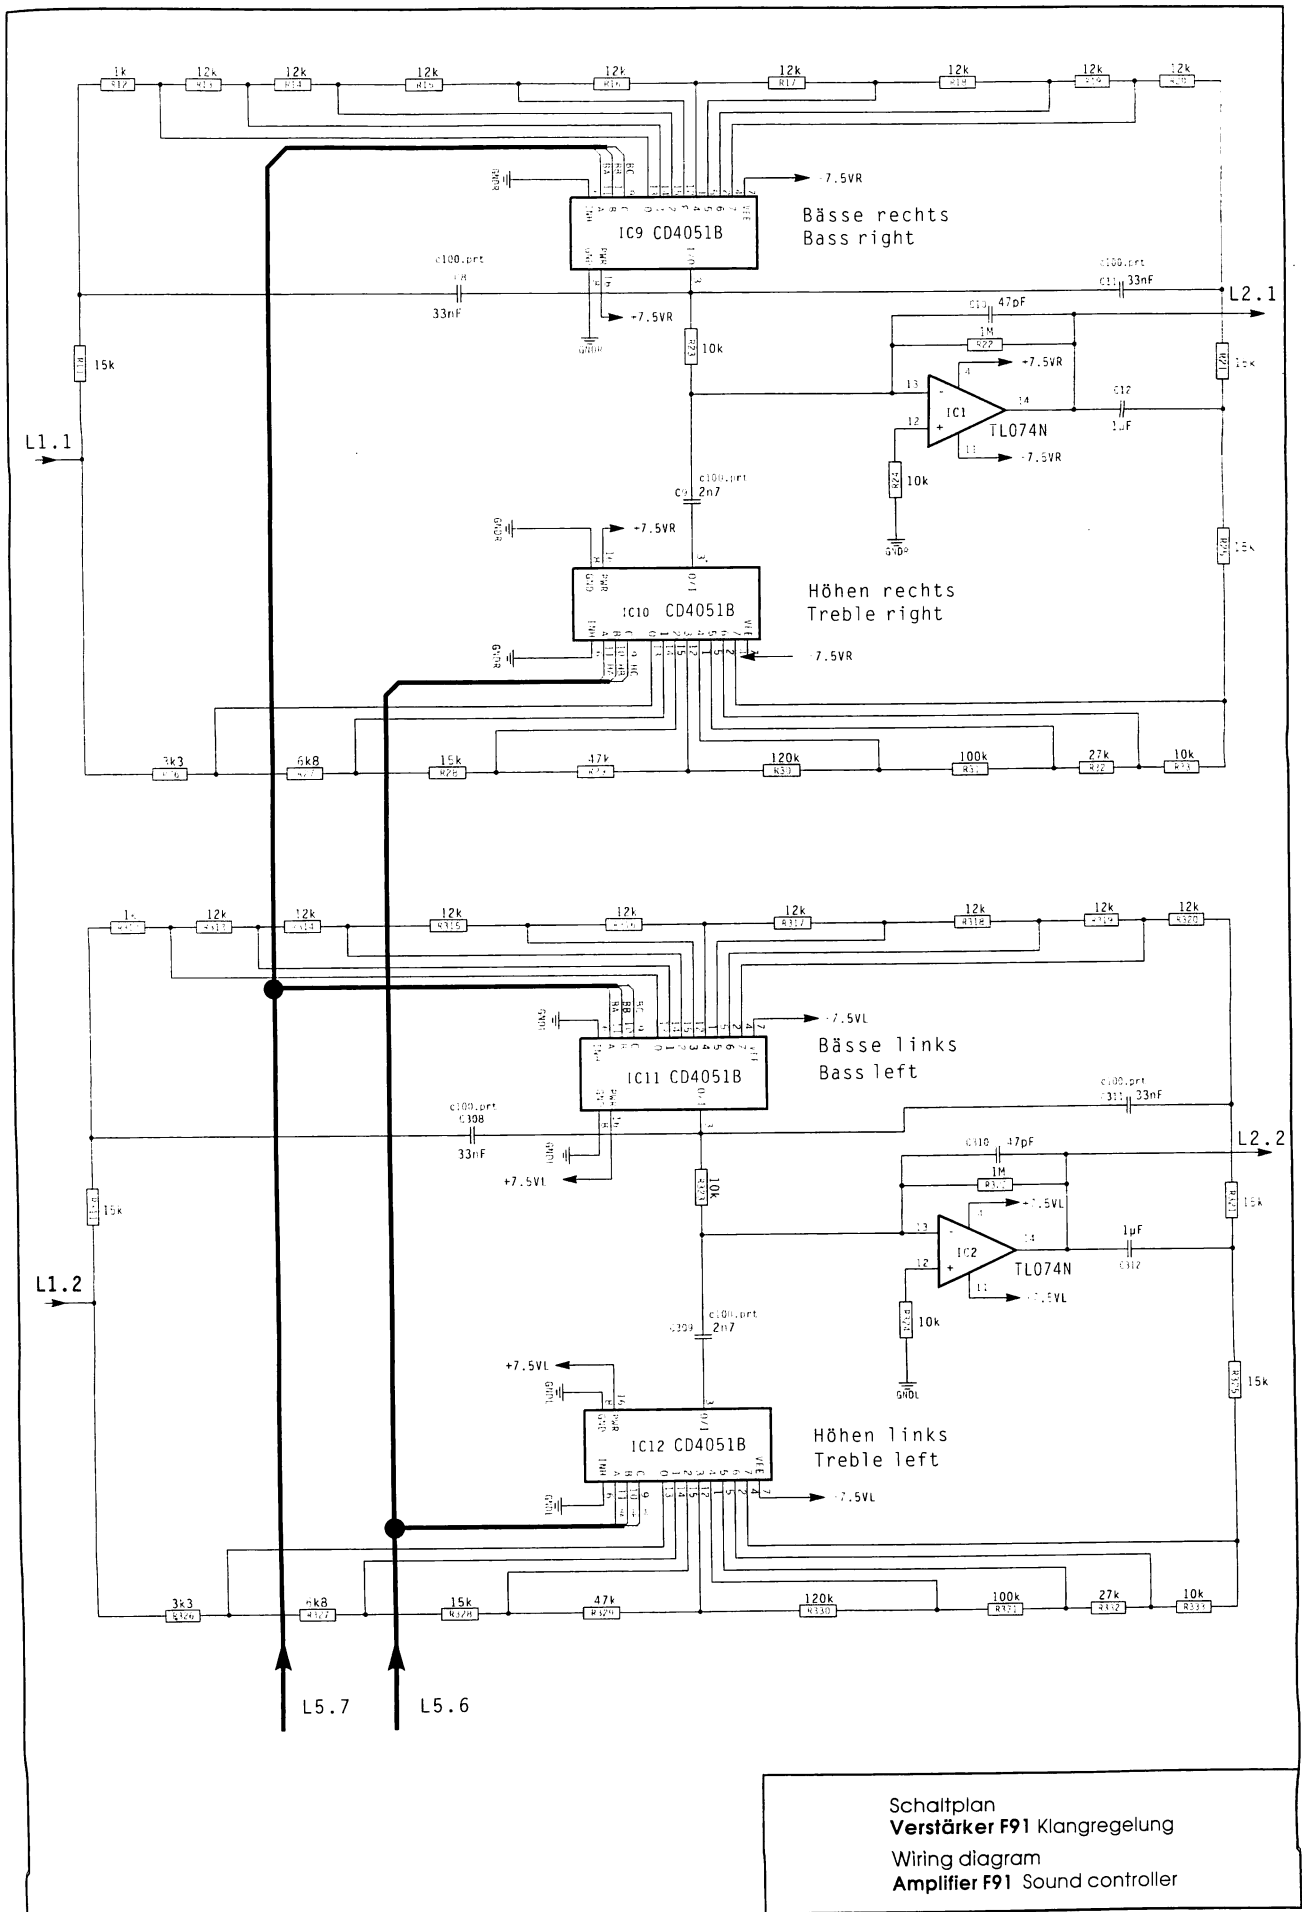


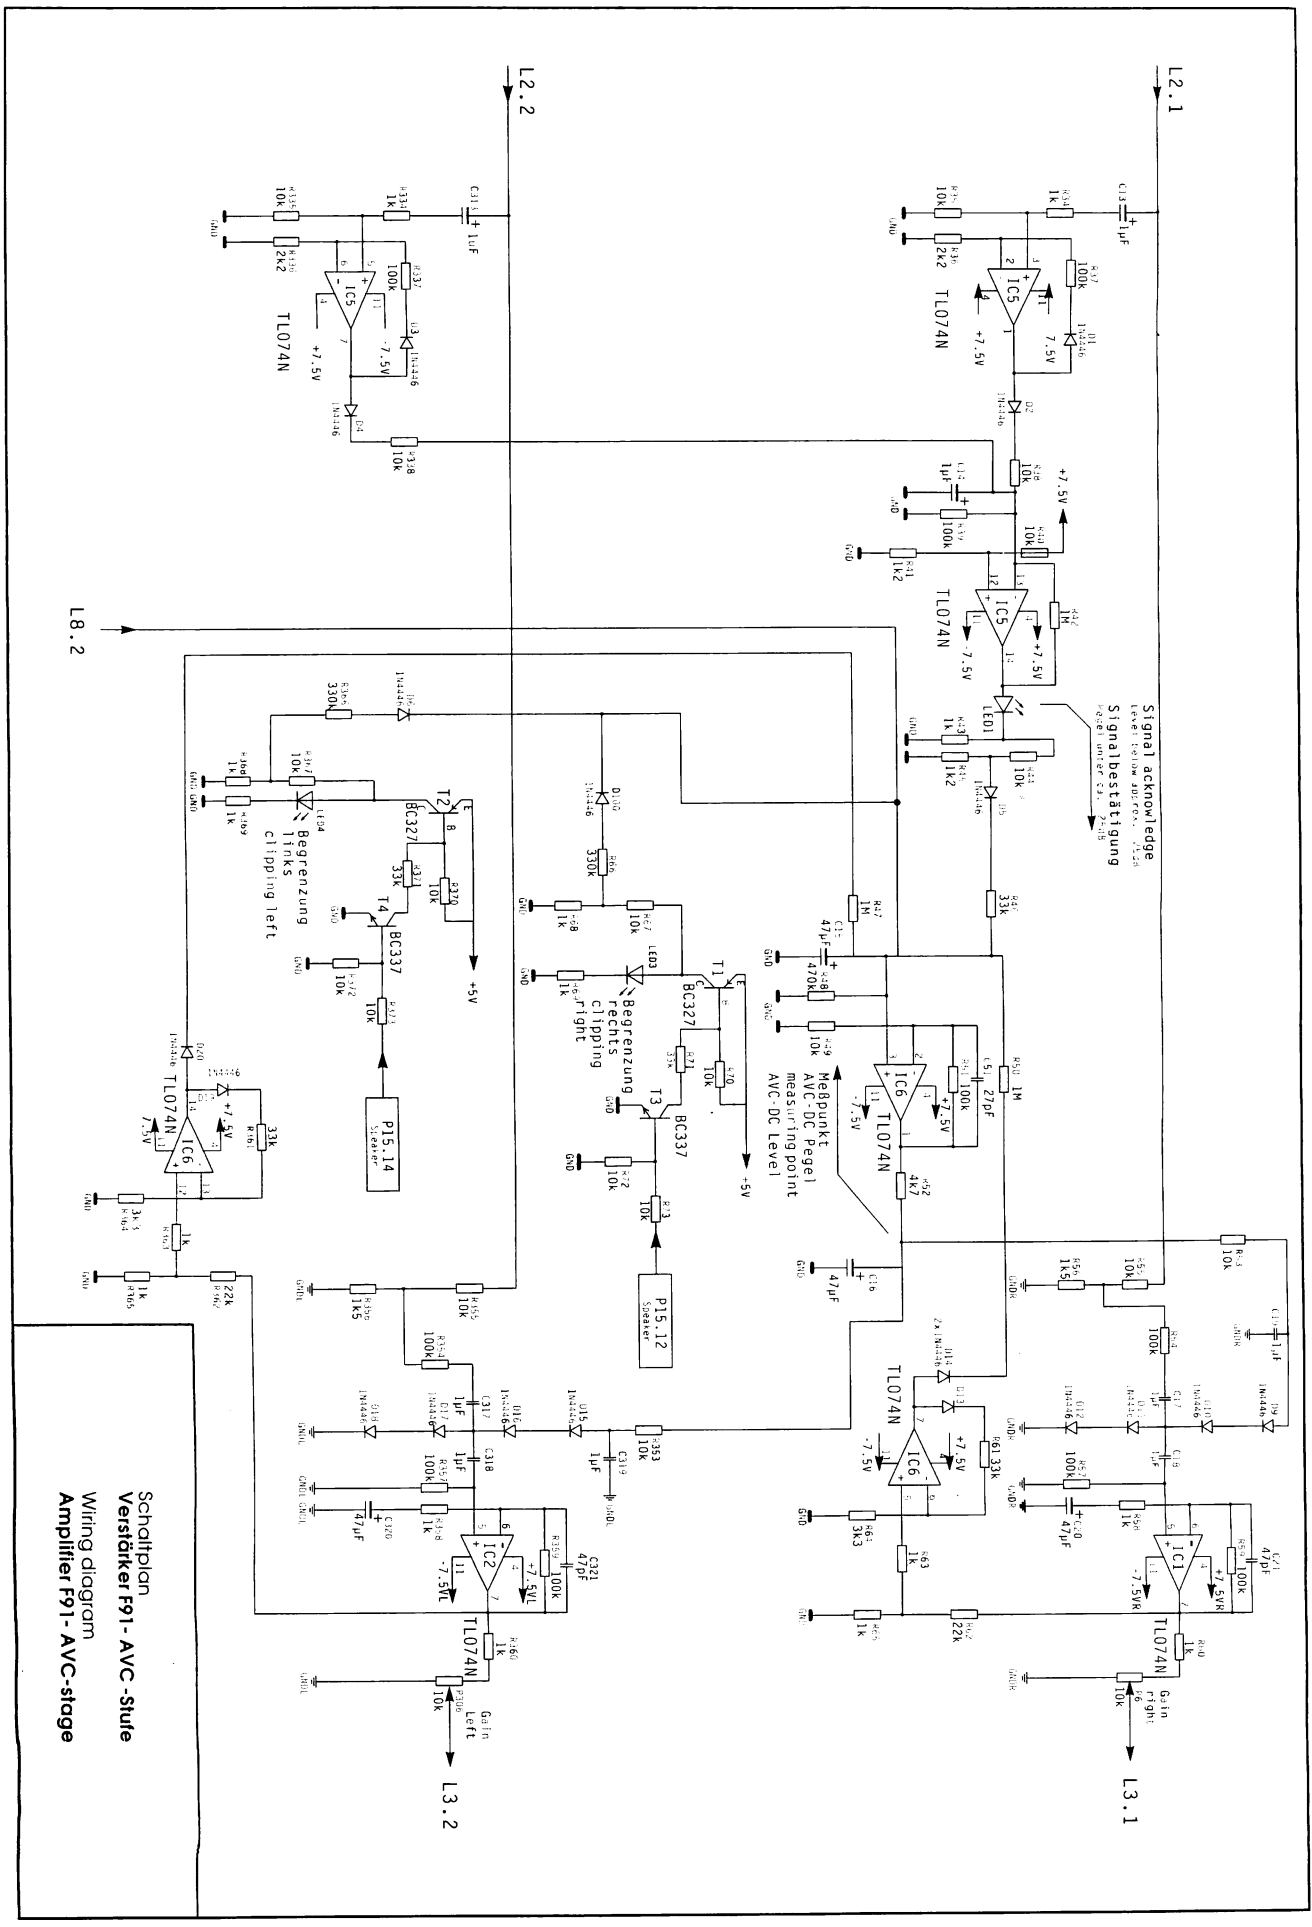


Schottky
Verstärker F91 - AVC - Stufe
Wiring diagram
Amplifier F91 - AVC - stage

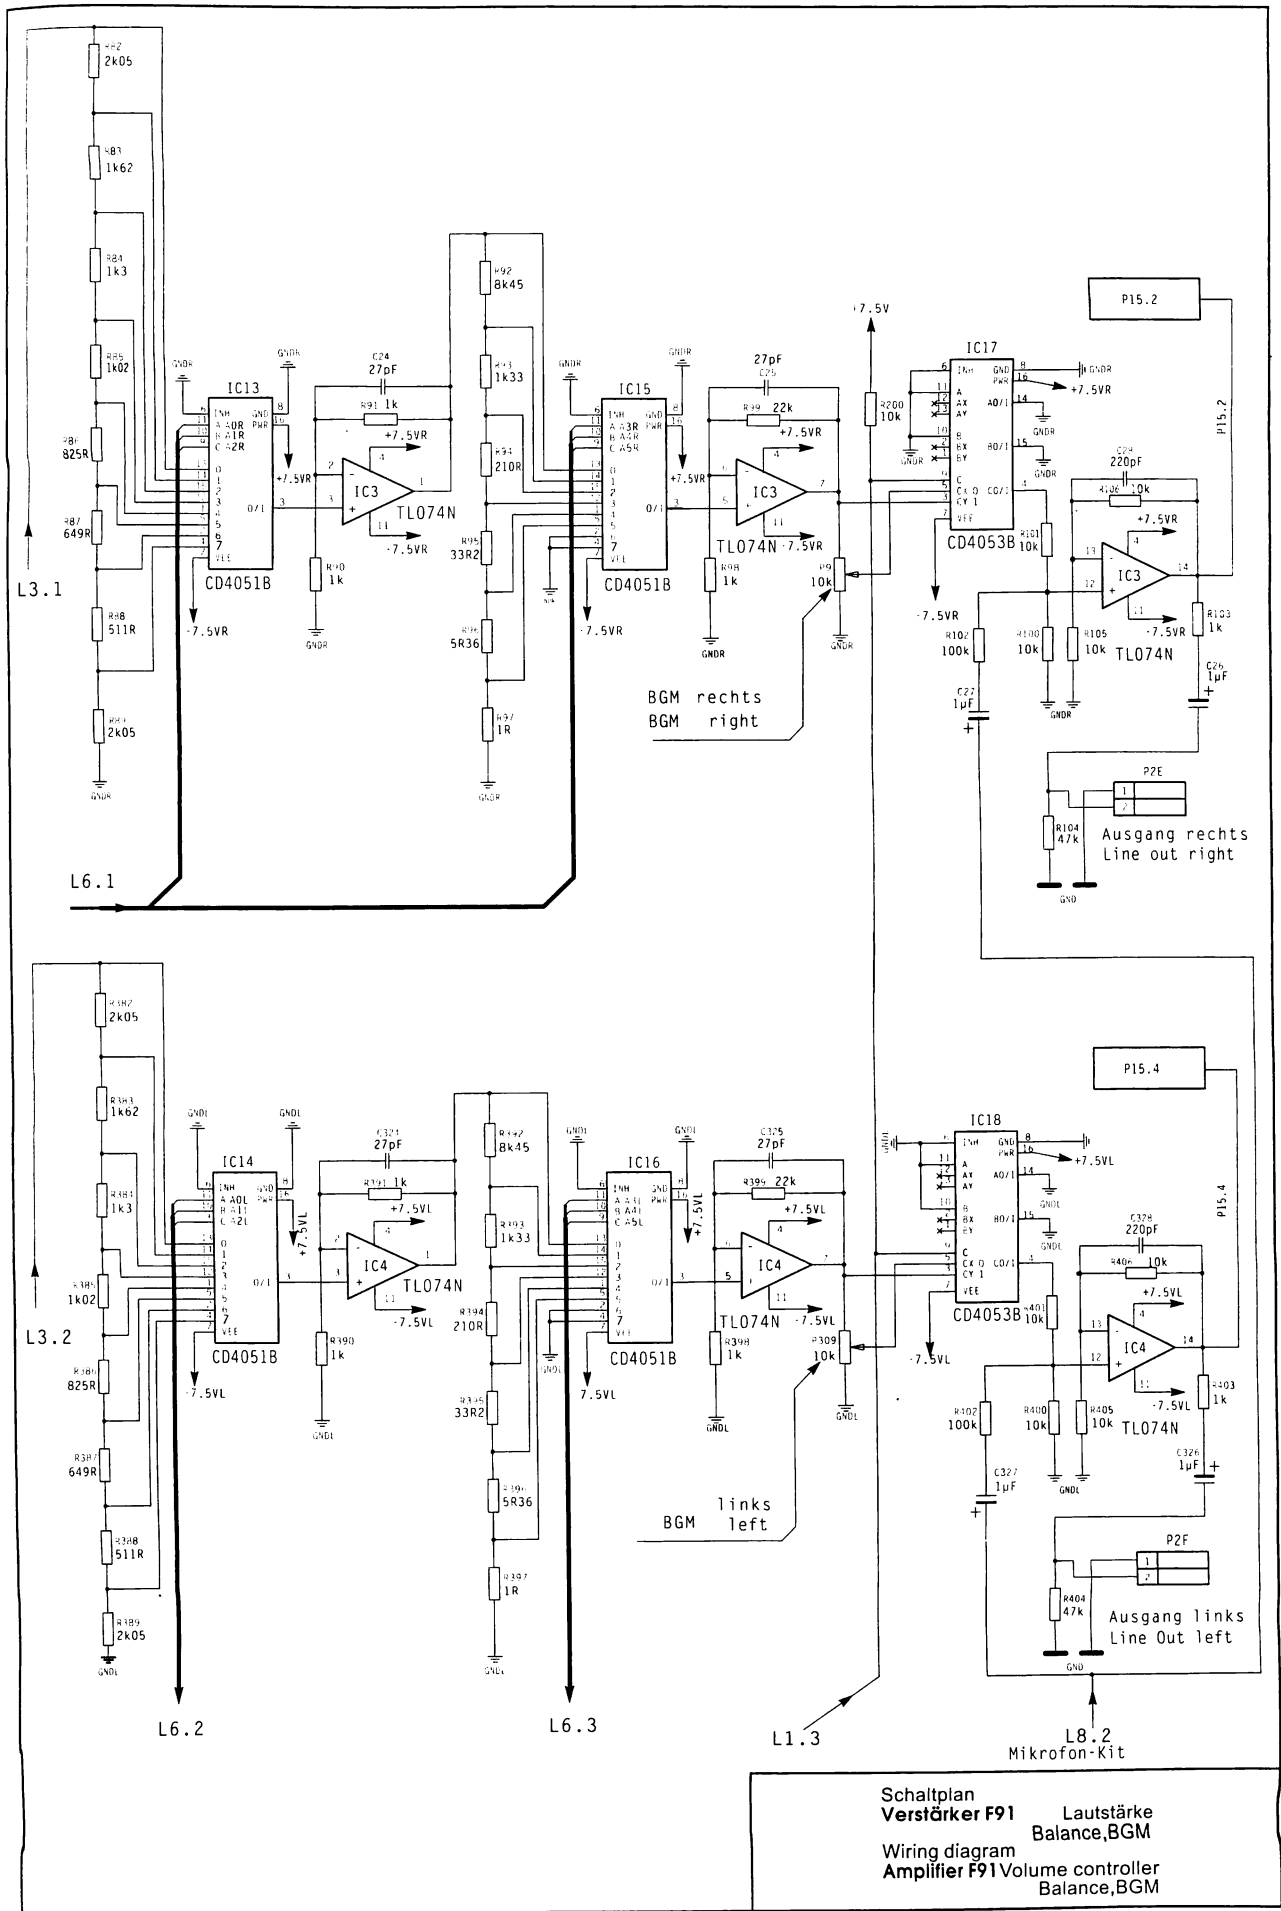


Schaltplan
Verstärker F91 Lautstärke
 Wiring diagram Balance, BGM
Amplifier F91 Volume controller
 Balance, BGM

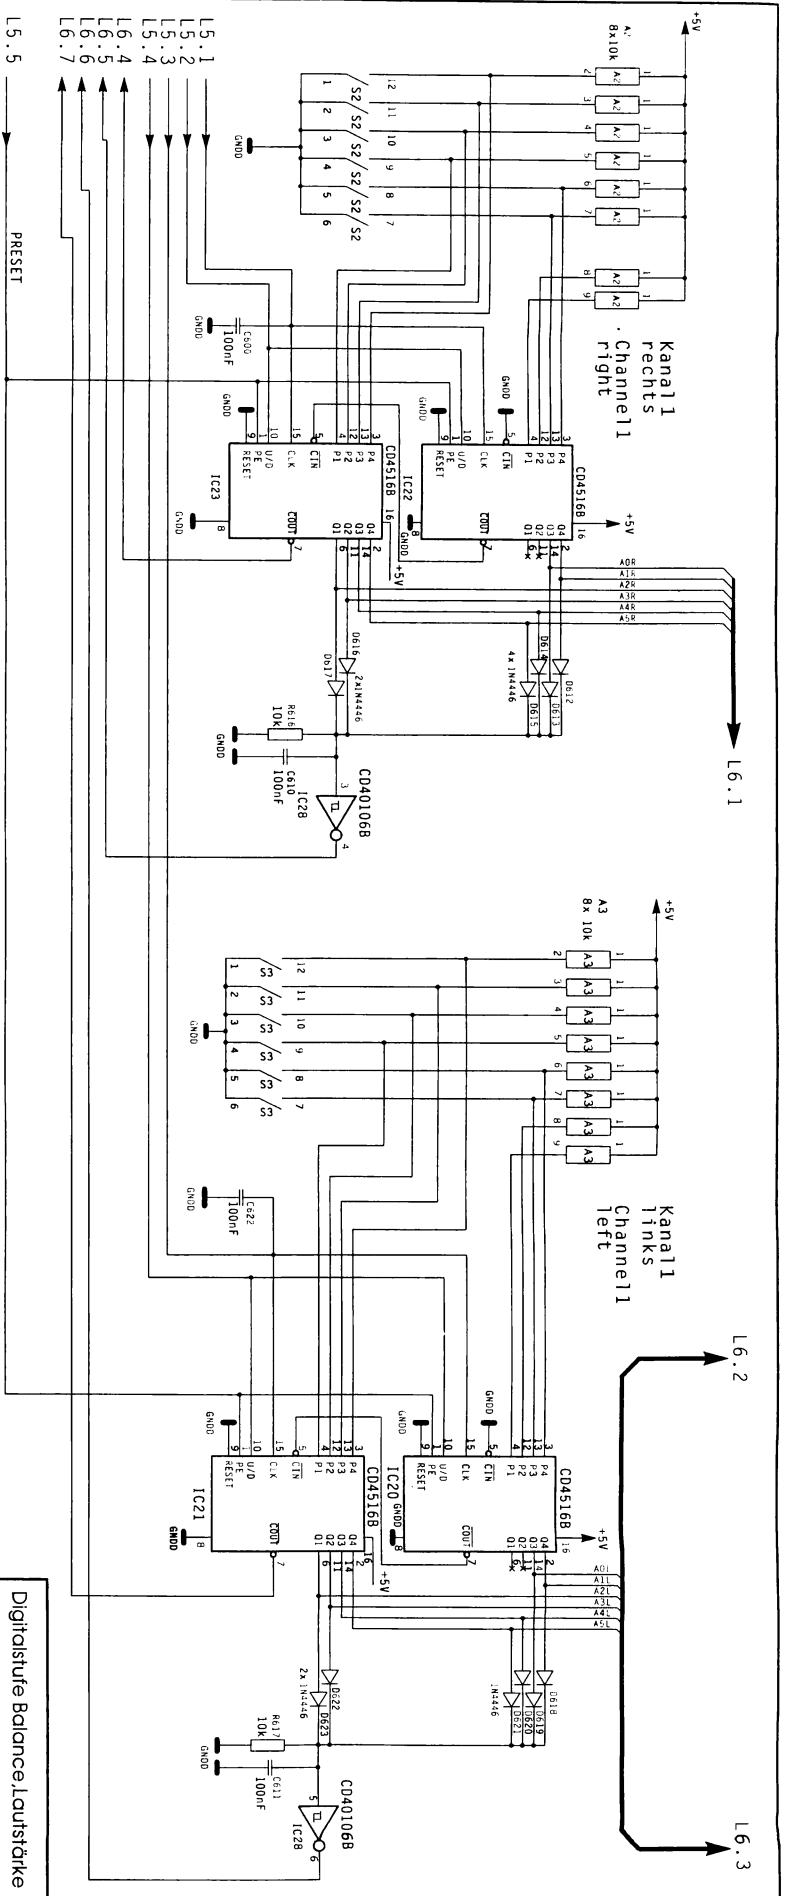

Digitalstufe Balance, Lautstärke
Digital stage Balance, Volume

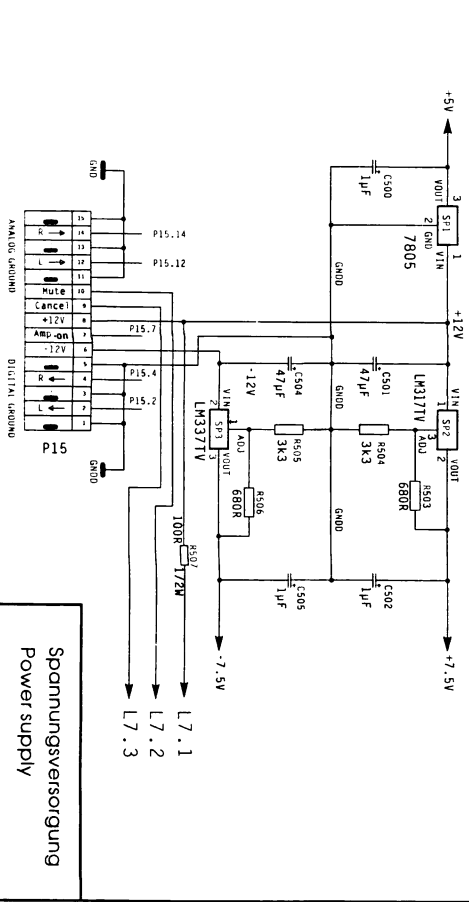


Spannungsversorgung
Power supply

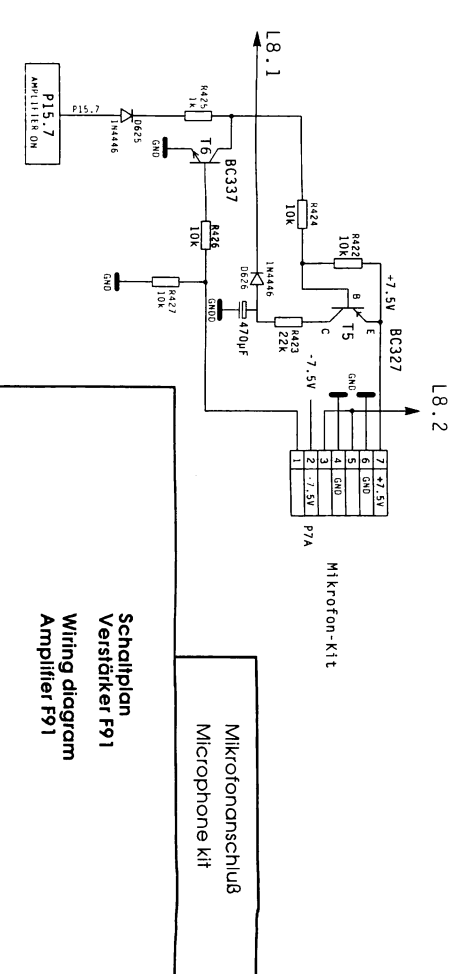

Schaltplan
Verstärker F91
Wiring diagram
Amplifier F91

Mikrofonanschluß
Microphone kit

Mikrofon-KIT

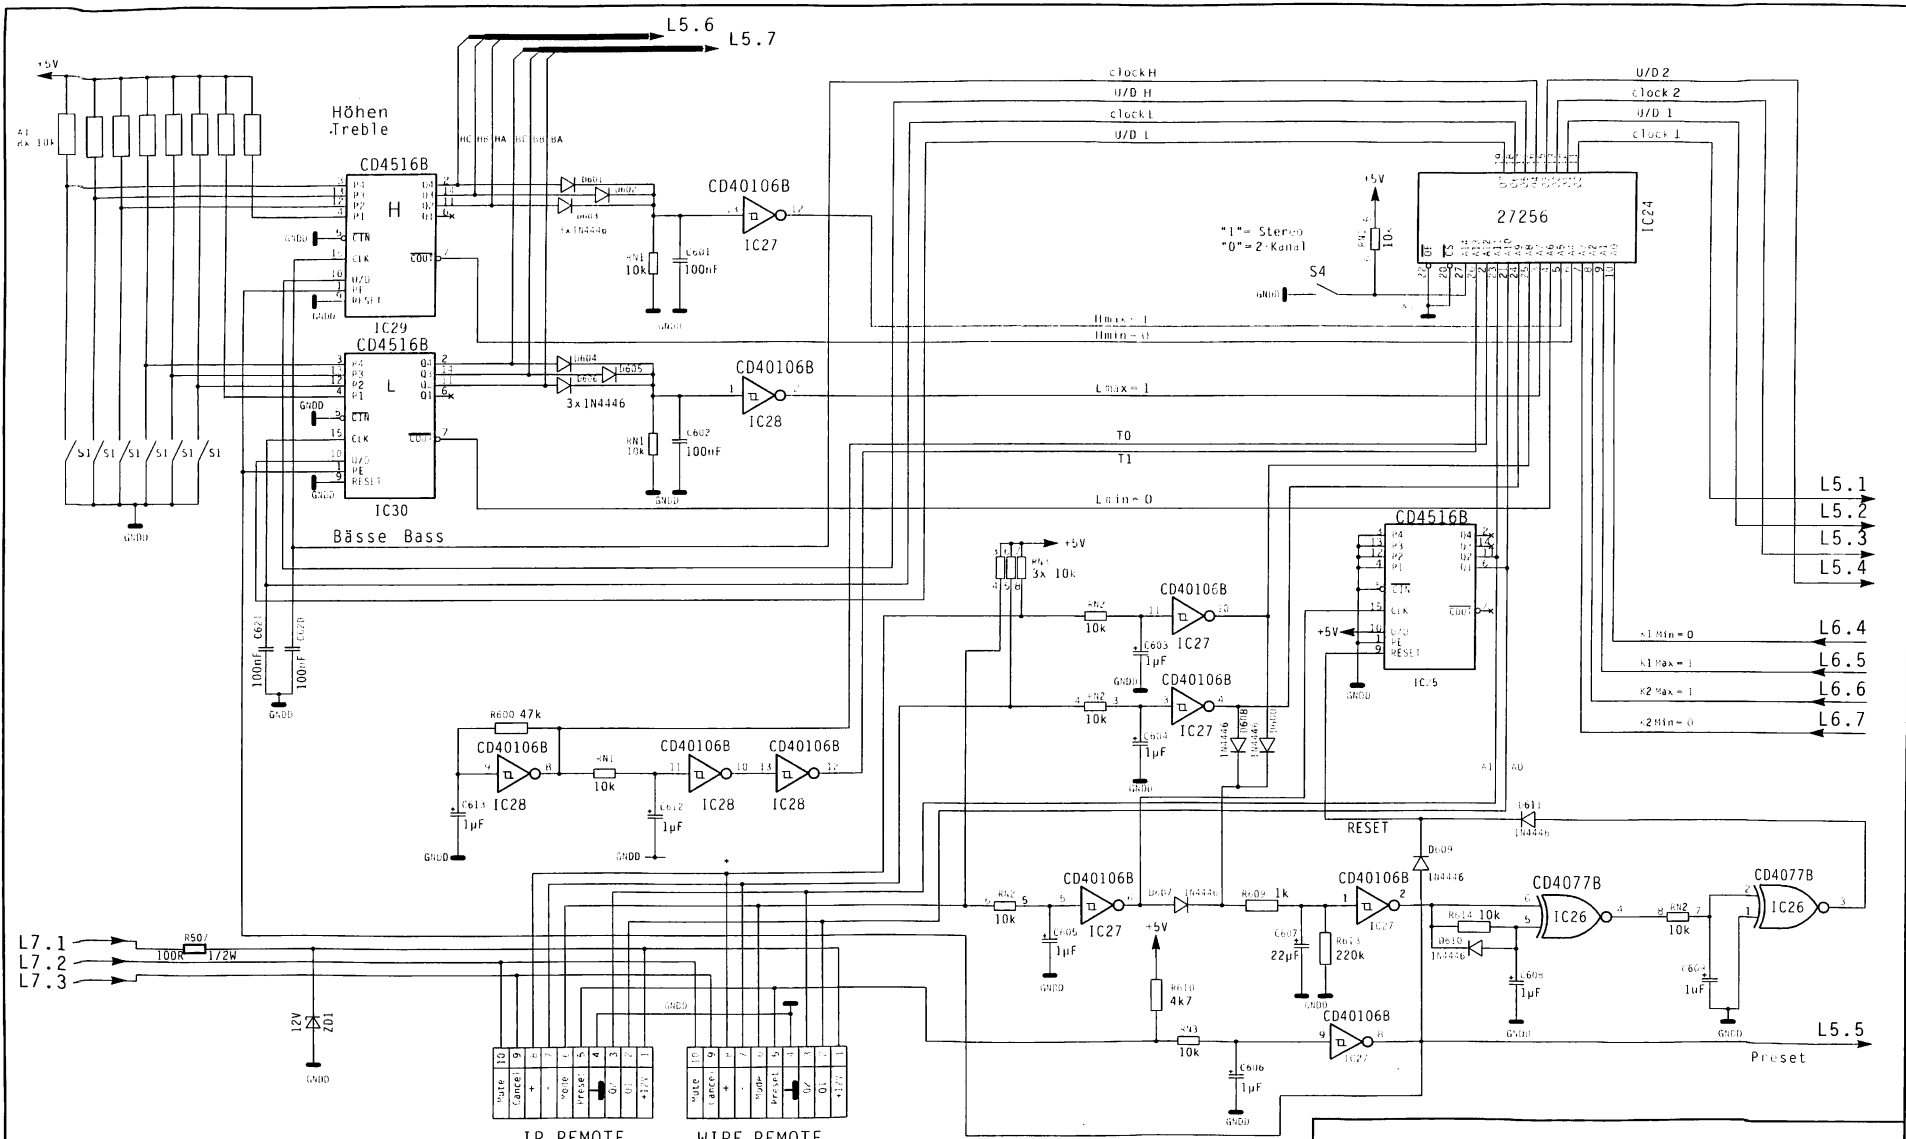

Schaltplan
Verstärker F91 - Digitalstufe Klang
 Wiring diagram
Amplifier F91 - Digital stage sound

13. Technical Data

	Amplifier I84	Amplifier F91
Power supply	110 - 240 Volts	110 - 240 Volts
Power consumption standby	146 Watts	146 Watts
Power consumption max.	205 Watts	540 Watts
Dimensiones: Height	102,0 cm	102,0 cm
Width	58,5 cm	58,5 cm
Depth	43,8 cm	43,8 cm
Weight	78,0 kg	83,0 kg
Power output	2x 60 Watts rms	2x 170 Watts rms

Index

Symbols

70V systems F91 39
70V systems I84 42

A

add credit cable 42
album play 17, 53
ALC automatic loudness control I84 21
amplifier F91 19, 28
amplifier I84 20, 40
amplifier load, max. 32, 41
amplifier type 7, 8
AVC automatic volume control F91 35

B

balance 19
basic unit 26, 55
basic values for volume 31
bass control F91 19
battery type for infrared remote control F91 20
battery type for infrared remote control I84 21
BCD switches, paternoster book 14
BGM adapter 28
BGM, back ground music 35, 48
BGM connector 72
BGM light emitting diode 48
BGM trim pots 35
bonus jumper system 26

button CANCEL, F91 16, 17
button CANCEL, I84 16, 21
button LT 13, 24, 44, 73
button MODE, F91 19
button MUTE 19, 21
button option 42
button OPTION, I84 21
button PRESET, F91 19
button R 16, 44, 54

C

cash box 7
cash box contets 55
CD-PRO, error codes 70
CD-PRO, function tests 67
CD-PRO, handling 69
CDs, cleaning 11
CDs, not playable 55
clipping 35
coin inputs, color codes 25
coin operation 15
coin output plugs 24
continuous play 18, 46
continuous play cable 42
control terminal, F91 20
control terminal I84 20
credit, existing 16

D

data retrieval 54
 date 45
 declaration of conformity 74
 digital display 9, 16, 29, 41, 44, 62
 digital display, CDM 12 player 69
 dimensions 102
 DIP-switches 31
 disabling of tracks 52
 display test 62

E

electrostatic discharges 4
 enabling of tracks 52
 EPROM-version 62
 exit the serviceprogram 13
 external speakers 36

F

free play 15
 function tests 62
 fuses, F91 29
 fuses, I84 40

G

GP, basic price 26
 gripper test 64
 ground insulator 72

H

handle bar 10
 happy hour 51
 HLL, HLR 65

I

Identification number 53
 illumination 29, 41
 impedance of speakers 32, 36, 37
 infrared indicator 4, 71
 infrared remote control F91 20
 infrared remote control I84 21
 inserting CDs 10

J

jukebox version number 7
 jumper BR 26
 jumper BS 15, 26
 jumper GP 15

K

keys, for jukebox 7

L

laser 4
 laser lens cleaning 11

latch bar 10
 least popular discs 54
 LED red, paternoster book 13
 LED volume 19
 LED yellow, BGM 35
 LED yellow, low level 30
 LED yellow, mute 30
 LED's clipping, F91 35
 LEDs, control mode 20
 LED's green, output F91 36
 light gates 65
 loading discs 10
 location number 53

M

machine label 28, 40
 magazines 10
 main fuse 28, 40
 mains voltage, check 7, 28, 40
 mechanical problems, steps to solve 73
 mechanism, continuous tests 63
 mechanism cycles, counter for 60
 mechanism faults, counter for 61
 mechanism faults, retrieval 59
 mechanism tests 62
 memory reset by power off 53
 mikrofone kit 72, 86
 mounting frame 8
 mute LED F91 30
 mute LED I84 41

N

next 68, 70
 Number of BGM CDs 48
 number of CDs in the magazines 10, 13
 number of plays, total 55
 number of tracks played from the same disc 52

O

operating time, total 61
 output transformer F91 36
 output transformer I84 42
 overload protection, F91 36

P

page limitation, adjustment of 14
 paternoster book 12
 player, cleaning 11
 playstimulator 18
 playstimulator, no function 47
 plug memory 54
 position of fuses und plug connectors 29
 power consumption, F91 28, 102
 power consumption, I84 40, 102
 power output 8, 28, 41, 102
 power switch 9

power up counter 61
pre-settings for bass and treble 31
previous 68
price settings 24
print-outs 56, 58
printer adapter 56
printer port settings 58
printer roller 56
procedure step codes 59, 64
program version SCC, how to display 62
programming number of CD's in magazines 13
programming of the jukebox 44
programming short view 43

R

random selections 46
RCA (Cynch) adapter 72
remove magazines 10
reset all counters 55
row BS 15, 26
row GP 15, 26

S

scratches, removal 11
Selection & Credit Computer 13
selection sledge 65, 73
selection sledge, home position 9, 73
serial number 7
service level 1 button 0 54
service level 1 button 1 54
service level 1 button 2 55
service level 1 button 2 + Reset 56
service level 1 button 3 55
service level 1 button 3 + Reset 55
service level 1 button 4 62
service level 1 button 5 13
service level 1 button 6 55
service level 1 button 8 53
service level 1 button 9 46, 53
service level 2 button 0 45
service level 2 button 1 45
service level 2 button 2 13, 45
service level 2 button 3 52
service level 2 button 4 52
service level 2 button 6 51
service level 2 button 7 51
service level 2 button 8 47
service level 3 button 7 48
service level 3 button 8 49
service level 3 buttons 0-6 50
service level 4 button 0 62
service level 4 button 1 63
service level 4 button 2 62
service level 4 button 3 63
service level 4 button 4 63
service level 4 button 7 65
service level 4 button 8 59
service level 4 button 9 63, 65
service level 5 button 0 68

service level 5 button 3 68
service level 5 button 5 68
service level 5 button 6 67
service level 5 button 9 68
service programs, how to call 44
set clock 45
set date 45
set year and weekday 45
shipping guards 7
slide switch „Stereo/2-Kanal“, I84 21
speaker terminals 8
speaker connection 8
speaker fuses, I84 41
start 67
start and stop time, playstimulator 46
start position for BGM 49
statistic print-outs 56
statistics 54
stop 68
switch 'service' 13, 44, 54, 62, 67
switches, volume internal speakers 37

T

table of weekdays 50
tape input, F91 36
test credit 15
time functions 45
top tunes 25, 54
track numbers, max. 16
track selection 16
treble control 19
two channel 34

U

unipack 24

V

version no. of the CD-PRO servo processor 69
VLC, VLL, VLR 65
volume 19, 20, 28, 35
volume switches, F91 37

W

wall mounting 8
weight 102
wrist wrap 4