

COIN SLOT AND BASE ADJUSTMENT SWITCHES

SWITCH 2	SWITCH 3	SWITCH 5	SWITCH 5
OFF	OFF		ON
	1 COIN, 1 PLAYER	2 BASES	3 BASES
	2 COINS, 1 PLAYER	4 BASES	6 BASES
	2 COINS, 2 PLAYERS	2 BASES EACH	3 BASES EACH
	4 COINS, 2 PLAYERS	4 BASES EACH	6 BASES EACH
ON	OFF		
	2 COINS, 1 PLAYER	2 BASES	3 BASES
	4 COINS, 1 PLAYER	4 BASES	6 BASES
	4 COINS, 2 PLAYERS	2 BASES EACH	3 BASES EACH
	8 COINS, 2 PLAYERS	4 BASES EACH	6 BASES EACH

LANGUAGE OPTION SWITCH

SWITCH 4

OFF - ENGLISH LANGUAGE

ON - FOREIGN LANGUAGE (Requires A082-91374-A000)

BONUS BASE ADJUSTMENT SWITCH

SWITCH 6

OFF - BONUS BASE AWARDED AFTER MISSION 5

ON - NO BONUS BASE AWARDED

COIN/FREE PLAY SWITCH

SWITCH 7

OFF - COIN PLAY

ON - FREE PLAY (Provided as Service Aid)

ATTRACTION SOUNDS OPTION SWITCH

SWITCH 8

OFF - GAME ATTRACTION SOUND OPERATE DURING GAME OVER

ON - GAME ATTRACTION SOUNDS DO NOT OPERATE DURING GAME OVER

NOTE: SWITCH #1 MUST BE SET OPPOSITE OF SWITCH #2