
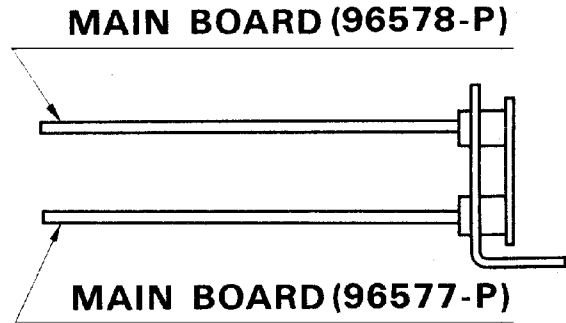


IC BOARD ADJUSTMENT INSTRUCTIONS

○ MAIN BOARD (96577-P)

VR1 : GAME TIME CONTROL

SW1:1 PLAY OR 2 PLAY SWITCH

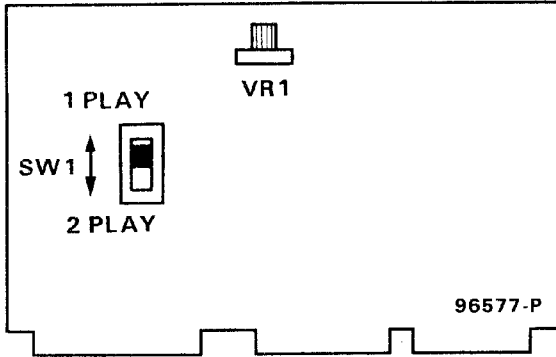

○ OSCILLATOR (96598-P)

VR 1 }
 VR 2 }
 VR 3 }
 VR 4 } FANFARE TONE
 VR 5 }
 VR 6 }
 VR 7 SLIP TONE

SW1 USE FOR FANFARE TONE ADJ.

STAND-BY { 1,2,3 → OFF
 4 → ON

SW 2

SWITCH	1	2	3	4
STEREO SOUND (COCKPIT MODEL)	OFF	OFF	NOT USE	
MONO SOUND (STAND. TABLE MODEL)	ON	ON	NOT USE	

