
CAUTIONS

- 1. Turn the power off before exchanging and removing the P.C.Board and connectors.
- 2. Do not touch IC, LSI and other electronic parts on P.C.Boards. Do not use a tester or the like on them.
- 3. P.C.Board to be stored or transported should be wrapped by a conductive pouch or aluminum foil.
- 4. P.C.Board should not be exposed direct to the sun.
- 5. When soldering, use soldering iron of which end is grounded.

OILING


Add oil to the following part of the control box when control lever is not smooth in operation.

(Use sillicon grease "SILICOLUBE G-31L".)

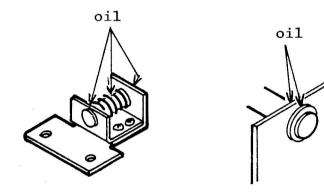


WIRING

(Control Box)

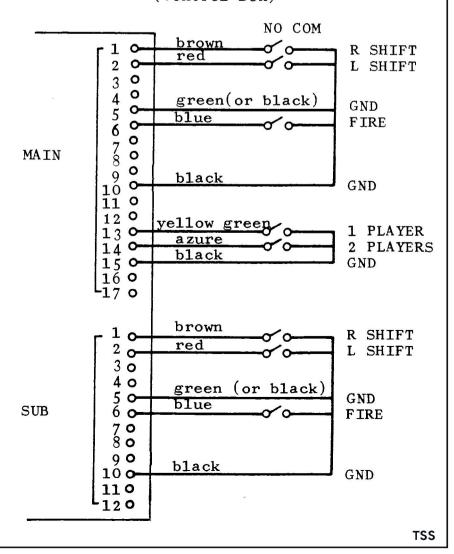

ADJUSTMENTS

1. Coinage, score level

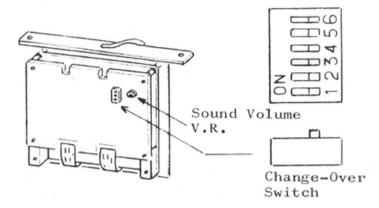

Operate change-over switch after disconnecting power.

	1	2	3	4	5	6
Score level for extra Rocket 30,000 points 50,000 points	OFF ON					
Docking instructions Japanese English		OFF ON				
Coinage 1 coin /1 play 2 coin /1 play 3 coin /1 play 4 coin /1 play			OFF ON OFF	OFF OFF ON		
Coin Charged Charged Play Free Play					OFF ON	OFF ON

2. Sound Volume

Sound volume can be adjusted by the variable resistor on the P.C.Board A. Turning the VR to the clockwise direction increases sound volume.

