



**Kurz-Kasch, Inc.**

Electronics Division  
 Box 1246 • 2271 Arbor Bl d.  
 Dayton, Ohio 45439  
 Telephone (513) 299-0990


# Operating Instructions

For Model

341A

CARNIVAL/HEAD ON II/INVINCO

GREMLIN/SEGA

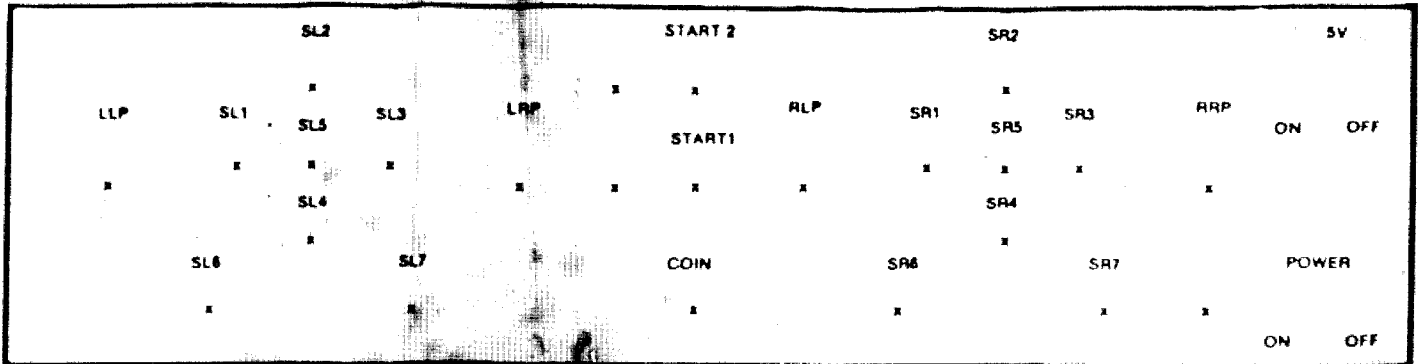

1. Insert 341A program card into TF-650 "A" connector, number side up.
2. Connect 4-pin connector on right hand side of 341A program card to header pins 15 thru 18 with connector slots facing away from game board.
3. Connect 10-pin connector on right hand side of 341A program card to header pins 1 thru 10.
4. Connect 10-pin connector on left hand side of 341A program card with 2 wires to header pins 19 thru 28.
5. Connect remaining 10-pin connector on left hand side of 341A program card to header pins 53 thru 62.
6. Slide 5 VOLT switch to ON.
7. Slide POWER switch to ON.
8. Slide switch on 341A program card to HO for HEAD ON II, and INV for INVINCO and CARNIVAL.
9. Push COIN switch to credit game.
10. Push START 1 for 1 player and START 2 for 2 player mode.
11. SR1 and SR3 are LEFT and RIGHT controls. SR5 is FIRE and SPEED control, depending on game select. SR2 and SR4 are UP and DOWN controls.
12. Connect logic probe to header pin 17 to check coin counter. Will go from high to low.