




Kurz-Kasch, Inc.

Electronics Division
Box 1246 • 2271 Arbor Blvd.
Dayton, Ohio 45439
Telephone (513) 299-0990

Operating Instructions

For Model 336AB--171C or 287C
MISSILE COMMAND/ATARI

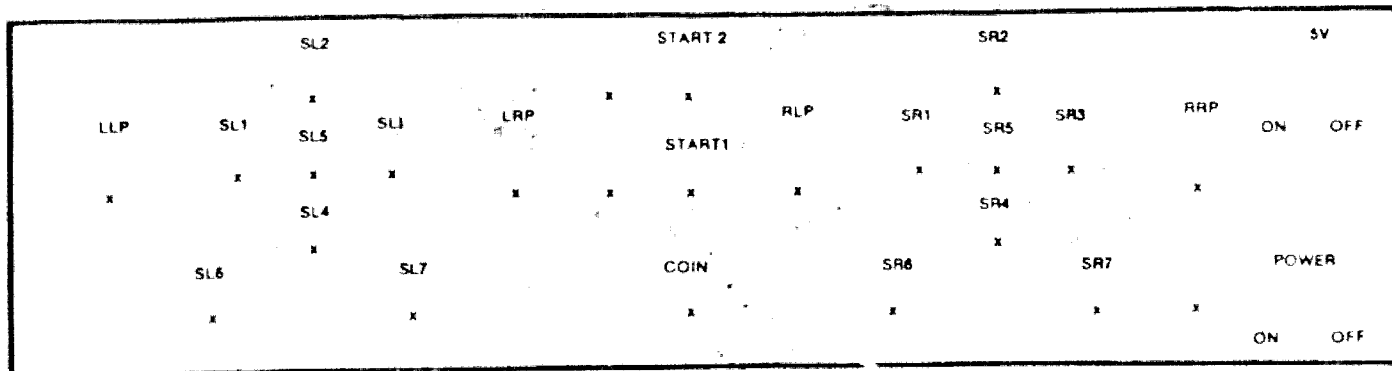

1. Insert program card 336B into program "B" connector on TF-650 with number side up.
2. Insert program card 336A into program "A" connector on TF-650 with number side up.
3. Insert 171C or 287C card into 25-pin connector on TF-650.
4. Insert GAME BOARD into 171C or 287C card connector. Connect cable connector from 336A card to game board for cocktail version.
5. Connect speaker to audio output RED & BLACK wires on 336A card, AUDIO 1 or AUDIO 2 selected by switch on 336A. Volume control is on 336A.
6. If upright version, move switch on 336A card to U, if cocktail version, move to C.
7. Push 5 VOLT switch to ON.
8. Push POWER switch to ON.
9. COIN is center COIN switch. LED 1 blinks on 336B card.
SL7 is right COIN switch. LED 2 blinks on 336B card.
10. START 1 is 1 Player Start.
START 2 is 2 Player Start.
11. SR6 is LEFT MISSILE FIRE
SR5 is CENTER MISSILE FIRE
SR7 is RIGHT MISSILE FIRE
12. SR1 and SR3 is MISSILE SIGHT LEFT & RIGHT
SR2 and SR4 is MISSILE SIGHT UP & DOWN.
13. TEST SWITCH is on 336A card.
14. SLAM SWITCH is SL6.