



Service Bulletin No. 51

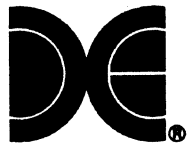

Data East Pinball, Inc.
1990 Janice Avenue
Melrose Park, IL 60160
Tel: 1-800-KICKERS or Fax: 708-345-0010

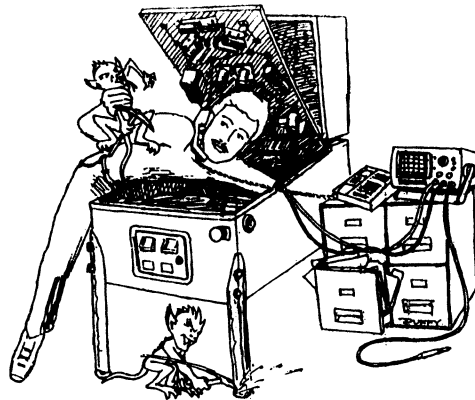

Technical Support

Joe Blackwell, Technical Support Manager
Eric Winston, Technical Support

TO: Service Managers

DATE: January 17, 1994

RE: **"Tales From The Crypt"**

Symptom: Printer interface is not functioning. Blank LED on CPU Board is flashing indicating that the CPU is trying to transmit data.

Problem: Dip switches on the Dot Matrix Controller Board are configured incorrectly.

Solution: (Dip switch bank 1)
Switch #2 - off - NSM printer (standard)
Switch #2 - on - IR printer (infra red)

* All other switches should be off.

Note: If blank LED goes off for approximately two (2) seconds then comes on and stays on. This indicates either no printer is installed or it does not recognize the printer.